


## SECTION 4.0

### **PASTA COOKER AND RETHERMALIZER DIGITAL CONTROLLER PROGRAMMING INSTRUCTIONS**

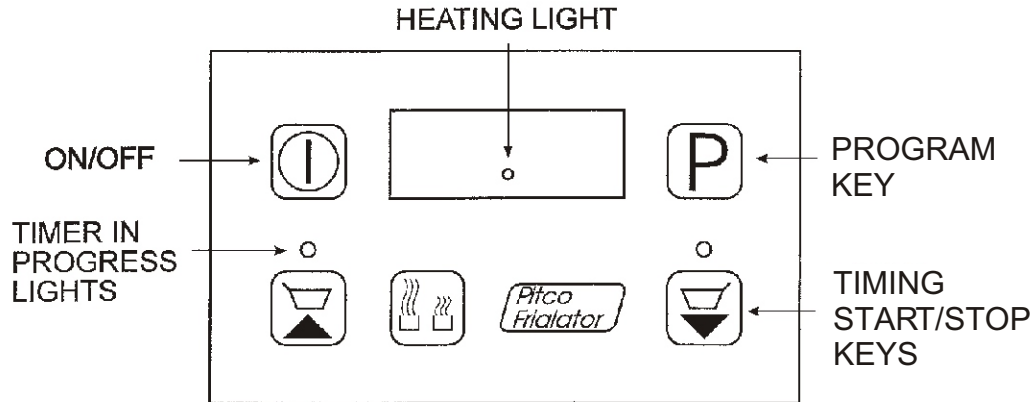

### CONTROLLER FUNCTIONS
















- ON \* Press to turn controller ON
- OFF \* Press and hold for 3 seconds to turn controller OFF
- L BASKET/ TIMER\* Press to start LEFT timer/basket lift
- R BASKET/ TIMER\* Press to start RIGHT timer/basket lift
- BOIL SIMMER \* Press , Display will show "**BOIL** or **SIM**" Note: Simmer mode runs at 190 F
- \* Press until display shows desired selection
- PROGRAMMING \* Press for programming mode

#### TIMER PROGRAMMING INSTRUCTIONS

##### ENTERING LEVEL 1 PROGRAMMING

- PASSWORD \* Press , Display will show "**LOC** or **Pr09**" (Program)
- \* If display shows "**LOC**" Press then , This will unlock the programming function and allow changes to be made to settings
- \* Press , Display will show "**Pr09**" (Program) the indicator lights above both and functions key will illuminate.
- TIMER SET \* Press or , Display will show "**XX**" (XX = current timer setting) Indicator above or function key will illuminate to indicate which (left or right) timer is being programmed
- \* Press the or function keys to change set time
- \* Press to save new timer setting
- \* Press to exit programming

## UPPER LEVEL PROGRAMMING INSTRUCTIONS

PROGRAMMING	*	Press  , Display will show " <b>LOC or Pr09</b> " (Program)
PASSWORD	*	<b>If display shows "LOC"</b> Press   then   , This will unlock the programming function and allow changes to be made to settings
SIMMER MODE TEMP	*	Press  , Display will show " <b>Pr09</b> " (Program) the indicator lights above both  and  functions key will illuminate.
SIMMER MODE TEMP	*	Press and hold  for 2 seconds, display will show " <b>XXXXF</b> " you are now in SIMMER MODE TEMPERATURE PROGRAMMING (XXXXF = current set temperature for the simmer mode)
SAVE / EXIT	*	<b><u>NOTE:</u> Press and hold  to save setting or exit at any time in the programming sequence.</b>
	*	Press the  or  function keys to change set temperature
ACTUAL TEMP DISPLAY	T 1, T0 *	Press  , Display will show " <b>T 1 or T 0</b> " (T 1 = actual temperature always appearing display window, T 0 = SIM or BOIL will always appear in display window when controller is operation mode)
PASSWORD SET	ULOC * LOC	Press  , Display will show " <b>LOC or ULOC</b> " (LOC = turns pass word function <b>ON</b> so that a pass word is required to enter programming mode, <b>ULOC</b> = turns pass word requirement <b>OFF</b> )
BASKET LIFT	LIF1 *	Press  , Display will show " <b>LIF1 or LIF2</b> " (LIF1 = tells the controller that cooker has only a single basket lift, LIF2 = tells the controller cooker has two basket lifts)

### TO SAVE SETTINGS OR EXIT PROGRAMMING

- \* **NOTE: Press and hold  to save setting or exit at any time in the programming sequence.**

_ . _ _ F	Indicates controller is under temperature set point and burners are on
_ . _ _ F	Indicator light, when illuminated, indicates burners are on
Boil	Indicates unit is in boil mode
SIM	Indicates unit is in simmer mode