Kajeet SmartSpot® 975

Quick Start Guide



The Kajeet SmartSpot® is a portable Wi-Fi hotspot that extends the school day by providing the fastest, filtered broadband access anywhere.



POWER SWITCH: Powers the Kajeet SmartSpot on.

LOCK BUTTON: Locks/unlocks the screen and wakes the device from sleep mode.

COLOR TOUCH SCREEN: Provides connection and battery status, network signal strength, and the number of connected users. Used to navigate through device menus.

SIM CARD SLOT: The Kajeet SmartSpot SIM card is inserted here.

WI-FI INFO: Use this Wi-Fi info to connect the SmartSpot to your device.

SMARTSPOT CHARGING PORT: The AC charger supplied with your SmartSpot connects here



Accessing

Your Kajeet SmartSpot Wi-Fi Name & Password

To access your Wi-Fi name and password follow the steps below:

- 1. Make sure the Kajeet SmartSpot is turned on.
- 2. If the screen is dark, press the lock button once to wake the screen from sleep mode. Press and hold the lock icon on the screen to unlock your device.
- 3. Your Wi-Fi name and password will be shown towards the top of the SmartSpot screen. Please refer to diagram on other side of card. You will see it on the screen as:

Main Wi-Fi: USCC-MF975U-####

Password: ##########

Connect

To Your Kajeet SmartSpot

Once you have located your Kajeet SmartSpot Wi-Fi name and password, you can now connect to the Internet with these simple instructions:

- 1. Make sure the Kajeet SmartSpot is turned on.
- On your computer, tablet, mobile phone, or other Wi-Fi enabled device, select the Kajeet SmartSpot Wi-Fi name (ex. USCC-MF975U-####) from the list of available wireless networks.
- 3. When prompted, type your Wi-Fi password and click OK.
- 4. Your device is now connected to the Internet.

To view your device's status and data usage, visit kajeet.com/status.

For support with your device please contact your school or district technology department.