



Enabling and Using Contractor Mode

Bluetooth REALTOR® lockboxes have the ability to enable/disable Contractor Mode. These codes would be used for individuals (i.e. painter, contractors working on the property) that will need access to a property longer than one day. Contractor Mode must be enabled for the individual to enter the lockbox.

How to Enable/Disable Contractor Mode:

Lockbox Keypad:

1. Insert your SentiCard into your lockbox. Wait until CODE light displays then enter your PIN number and ENT
2. Enter FUNC + 6 + 1 + ENT to enable or FUNC + 6 + 0 + ENT to disable
3. Remove your SentiCard from the lockbox

SentriSmart App:

1. Select Lockbox Tools in the SentriSmart Mobile App
2. Press the ENT button on the lockbox keypad to 'wake' it up
3. Choose the lockbox serial number in the list
4. Select Enable Contractor Mode
5. Enter your PIN and press OK
6. Tap OK on the pop-up screen to complete

Using Contractor Code:

1. Press ENT repeatedly until the keypad lights up the lockbox beeps
2. Input the Contractor Code (found in SentriSmart Mobile App settings or on the SentriLock website)
3. Press ENT and the key compartment will open