

Start Here.

Tectonic PL-11NR speakers look very different from traditional speakers, but they're passive, one-way devices and get wired-up, processed and amplified just like any other comparable speaker system.

Before you fire up your new Tectonic speaker system, please review this quick checklist:

- PL-11NRs** come with **Neutrik NL4** connectors. Only pins 1+ and 1- are utilized.

- Ensure **DML** wiring is to **Pin 1+ / 1-** connections of the Neutrik connector.

- Check for correct **POLARITY** throughout.

- Processor settings** (*correct DSP filter files are available from Tectonic*):
 - **DML** pass-band ~**100Hz - 16kHz**
 - **Parametric EQ - On**
 - **Protection Limiter - ON**

- DML** amplifier power **400W** 8Ω

(Speaker cable wiring guide on other side.)