



# Replacement Battery Installation Instructions

1. Loosen the battery screws using a 6 lobe T15 driver and remove the battery from the node.
2. Position the new battery on the node. Align the 6 pin connector and mounting screws of the battery to match the corresponding locations on the sensor node. (Do not remove the foam gasket and force fit the battery to the connector pins as you may damage the node)
3. Insert all three battery mounting screws by turning clockwise until identifiably connected.
4. Use a 6 lobe T15 driver to tighten battery screws up to, but not exceeding the torque value of 2.5 in. lbs.
5. Recycle the depleted battery per your facility guidelines.

**For technical questions call 1-800-280-9517  
and select Option 3 for Technical Support  
when prompted**

**Grace Engineered Products Inc.** • 1515 E. Kimberly Rd • Davenport, IA  
**Phone:** 1-800-280-9517 • **Fax:** (563) 386- 9639