



Replacement Battery Installation Instructions

1. Loosen the battery screws using a 6-lobe T15 driver and remove the battery from the node.
2. Position the new battery on the node. Align the 6-pin connector and mounting screws of the battery to match the corresponding locations on the sensor node.
3. Insert all three battery mounting screws by turning clockwise until threads start to engage.
4. Use a 6-lobe T15 driver to tighten battery screws up to, but not exceeding the torque value of 2.5 in. lbs.
5. Recycle the depleted battery per your facility guidelines.

**For technical questions call 1-800-280-9517
and select Option 3 for Technical Support
when prompted**

Grace Technologies, Inc. • 1515 E. Kimberly Rd • Davenport, IA
Phone: 1-800-280-9517 • Fax: (563) 386- 9639

GS-RB-IG-EN 1904



Replacement Battery Installation Instructions

1. Loosen the battery screws using a 6-lobe T15 driver and remove the battery from the node.
2. Position the new battery on the node. Align the 6-pin connector and mounting screws of the battery to match the corresponding locations on the sensor node.
3. Insert all three battery mounting screws by turning clockwise until threads start to engage.
4. Use a 6-lobe T15 driver to tighten battery screws up to, but not exceeding the torque value of 2.5 in. lbs.
5. Recycle the depleted battery per your facility guidelines.

**For technical questions call 1-800-280-9517
and select Option 3 for Technical Support
when prompted**

Grace Technologies, Inc. • 1515 E. Kimberly Rd • Davenport, IA
Phone: 1-800-280-9517 • Fax: (563) 386- 9639

GS-RB-IG-EN 1904



Replacement Battery Installation Instructions

1. Loosen the battery screws using a 6-lobe T15 driver and remove the battery from the node.
2. Position the new battery on the node. Align the 6-pin connector and mounting screws of the battery to match the corresponding locations on the sensor node.
3. Insert all three battery mounting screws by turning clockwise until threads start to engage.
4. Use a 6-lobe T15 driver to tighten battery screws up to, but not exceeding the torque value of 2.5 in. lbs.
5. Recycle the depleted battery per your facility guidelines.

**For technical questions call 1-800-280-9517
and select Option 3 for Technical Support
when prompted**

Grace Technologies, Inc. • 1515 E. Kimberly Rd • Davenport, IA
Phone: 1-800-280-9517 • Fax: (563) 386- 9639

GS-RB-IG-EN 1904



Replacement Battery Installation Instructions

1. Loosen the battery screws using a 6-lobe T15 driver and remove the battery from the node.
2. Position the new battery on the node. Align the 6-pin connector and mounting screws of the battery to match the corresponding locations on the sensor node.
3. Insert all three battery mounting screws by turning clockwise until threads start to engage.
4. Use a 6-lobe T15 driver to tighten battery screws up to, but not exceeding the torque value of 2.5 in. lbs.
5. Recycle the depleted battery per your facility guidelines.

**For technical questions call 1-800-280-9517
and select Option 3 for Technical Support
when prompted**

Grace Technologies, Inc. • 1515 E. Kimberly Rd • Davenport, IA
Phone: 1-800-280-9517 • Fax: (563) 386- 9639

GS-RB-IG-EN 1904