

REASONS YOUR PRESSURE WASHER MIGHT BE

LOSING PRESSURE

A CHECKLIST

A WORN NOZZLE
BELT SLIPPAGE
INLET PLUMBING AIR LEAKAGE
ISSUE WITH THE RELIEF VALVE
CLOGGED OR IMPROPERLY- SIZED INLET SUCTION STRAINER
INADEQUATE FLUID FILTRATION
FOULED OR DIRTY INLET DISCHARGE VALVES
WORN INLET, BLOCKED DISCHARGE VALVE, OR LEAKY DISCHARGE HOSE
RESTRICTED INLET OR AIR ENTERING PUMP

