



# Quick Start Guide



## Data Television Adapter (DTA)





### Data Television Adapter (DTA)



- 1** Remove the coax cable connected to the TV and connect to the new digital box on the "Cable In" port. 
- 2** **COAX CABLE:** Connect the coax cable provided in the box from the "To TV" cable port on the back of the modem to the coax cable port on the back of your TV. 
- 3** **HDMI CABLE INSTRUCTIONS:** Connect the HDMI cable provided in the box from the HDMI cable port on the back of the modem to the HDMI cable port on the back of your TV. 
- 4** Plug the AC adapter provided in the box to the AC power outlet. Then, connect it to the digital box in the "+5V DC In" outlet. 

*The device must use the power supply that comes with it to work properly. Other power supplies will not work. Although they may allow the device to power on, service will be impaired and optimal performance cannot be guaranteed.*


Contact our technical support team **24/7 at 888.659.6009** for any additional questions or concerns you may have.



### Data Television Adapter (DTA)



### Remote Pairing Instructions

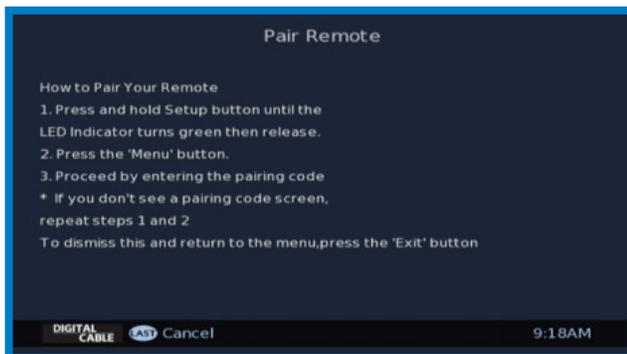

Pairing your DTA remote to a DTA box means the two pieces of equipment are linked and will only work with each other. The benefit of doing this is to allow the remote control to be pointed in any direction and the DTA box will still get the signal you select by pressing the button. However, if you do not choose to pair your DTA remote to your DTA box, the remote control will still work, but you will simply be required to point it directly at the DTA box for it to receive the signal.

- 1 Press and hold Setup button until the LED Indicator turns green, then release.
- 2 Press the "Menu" button.
- 3 Proceed by entering the pairing code.

If you don't see a pairing code screen, repeat steps 1 and 2.

To dismiss this and return to the menu, press the "Exit" button.

### Remote Programming Instructions

If you wish to program your remote to control TV functions like TV input, volume and mute, [click here for remote programming instructions.](#)



### Data Television Adapter (DTA)



LED Light

### LED Blink Patterns

#### LED Behavior

Red Green Red Green



Green Green Red



Green Green Green



Solid Green



Blinking Green Light



#### HD uDTA Status

Device is looking for signal  
The HD uDTA is in Hunt Mode

Device in Pending Initialization  
Mode (has QAM lock, acquired  
CAT and waiting for an activation)

Device in Code Download Mode  
(code download pending)

Device is in normal operations,  
decoding video

Device in Trouble Mode

#### Troubleshoot


Check RF connections

Check device ID,  
send refresh

Wait for device to  
complete download

No action required

Power cycle & check  
connections to verify  
device is not working

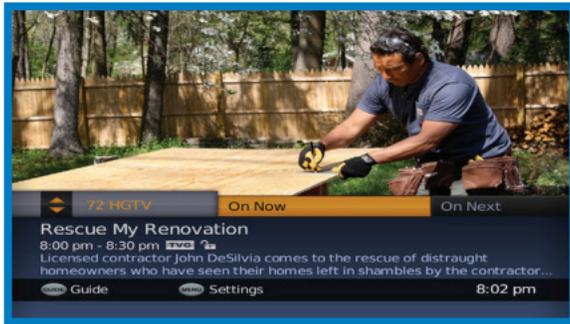

### On Now/On Next Banner

The On Now/On Next Banner appears automatically when you change channels and gives you instant access to what's currently playing on a particular channel. From here, discover the next program coming up, find what's airing on other channels, or dive into an expanded programming schedule by moving onto the TV Listings Grid.



### TV Listings Grid

There are 3 ways to enter the TV Listings Grid:

- Press GUIDE
- Press INFO from the On Now/On Next Banner
- Press LAST from the Program Information Screen



### Info Screen

Press the **Info** button 3 times on the remote while watching TV to access the full Info Screen.

Press the **Exit** to return to live TV.

Press the **Menu** button on your remote control to access the main menu and update your HD Digital Adapter settings. Press the arrow buttons to navigate the menu. Press **Exit** at anytime to return to live TV.

### Parental Controls




### TV Ratings



### HDMI Setup



### Closed Captioning

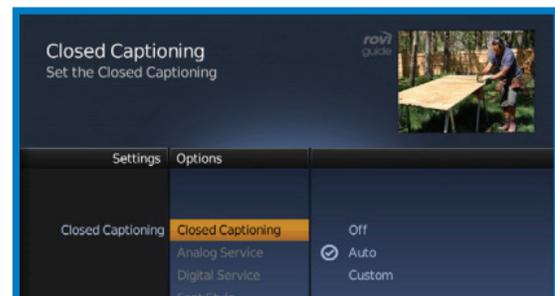

#### Setting up your PIN

Press Menu on your remote, select Parental Control and press OK for initial PIN setup.

#### Lock Channels

Press Menu on your remote, select Parental Control and use the Right and Up/Down arrows to select Channels. Use the OK button to lock/unlock each desired channel.

#### Lock by Rating

Press Menu on your remote, select Parental Control and use the Right and Up/Down arrows to select Movie Ratings or TV Ratings. Use the OK button to lock/unlock each desired rating.

#### Hide Titles

Press Menu on your remote, select Parental Control and use the Right and Up/Down arrows to select Hide Titles. Use the OK button to hide Adult or Adult and TV-MA.

#### Language Options

Press Menu on your remote, select General Setup and select Language. Use the OK button to select desired language (if available).

#### HDMI Inputs

Press Menu on your remote, select HDMI Setup, press Right to select a new display setting. Press Exit to return to watching TV.

#### Closed Captioning

Press Menu on your remote, highlight Closed Captioning and press Right 2x to make your selection.

# TV Everywhere

**Enjoy Your Favorite Shows on Any Screen — Anytime!  
Laptop. PC. Tablet. Smartphone.**

Now you can stream your favorite shows and movies on your devices no matter where you are — all you need is an internet connection. Visit [rittercommunications.com/TVEverywhere](http://rittercommunications.com/TVEverywhere) to see all the online content and popular channels you can now enjoy from anywhere!\*

\* Must be a Ritter TV customer to access TV Everywhere.  
Available channels are based on customer's current TV package.  
See User Guide located on  
[rittercommunications.com/TVEverywhere](http://rittercommunications.com/TVEverywhere)  
for instructions on how to sign up.

\*TV service must be purchased with internet.



**Right by You™**

888.336.4466  
[rittercommunications.com](http://rittercommunications.com)

 **Ritter**  
COMMUNICATIONS™