 



# PROGRAM YOUR REMOTE CONTROL

*This remote control is already pre-programmed to control your Set Top Box (STB). The instructions below will program this remote to control your TV.*

1. Manually turn ON the TV that you want to setup on the remote
2. Press and Hold  until the TV key blinks twice
3. Press and release the TV key. The TV key will stay lit.
4. Find your TV and brand from the chart below and note the DIGIT key assigned to your brand. Press and hold down the DIGIT key for your device/brand while pointing the remote to the device.
5. Let go of the key when your device turns OFF. Setup for that device is complete.

To program this remote control to your other devices , see the instructions below the table.



## TV

DIGIT	BRAND
1	Insignia
2	LG
3	Panasonic
4	Philips/Magnavox
5	Samsung
6	Sanyo
7	Sharp
8	Sony
9	Vizio
0	Westinghouse

## DVD/VCR

DIGIT	BRAND
1	Insignia
2	LG
3	Panasonic
4	Philips, Magnavox
5	RCA
6	Samsung
7	Sharp
8	Sony
9	Toshiba
0	VIZIO


 



## Audio

DIGIT	BRAND
1	Bose
2	Denon
3	LG
4	Onkyo
5	Panasonic
6	Philips
7	Pioneer
8	Samsung
9	Sony
0	Yamaha

\*If your model of device is not on this list, please call \_\_\_\_\_ for a list of additional device codes.

## Unlocking the Default Setting to Make AUD, DVD, and VCR Buttons Programmable

The AUD, DVD and VCR mode keys have a default setting which means they are automatically set to the STB. If you would like to program these mode keys to your devices, please follow the instructions below to lock the default setting.

1. Press and Hold  until the mode key blinks twice.
2. Type   .
3. Then press the mode key  you desire to program twice.
4. This will remove the STB mode and a new Audio, DVD or VCR code can now be programmed.
5. Follow steps 1 through 5 on the first page of this brochure replacing the word "TV" with the name of the mode key you just unlocked.