


Programming guide


Control Panel and menu

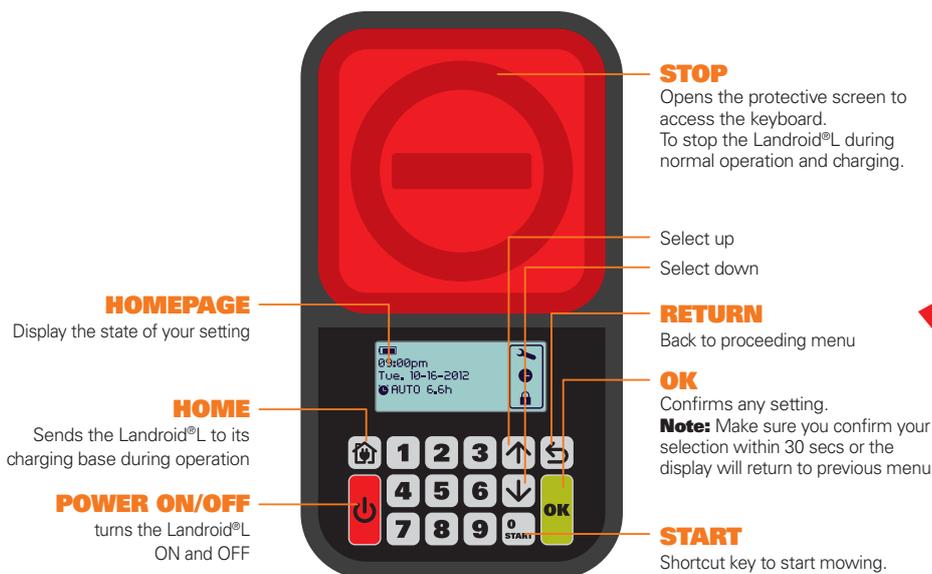

Always close the keypad window after programming. Your Landroid®L will not move with it open.



Menu overview

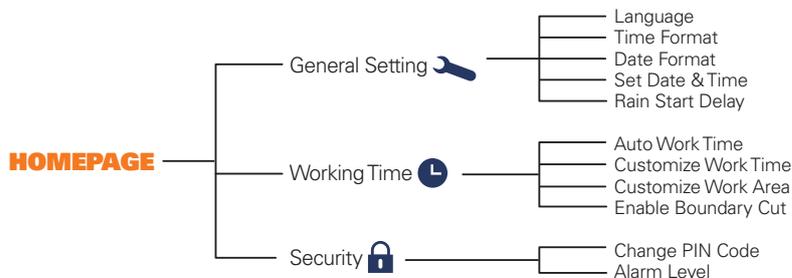

Programming

After you have successfully installed the Landroid®L, it is now ready to be programmed according to your schedule. To program your Landroid®L, simply follow the step by step guide below.

Start

To quick start your Landroid®L, first Open the keypad window by pressing the large red button , then Press ON/OFF button , input the default PIN 0000, and Press  to start and close the keypad window. Press  and close the keypad window, this will send Landroid®L back to the charging station and mow the lawn near the boundary wire. The Landroid®L will work continuously until it is out of battery and then it will return to the charging base. Once charging is complete, the Landroid®L will automatically resume mowing or if it has finished mowing it will stay in the charging base. The factory default setting is 1500m² (refer to the Auto Mowing Time Schedule), if the time is not in the schedule, press  to start and close the keypad window. If you want to change the working time and other settings, please follow the steps below:

Setting

Press **OK** to enter the submenu. Use the   keys to select General setting, Working time or Security. Then press **OK**.

1. General setting ()

General setting Language Time format Date format Set date & time	Language Italiano English Deutsch Danish
Time format 12am 12pm 24hour	Date format MM-DD-YYYY DD-MM-YYYY YYYY-MM-DD
Set date & time Date: 02-10-2012 DD-MM-YYYY Time: 20:37 24h	Rain start delay 180 min

Language, Time format, Date format, Set date & time and Rain Start Delay can be set in this menu, using the   keys to select then press **OK**.

Press  to go back to the previous menu.

Note: Set date and Set time are two compulsory setting items. If you don't set these two items, it will influence the Schedule time in the following setting.

1.1 Language

Select the appropriate language by using the   keys, then press **OK**.

1.2 Time format

Select 12 am 12 pm or 24 hour by using the   keys, then press **OK**.

1.3 Date format

Select MM-DD-YYYY, DD-MM-YYYY or YYYY-MM-DD by using   keys, then press **OK**.

1.4 Set date & time

Press **OK** first, when the number blinking, press the number directly or use the   keys to input the actual date or time, then press **OK** to confirm.

Note: Only when the number is blinking you can set the date.

1.5 Rain Start Delay

Press **OK** first, when the number blinking, input the number of minutes from 0-180min. When it rains, the Landroid®L will return to the charging base to wait for the rain sensors to dry. When dry, the Landroid®L CPU will automatically begin the delay start countdown and then return to mowing. If the delay time is set as 0, Landroid®L will continue mowing.

2. Working time (L)

Working time

Auto work time
 Customize work time
 Customize work area
 Enable boundary cut

Auto work time

100 m² 120 yd²
 200 m² 240 yd²
 300 m² 360 yd²

Need total h: 6h

Auto work time

1300 m² 1550 yd²
 1400 m² 1650 yd²
 1500 m² 1800 yd²

Need total h: 28h

Start time Hours

Mon 07:00 ~ 5.6h
 Tue 07:00 ~ 5.6h
 Wen 07:00 ~ 5.6h


Start time Hours

Fri 09:00 ~ 5.0h
 Sat 00:00 ~ 0.0h
 Sun 00:00 ~ 0.0h

09:00pm
 Wed, 6-8-2012
 M T W T F S S
 7:00am ~ 12:00am

Working time adjust

 -10%




Working time

Auto work time
 Customize work time
 Customize work area
 Enable boundary cut

Num. work area 1

Num. work area 4


Area1: 1 m %work: 10%
 Area2: 1 m %work: 10%
 Area3: 1 m %work: 10%
 Area4: 1 m %work: 10%

Num. work area 4

Area1: 1 m %work: 25%
 Area2: 1 m %work: 10%
 Area3: 1 m %work: 10%
 Area4: 1 m %work: 10%

Num. work area 4

Area1: 1 m %work: 10%
 Area2: 20 m %work: 30%
 Area3: 50 m %work: 40%
 Area4: 70 m %work: 20%

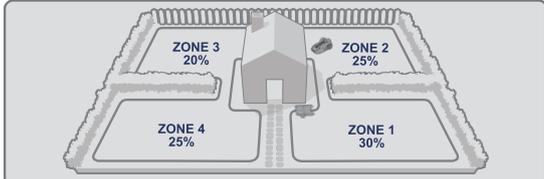

Working time

Auto work time
 Customize work time
 Customize work area
 Enable boundary cut

Activate border cut

No **Yes**

Auto work time, Customize work time, Customize work Area can be set in this menu, use the **↑** **↓** keys to select then press **OK**.

You can close the keypad window to start your Landroid[®]L when Customize work time programming or Auto work time programming is complete. If the time is not in the schedule, press **START** to start.

2.1 Auto work time

Use the **↑** **↓** keys to select the lawn area. The working time will be automatically set according to the size of your garden. Then press **OK**.

Note: The Landroid[®]L can mow an area to 1500m². Auto work time will display on the bottom of the display. A " " will appear in front of the option you selected.

You could find more details about default work time of Landroid[®]L in following table:

Landroid[®]L WG792E - Auto mowing time schedule.

Area m ²	Auto mowing runtime - hours	Monday mowing hours	Tuesday mowing hours	Wednesday mowing hours	Thursday mowing hours	Friday mowing hours	Saturday mowing hours	Sunday mowing hours
100	3	7:00-8:30	/	/	7:00-8:30	/	/	/
200	5	7:00-8:00	7:00-8:00	7:00-8:00	7:00-8:00	7:00-8:00	/	/
300	6	7:00-8:12	7:00-8:12	7:00-8:12	7:00-8:12	7:00-8:12	/	/
400	7.5	7:00-8:30	7:00-8:30	7:00-8:30	7:00-8:30	7:00-8:30	/	/
500	10	7:00-9:00	7:00-9:00	7:00-9:00	7:00-9:00	7:00-9:00	/	/
600	11	7:00-9:12	7:00-9:12	7:00-9:12	7:00-9:12	7:00-9:12	/	/
700	13	7:00-9:36	7:00-9:36	7:00-9:36	7:00-9:36	7:00-9:36	/	/
800	15	7:00-10:00	7:00-10:00	7:00-10:00	7:00-10:00	7:00-10:00	/	/
900	16.5	7:00-10:18	7:00-10:18	7:00-10:18	7:00-10:18	7:00-10:18	/	/
1000	18	7:00-10:36	7:00-10:36	7:00-10:36	7:00-10:36	7:00-10:36	/	/
1100	20	7:00-11:00	7:00-11:00	7:00-11:00	7:00-11:00	7:00-11:00	/	/
1200	22.5	7:00-11:30	7:00-11:30	7:00-11:30	7:00-11:30	7:00-11:30	/	/
1300	25	7:00-12:00	7:00-12:00	7:00-12:00	7:00-12:00	7:00-12:00	/	/
1400	26.5	7:00-12:18	7:00-12:18	7:00-12:18	7:00-12:18	7:00-12:18	/	/
1500	28	7:00-12:48	7:00-12:48	7:00-12:48	7:00-12:48	7:00-12:48	/	/

2.2 Customize work time

You can set schedule time from Monday to Sunday.

Press **OK** first, when the number is blinking, input the start time and hours you want your Landroid[®]L mow on a particular day.

If you do not want the Landroid[®]L to mow on a particular day simply confirm the hours 0.0h.

Working time adjust

If you are still not satisfied with the time you set, there's a shortcut to adjust the working time.

When the Landroid[®]L is in standby mode, use the **↑** **↓** keys to adjust the working time. The overall working time will be adjusted in increments of 10% of the overall working time.

2.3 Customize work area

Customize work area setting is suitable for users who have several areas(max 4 areas) connected with narrow paths, as shown in the Figure. Customize work area setting will send Landroid[®]L work in each area with an appropriate time and the lawn can get a perfect cutting.

Press **OK** first, then input the number of zone.

Programmed to mow in 4 different connected zones. Each zone can be set by determining the distance along the boundary wire from the charging station.

Remove Landroid[®]L from the charging station and position it one metre from the charging station, then press the home button. **NOTE:** Zone 1 is the area near the charging station.

The Landroid[®]L will move along the boundary line, when it moves into the next required mowing area (Zone 2).

Press the STOP button and press the **2** button to confirm the distance. Make a note of the distance along the boundary wire for zone 2, zone 3 and zone 4. Re-enter the setting interface of Customize work area, and input the recorded distance.

Note: The distance of Area1 is always 1 meter.

You may delegate the overall working time of the Landroid[®]L according to the size of each zone mowing area.

First press the **OK** button, the area number will begin to flash. Then input the working time ratio(%) of each area.

Press the **OK** button to confirm.

Note: The total % work time ration should add up to 100%

Note: In order to successfully confirm the mowing times and areas your selections must be flashing.

2.4 Enable boundary cut

Select **↑** **↓** to enter the Enable boundary cut

Select **YES** to activate border cut.

If Enable boundary cut function is set up, the Landroid[®]L will mow the grass near the boundary wire once a week randomly.

If you don't want to activate border cut, just select **NO**.

3. Security (L)

Security

Change PIN code
 Alarm level

Change PIN

Old PIN: * * * *

Change PIN

New PIN: _ _ _ _
 Repeat New PIN: _ _ _ _

PIN code changing success

Alarm level

High
 Low

3.1 Change PIN code

Using the **↑** **↓** keys to select then press **OK**.

Type the Old PIN (default PIN 0000), then press **OK**.

Then type your New PIN and repeat it.

3.2 Alarm level

Use the **↑** **↓** keys to select the alarm volume setting.

High = loud setting (60-70dB)

Low = quiet setting (40-50dB)

NOTE: If you would like to turn the Landroid[®]L OFF in the middle of setting, then you must first press **STOP** then press the **OFF** key. If you input the wrong PIN code, the Landroid[®]L will be turned off automatically. Press **ON** key to On, input the correct PIN code, then the landroid will turn on again.

WARNING: If you decide to change the PIN code, be aware there's no way to restore the Landroid[®]L if you forget the PIN code. Please write your PIN code here and store this sheet in a safe place for future reference. Even better, register your Landroid[®]L online and enter your PIN code there. You will always be able to find your PIN online at www.worxlandroid.com.

If you type your PIN wrongly, Wrong PIN code is displayed. Turn your Landroid[®]L off and on by pressing **OFF**. The large red access STOP button can also be used as an emergency stop. To re-start the Landroid[®]L, close the keypad window.

Your PIN code

Function messages

Mowing	Cutting grass according to the program set.
Raining	When it senses rain, the Landroid®L will return to the Charging Base and stay there for the time you have programmed it to do so. When dry, the Landroid®L CPU will automatically begin the delay and countdown and then return to mowing. If you want Landroid®L to mow before this, simply turn it off then on again, but only when the rain sensor is dry or you can set the delay time to 0 min.
Locating charger base	Needs a recharge - during the journey to the base, the cutting blade is stopped in order to save energy.
Charging	Charge is in progress - voltage, current, charge percentage are displayed.
Waiting for scheduled time	Stand-by, will start according to program set.

Error messages

Outside working area	<ol style="list-style-type: none">1. If the Landroid®L is actually outside its territory: open the keypad window, turn power off, take the Landroid®L inside its territory. Turn power on and close the keypad window.2. If the Landroid®L is inside its territory: check the LED on the charging base is on. If not, check the plug connection to the mains socket. If the LED is still off, check the boundary wire is well connected to the clamps on the charging base.3. If the problem persists, check that the boundary wire hasn't been cut.
PIN code erro	Refer to the "Programming" section to re-set your PIN
Blade disc blocked	<ol style="list-style-type: none">1. Open the keypad window;2. Turn power off;3. Turn the Landroid®L upside down and check if there is anything preventing the blade disc to rotate.4. Remove any possible obstruction.5. Turn the Landroid®L upright and take it to an area with short grass;6. Turn power on and close the keypad window.
Wheel motor blocked	<ol style="list-style-type: none">1. Open the sliding keypad window;2. turn power off: take the Landroid®L in an area free from obstacles;3. turn power on and close the keypad window.4. If the error message is still displayed, open the keypad window again; turn power off; turn the Landroid®L upside-down and check if there is anything preventing the wheels from rotating.5. Remove any possible obstruction, turn the Landroid®L upright, turn power on and close the keypad window.
Trapped	<ol style="list-style-type: none">1. Open the sliding keypad window.2. Turn power off.3. Take the Landroid®L in an area free from obstacles.4. Turn power on and close the keypad window.5. If the error message is still displayed, open the keypad window again; turn power off; turn the Landroid®L upside-down and check if there's anything preventing the wheels from rotating.6. Remove any possible obstruction, turn the Landroid®L upright, turn power on and close the keypad window.
Lifted up	<ol style="list-style-type: none">1. Open the keypad window, turn power off.2. Take the Landroid®L to an area clear of obstacles, turn power on and close the keypad window.3. If the error message is still displayed: open the keypad window, turn power off, turn the Landroid®L upside-down and check there is nothing trapped.4. Remove any possible object, turn the Landroid®L upright, turn power on and close the keypad window.
Upside down	Turn the Landroid®L upright. Open the keypad window then close it.
Charging Base Blocked	<ol style="list-style-type: none">1. The contact between the Charging and Contact Strips may be obstructed in some way.2. Wipe off the Charging and Contact Strips, making sure there is not an object obstructing them, then place your Landroid®L in the charging base and check that the strips make good connection.
Battery very low	<ol style="list-style-type: none">1. This means that there is low battery voltage2. In this case you must place the mower in the Charging Base with the Landroid®L is powered off. Then press the ON/OFF button before the light turns green, and close the KeypadWindow to start charging.

Notes

- **If the above error messages appear on the display, correct the problems first, then press "  " to reset.**
- Before turning power on, always check the Landroid®L is inside its territory. If not, the message "outside working area" will be displayed. This message is displayed also when the Landroid®L is sitting over the boundary wire when turned on.
- If for any reason—i.e. a party, children playing...—you want to park your Landroid®L in the charging base: press the key with the home symbol . The Landroid®L will go to its base and stay there. Please note the Landroid®L will now wait until the next scheduled mowing session. If you want to re-start it: turn power on. Landroid®L will now resume its scheduled mowing session
- If an error repeatedly occurs in the same area of your lawn, you might have a problem with the boundary wire so please refer to the previous installation instructions and check your set up with its help.
- If your lawn is divided in two separated areas, connected by a corridor less than 1 m, one of which is not provided with the charging base: when the Landroid®L runs out of charge, take it manually to the charging base, turn power on, press the key with the home symbol and the charge process will start.
- If the Landroid®L runs abnormally once in a while, please try to restart it. If the problem cannot be solved, please contact WORX Service Agent for help.
- Do not wash the machine with a high pressure washer. This could cause damage to the battery or the machine.
- Your Landroid®L software can be updated when new versions become available. The software version will be displayed in the bottom right hand corner of the display. The manual in box is based on the default software in the mass production. Some new features/functions in the new version may not exist in the manual. If you found some settings not in the manual, please visit www.worxandroid.com to download the latest manual. You can check the software version installed on your machine by pressing the ON/OFF button.