


Programming guide

Control Panel and menu



Always close the keypad window after programming. Your Landroid®L will not move with it open.

Menu overview

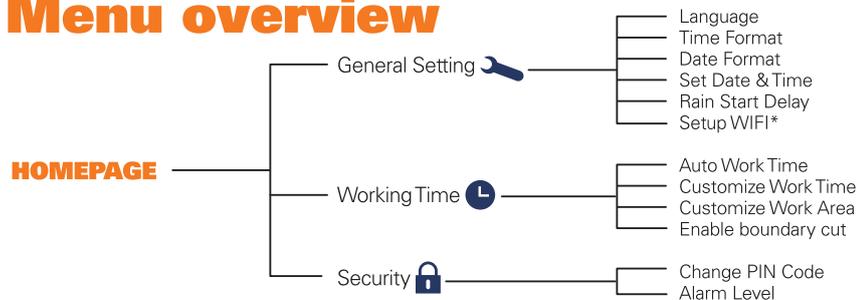

*Only for specific model with Remote Mobile Control, please check Technical data & Declaration of Conformity

Quick Start

Press **STOP** to open the keypad window.

Press **POWER ON/OFF** until Landroid®L turns on and input the default PIN 0000.

Press **START** and close the keypad window to start mowing.

Press **HOME** and close the keypad window to make Landroid®L go to the charging base, at the same time it will mow the grass near the boundary wire.

Landroid®L will work continuously until battery is low and then it will return to the charging base. Once charging is complete, Landroid®L will automatically resume mowing or it will stay in the charging base if it has finished mowing as scheduled.

Programming

To Program your Landroid®L, simply follow the step by step guide below.

Setting

If you want to change the working time and other settings, please follow the steps below.

Buttons	↑ ↓	OK	↶
Function	Selection Up/Down	Enter the menu/Confirm the setting	Go back to the previous menu

Press **OK** on **HOME PAGE** to enter the submenu.

Note: When your Landroid®L is charging, please press **STOP** first, then press **OK** to enter the submenu.

1. General setting (wrench icon)

General setting

- Language: Italiano, English, Deutsch, Danish
- Time format: 12am 12pm, 24hour
- Date format: MM-DD-YYYY, DD-MM-YYYY, YYYY-MM-DD
- Set date & time: Date: 03-10 -2012, DD-MM-YYYY; Time: 20:37, 24h
- Rain start delay: 180 min

Note: Set date and Set time are two compulsory setting items. If you don't set these two items, it will influence the Schedule time in the following setting.

1.1 Language

Select the appropriate language by using the **↑ ↓** keys, then press **OK**.

1.2 Time format

Select **12 am 12 pm** or **24 hour** by using the **↑ ↓** keys, then press **OK**.

1.3 Date format

Select **MM-DD-YYYY**, **DD-MM-YYYY** or **YYYY-MM-DD** by using **↑ ↓** keys, then press **OK**.

1.4 Set date & time

Press **OK** first, when the number is blinking, press the number directly or use the **↑ ↓** keys to input the actual date or time, then press **OK** to confirm and the number will stop blinking.

1.5 Rain Start Delay

When it rains, Landroid®L will return to the charging base to wait till the rain stops and the rain sensors are dry. When dry, Landroid®L will automatically begin the delay start countdown and then return to mow.

Press **OK** first, when the number is blinking, input the number of minutes from **0-180min**.

Note: If the "min" is set to 0, Landroid®L will continue mowing.

1.6 Setup WIFI

Please refer to the details in the Landroid®L WIFI Connection Guide.

2. Working time (L)

Working time
 Auto work time
 Customize work time
 Customize work area
 Enable boundary cut

Auto work time
 100 m² 120 yd²
 200 m² 240 yd²
 300 m² 360 yd²
 Need total h: 6.0h

Start time Hours

Mon 09:00 ~ 5.4h
 Tue 09:00 ~ 5.4h
 Wen 09:00 ~ 5.4h

Start time Hours

Fri 09:00 ~ 5.0h
 Sat 00:00 ~ 0.0h
 Sun 00:00 ~ 0.0h

09:00pm
 Wed. 6-8-2012
 7:00am ~ 12:00am

Working time adjust
 -10%

2.1 Auto work time

Use the \uparrow \downarrow keys to select the lawn area. The working time will be automatically set according to the size of your garden. Then press **OK**. A " " will appear in front of the option you selected. Auto work time per week will be displayed on the bottom as "Need total h.:"

You can find more details about default work time of Landroid®L in following table:

Landroid®L - Auto mowing time schedule.

Area m ²	Auto mowing runtime - hours	Monday mowing hours	Tuesday mowing hours	Wednesday mowing hours	Thursday mowing hours	Friday mowing hours	Saturday mowing hours	Sunday mowing hours
100	3	9:00-10:30	/	/	9:00-10:30	/	/	/
200	5	9:00-10:00	9:00-10:00	9:00-10:00	9:00-10:00	9:00-10:00	/	/
300	6	9:00-10:12	9:00-10:12	9:00-10:12	9:00-10:12	9:00-10:12	/	/
400	7.5	9:00-10:30	9:00-10:30	9:00-10:30	9:00-10:30	9:00-10:30	/	/
500	10	9:00-11:00	9:00-11:00	9:00-11:00	9:00-11:00	9:00-11:00	/	/
600	11	9:00-11:12	9:00-11:12	9:00-11:12	9:00-11:12	9:00-11:12	/	/
700	13	9:00-11:36	9:00-11:36	9:00-11:36	9:00-11:36	9:00-11:36	/	/
800	15	9:00-12:00	9:00-12:00	9:00-12:00	9:00-12:00	9:00-12:00	/	/
900	16.5	9:00-12:18	9:00-12:18	9:00-12:18	9:00-12:18	9:00-12:18	/	/
1000	18	9:00-12:36	9:00-12:36	9:00-12:36	9:00-12:36	9:00-12:36	/	/
1100	20	9:00-13:00	9:00-13:00	9:00-13:00	9:00-13:00	9:00-13:00	/	/
1200	22.5	9:00-13:30	9:00-13:30	9:00-13:30	9:00-13:30	9:00-13:30	/	/
1300	25	9:00-14:00	9:00-14:00	9:00-14:00	9:00-14:00	9:00-14:00	/	/
1400	26.5	9:00-14:18	9:00-14:18	9:00-14:18	9:00-14:18	9:00-14:18	/	/
1500	28	9:00-14:48	9:00-14:48	9:00-14:48	9:00-14:48	9:00-14:48	/	/
1600	31	9:00-15:12	9:00-15:12	9:00-15:12	9:00-15:12	9:00-15:12	/	/
1700	33	9:00-15:36	9:00-15:36	9:00-15:36	9:00-15:36	9:00-15:36	/	/
1800	35	9:00-16:00	9:00-16:00	9:00-16:00	9:00-16:00	9:00-16:00	/	/
1900	37	9:00-16:24	9:00-16:24	9:00-16:24	9:00-16:24	9:00-16:24	/	/
2000	39	9:00-16:48	9:00-16:48	9:00-16:48	9:00-16:48	9:00-16:48	/	/

NOTE: The maximum mowing area depends on specific model.

2.2 Customize work time

You can customize the work time with this setting.

Use the \uparrow \downarrow keys to select the day of week, then press **OK**. When the number is blinking, input the start time and working hours you want your Landroid®L to mow on a particular day. Press **OK** again to confirm your setting and the number will stop blinking.

Press **S** and use the \uparrow \downarrow keys to set other weekdays work time.

If you do not want Landroid®L to mow on a particular day, simply set the hours 0.0 h.

TIPS: Working time adjustment

If you are still not satisfied with the time you set, there's a shortcut to adjust the working time. Return to HOMEPAGE and use the \uparrow \downarrow keys to adjust the working time. The overall working time will be adjusted in increments of 10% of the overall working time.

2.3 Customize work area

For a garden divided into several areas which are connected by narrow paths (at least 1 meter wide), it is recommended to use "Customize work area" setting. This will make sure these separated areas be equally mowed. You can have a maximum of 4 areas.

Without this setting, the area far from the charging base may be mowed less frequently than the one near the charging base.

In this setting, you can program Landroid®L to have a start point in each separated area. Landroid®L will go along the boundary wire until it reaches the start point, then it will start to mow, as shown in Fig. 1.

The amount of time Landroid®L will spend in each area can be influenced by the "%work" setting.

Taking 2 areas for example, please complete the setting as follows:

Measure the distance by yourself (or by Landroid®L which will be described later)

Note: start points shown are for reference only, actual start points will be determined by the layout of your garden.

As shown in Fig.1, please measure the distance between the charging base and start point 1 (marked d1 m). Then, measure the distance between start point 1 and start point 2 (marked d2 m).

Distance for each area is shown in the table below:

Areas	Area 1	Area 2
Distance from the charging base	d1 m	d1+d2 m

Set the menu

After finishing the measurement, enter the "Customize work area" setting (See Fig. 2).

Press **OK** first, then input the number of areas (in this example, 2) as shown in Fig. 3. Press the **OK** button to confirm and the number will stop blinking.

Input corresponding distance for each area. Then input the "%work" which means the working time ratio in each area and should be proportional to the size of each area.

Note: The total "%work" should add up to 100%.

After these steps are completed, "Searching working area" will be displayed when Landroid®L starts to mow. It means that you have successfully made the "Customize work area" setting.

Note: If Area 1 is set to be 0 m and Landroid®L wants to mow Area 1, it will go directly to Area 1 without moving along the boundary wire.

If your garden has 4 separated areas, just use the same method to measure the distance between the charging base and respective start points. Then set the menu accordingly.

Optionally, you can also use your Landroid®L to measure the distance.

Place Landroid®L on the boundary wire, close to the back of the charging base as shown in Fig.7.

Press \uparrow and Landroid®L will move along the boundary wire. When it reaches required start point 1, press the STOP button and press button **2**.

The user interface will appear on the display (See Fig. 8) and confirm the distance at the bottom of Fig. 8.

Make a note of this distance (marked d1 m). Then press **S**, close the keypad window and Landroid®L will continue to move from start point 1. When it reaches start point 2, make a note of the distance (marked d2 m). Use the same method to measure the distance between start point 2 and start point 3 (marked d3 m), start point 3 and start point 4 (marked d4 m).

Areas	Area 1	Area 2	Area 3	Area 4
Distance from the charging base	d1 m	d1+d2 m	d1+d2+d3 m	d1+d2+d3+d4 m


2.4 Enable boundary cut

If boundary cut function is enabled, Landroid®L will mow the grass along the boundary wire once a week.

Select YES/NO to activate/deactivate the boundary cut function.

Note: 1. This function will operate only in working time schedule with Landroid®L fully charged.

2. Press HOME button, and Landroid®L will mow the grass near boundary wire while it returns to the charging base.

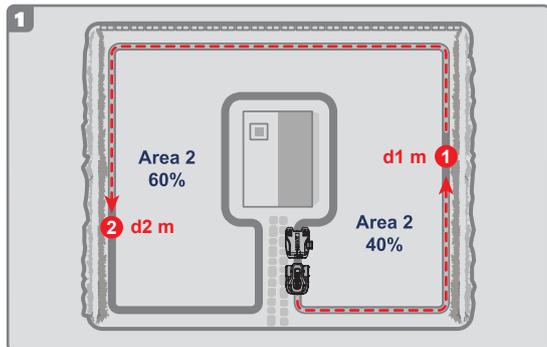


2 Working time
 Auto work time
 Customize work time
 Customize work area
 Enable boundary cut

3 Num. work area 1

4 Num. work area 2
 Area1: 6 m %work: 40%
 Area2: 20 m %work: 60%

5 Num. work area 2
 Area1: 6 m %work: 40%
 Area2: 20 m %work: 60%

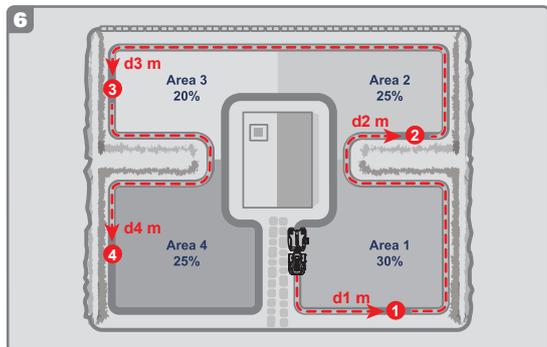

7

8

Working time
 Auto work time
 Customize work time
 Customize work area
 Enable boundary cut

Activate border cut
 No Yes

3. Security ()



3.1 Change PIN code

Using the   keys to select then press **OK**.

Type the Old PIN (default PIN 0000), then press **OK**. Then type your New PIN and repeat it.

3.2 Alarm level

Use the   keys to select the alarm volume setting.

High = loud setting (60~70dB)

Low = quiet setting (40~50dB)

NOTE: If you input the wrong PIN code, the Landroid®L will be turned off automatically. Press On/Off key to On, input the correct PIN code, then Landroid®L will turn on again.

WARNING: If you decide to change the PIN code, be aware there's no way to restore the Landroid®L if you forget the PIN code. Please write your PIN code here and store this sheet in a safe place for future reference. Even better, register your Landroid®L online and enter your PIN code there. You will always be able to find your PIN online at www.worxlandroid.com.

Your PIN code

Function messages

Mowing	Cutting grass according to the program setting.
Raining	When it senses rain, Landroid®L will return to the Charging Base and stay there for the time you have programmed it to do so. When dry, Landroid®L will automatically begin the delay and countdown and then return to mow. If you want Landroid®L to mow before this, simply turn it off then on again, but only when the rain sensor is dry or you can set the delay time to 0 min.
Locating charger base	Needs to recharge—during the journey to the base, the cutting blade is stopped in order to save energy.
Charging	Charge is in progress—charge percentage are displayed.
Waiting for scheduled time	Stand-by, will start according to program set.
Searching working area	According to the setting of "Customize work area", Landroid®L is searching a certain area to mow.
Charge completed	Landroid®L has completed its charging.

Error messages

Outside working area	<ol style="list-style-type: none"> 1. If Landroid®L is actually outside its territory: turn power off, take the Landroid®L inside its territory. Turn power on. 2. If the Landroid®L is inside its territory, check the LED on the charging base is green. If not, check the charging base is connected properly to the charger and the charger is connected to a suitable power supply. If so, it means that the boundary wire ends are clamped incorrectly, and you need to reverse them. 3. If the LED light flashes green, check the boundary wire is well connected to the clamps to the charging base. If the problem persists, check that the boundary wire hasn't been cut.
PIN code error	Refer to the "Programming" section to re-set your PIN.
Blade disc blocked	<ol style="list-style-type: none"> 1. Turn power off. 2. Turn Landroid®L upside down and check if there's anything preventing the blade disc to rotate. 3. Remove any possible obstruction. 4. Turn Landroid®L upright and take it to an area with short grass or adjust the cutting height. 5. Turn power on.
Wheel motor blocked	<ol style="list-style-type: none"> 1. Turn power off: take Landroid®L in an area free from obstacles. 2. Turn power on. 3. If the error message is still displayed; turn power off; turn Landroid®L upside-down and check if there's anything preventing the wheels from rotating. 4. Remove any possible obstruction, turn Landroid®L upright, turn power on.
Trapped	<ol style="list-style-type: none"> 1. Turn power off. 2. Take Landroid®L to a lawn area free from obstacles. 3. Turn power on. 4. If the error message is still displayed; turn power off; turn Landroid®L upside-down and check if there's any debris causing a blockage in the top cover. 5. Remove any possible obstruction, turn the Landroid®L upright, turn power on.
Lifted up	<ol style="list-style-type: none"> 1. Turn power off. 2. Take Landroid®L to a lawn area clear of obstacles, turn power on. 3. If the error message is still displayed: turn power off, turn Landroid®L upside-down and check there's nothing lifted up. 4. Remove any possible object, turn Landroid®L upright, turn power on.
Upside down	<ol style="list-style-type: none"> 1. Turn Landroid®L upright. 2. If still not work, Firstly, position the mower on a horizontal surface. Press Key "2" to enter the diagnosis interface, and press Key "5" for a few seconds until the three numbers 1 2 & 3 highlighted below turn back to zero. (See fig. A)
Charging Base Blocked	<ol style="list-style-type: none"> 1. The contact between the Charging and Contact Pins may be obstructed in some way. 2. Wipe off the Charging and Contact Pins, making sure there is not an object obstructing them, then place your Landroid®L in the charging base and check that the Pins make good connection.
Battery very low	<ol style="list-style-type: none"> 1. This means that there is low battery voltage. 2. In this case you must turn Landroid®L off and place it in the Charging Base, then "charging" will be shown on screen, which means it starts charging.



Notes

- **If the above error messages appear on the display, correct the problems first, then press "0" to reset.**
- Before turning power on, always check Landroid®L is inside its territory. If not, the message "outside working area" will be displayed. This message is displayed also when Landroid®L is sitting over the boundary wire when turned on.
- If for any reason—i.e. a party, children playing...—you want to park your Landroid®L in the charging base: press the key with the home symbol . Landroid®L will go to its base and stay there. Please note Landroid®L will now wait until the next scheduled mowing session. If you want to re-start it, press STOP button, then press  button to start your Landroid®L.
- If an error repeatedly occurs in the same area of your lawn, you might have a problem with the boundary wire so please refer to the previous installation instructions and check your set up with its help.
- If your lawn is divided in two separated areas, connected by a corridor less than 1m, one of which is not provided with the charging base: when Landroid®L runs out of charge, take it manually to the charging base, turn power on, press the key with the home symbol and the charge process will start.
- If Landroid®L runs abnormally once in a while, please try to restart it. If the problem cannot be solved, please contact WORX Service Agent for help.
- Do not wash the machine with a high pressure washer. This could cause damage to the battery or the machine.
- Your Landroid®L software can be updated when new versions become available. The software version will be displayed in the diagnosis page by pressing button 2 on homepage. The latest software can be downloaded from our website www.worxlandroid.com. See the detailed guideline on download page. The manual supplied in the box is based on the default software in the mass production. Some new features/functions in the new version may not exist in the manual. If you find some settings that are not detailed in the manual, please visit www.worxlandroid.com to download the latest manual.