

Appendix

Australia Air Channels			
Ch.	Frequency		
	Start	Center	End
VHF			
C00	45	48.5	52
C01	56	59.5	63
C02	63	66.5	70
C03	85	88.5	92
C04	94	97.5	101
C05	101	104.5	108
C5A	137	140.5	144
C06	174	177.5	181
C07	181	184.5	188
C08	188	191.5	195
C09	195	198.5	202
C9A	202	205.5	209
C10	209	212.5	216
C11	216	219.5	223
C12	223	226.5	230
UHF			
C20	470	473.5	477
C21	477	480.5	484
C22	484	487.5	491
C23	491	494.5	498
C24	498	501.5	505
C25	505	508.5	512
C26	512	515.5	519
C27	519	522.5	526
C28	526	529.5	533
C29	533	536.5	540

Australia Air Channels			
Ch.	Frequency		
	Start	Center	End
C38	596	599.5	603
C39	603	606.5	610
C40	610	613.5	617
C41	617	620.5	624
C42	624	627.5	631
C43	631	634.5	638
C44	638	641.5	645
C45	645	648.5	652
C46	652	655.5	659
C47	659	662.5	666
C48	666	669.5	673
C49	673	676.5	680
C50	680	683.5	687
C51	687	690.5	694
C52	694	697.5	701
C53	701	704.5	708
C54	708	711.5	715
C55	715	718.5	722
C56	722	725.5	729
C57	729	732.5	736
C58	736	739.5	743
C59	743	746.5	750
C60	750	753.5	757
C61	757	760.5	764
C62	764	767.5	771
C63	771	774.5	778
C64	778	781.5	785
C65	785	788.5	792
C66	792	795.5	799
C67	799	802.5	806

C30	540	543.5	547
C31	547	550.5	554
C32	554	557.5	561
C33	561	564.5	568
C34	568	571.5	575
C35	575	578.5	582
C36	582	585.5	589
C37	589	592.5	596

C68	806	809.5	813
C69	813	816.5	820
C70	820	823.5	827
C71	827	830.5	834
C72	834	837.5	841
C73	841	844.5	848
C74	848	851.5	855
C75	855	858.5	862

Table 1 Australia Television Frequency/Channels (MHz)