





info contacts

L + 39 02 942 1724

info@trime.it

www.trime.it

Mast & Floodlights spare parts



Floodlight head

Code:

AC000 E026 005



Floodlight support

Code:

LED06_C000_09ZN



Anti-drag spacer

Code:

AS000_M023_001



Multiposition handle

Code:

 
AC000_M000_007



Led driver power supply

Code:

AC000 E026 006



Junction box

Code:

AS000_E006_001



Coiled cable

Code:

AC000_E006_016



Buble level

Code:

AC000_M016_002



Mast rotation lock pin

Code:

AC000_M000_003



Hydraulic cylinder

Code:

AS000_I025_001



Pulley D.58

Code:

AC000_M021_001



Pulley D.60

Code:

AC000_M021_002



Pulley D.62

Code:

AC000_M021_003



Pulley D.63

Code:

AC000_M021_008



Rubber handle

Code:

AC000_P037_001



Mast rope L.1460 mm full eyelet

Code:

AC000_M021_005



Mast rope L.1440 mm full eyelet

Code:

AC000_M021_012



Mast rope L.1440 mm full / dug eyelet

Code:

AC000_M021_004



Mast rope L.1415 mm full / dug eyelet

Code:

AC000_M021_006



Mast rope L.1385 mm full / dug eyelet Code:

AC000_M021_007









Mast & Floodlights spare parts



Angular runner

Code:

AS000_M000_005



Angular runner reinforcement

Code:

PFI08_C031_012ZN

Hydraulic unit spare parts



Hydraulic tank cap

Code:

AS-EC1271120



Electrovalve solenoid body

Code:

AS-F720002B1



Electrovalve energizing coil

Code:

AS-C150001OA



Electrovalve energizing coil plug

Code:

AS-EC167002



250Bar valve

Code:

AS-F733006250

Electrical spare parts



DSE3110 controller

Code:

AC000_E014_001



Fuel level gauge

Code:

AC000_E015_005



RCBO 13A

Code:

AC000 E012 028



Lamp switch

Code:

AC000_E012_027



Light sensor

Code:

AC000_E016_002



Light sensor capacitor

Code:

AC000_E000_070



Timer

Code:

AC000_E000_053



8 modules cover

Code:

AC000_E000_008



10 modules cover

Code:

AC000_E000_020



Battery charger

Code:

AC000_E006_012







info contacts

4 + 39 02 942 1724

info@trime.it

www.trime.it

Electrical spare parts



Mast control buttons

Code:

SI000_G006_006



1 poles switch

Code:

SI000_G006_003



12V 70A relay

Code:

AC000_E000_041



12V 30A relay

Code:

AC000_E000_040



Contactor switch

Code:

AC000_E006_054



Generator/Mains selector

Code:

AC000_E006_057



Inlet plug 230V 16A

Code:

AC000_E011_005



Outlet socket 230V 16A

Code:

AC000_E011_007



Emergency stop button

Code:

SI000_G006_010



Thermal circuit breaker

Code:

AC000_E012_013



Fuse holder

Code:

AC000_E012_030



2A fuse

Code:

AC000_E012_014



Earth post

Code:

AC000 M038 035



Battery

Code:

AC000_E000_027



Junction box

Code:

AS000_E006_003

Engine spare parts



25µF capacitor

Code:

L-EX541511025



Battery charger regulator Code:

K-RP20153710



Engine Stop Timer

|4|

Code:

K-T007031410



Fan belt

Code:

K-1588197010



Air filter element

Code:

K-1921511220









Engine spare parts



Cooling Water Expansion Code: K-1553172402



Fuel filter
Code:

K-1522143170



Fuel lift pump
Code:

K-R140151352



Code: **AC000_M001_008**



AS000_M000_060

Oil drain pipe kit

Code:

AC000_G001_001



Anti-vibration buffer

Code:

AC000_M024_054



Oil filter

Code:

K-W21ESO1500

Chassis spare parts



Fuel tank cap

Code:

AC000_M000_028



Fuel sender unit

Code:

AC000_E006_081



Handle with lock

Code:

AC000_M000_017



Door hinge

Code:

AC000_M000_085



Stabilizer lock pin

Code:

AC000_M000_086



Stabilizer beam

Code:

XBOX_C000_005







Lighting Tower Specialist

TRIME s.p.a.

Strada per Robecco, snc

20081 Cassinetta di Lugagnano (MI) - ITALY

Tel. +39 02 942 1724

www.trime.it - info@trime.it