





info contacts

**** + 39 02 942 1724

info@trime.it

www.trime.it

Mast & Floodlights spare parts



LED Floodlight 150W

Code:

AC000_E026_015



Floodlight upper support

Code:

PFM08_C000_050ZN



Floodlight lower support

Code:

PFM08_C000_051ZN



Anti-drag spacer

Code:

AS000 M023 001



Multiposition handle

Code:

AC000_M000_007



Led power connector

Code:

AC000_E006_061



Junction box

Code:

AS000_E006_004



Coiled cable

Code:

AC000_E006_016



Machine level gauge

Code:

AC000_M016_002



Mast rotation lock pin

Code:

AC000_M000_003



Mast winch

Code:

AC000_M000_084



Mast winch handle

Code:

AC000_M000_084_01



Mast rope L.5200 mm full eyelet / free cable

Code:

AC000_M021_031



Mast rope L.1735 mm full / dug eyelet

Code:

AC000_M021_029



Mast rope L.1720 mm full / dug eyelet

Code:

AC000_M021_028



Mast rope L.1670 mm full / dug eyelet

Code:

AC000_M021_030



Pulley D.60

Code:

AC000_M021_002



Pulley D.62

Code:

AC000_M021_003



Angular runner

Code:

AS000_M000_005



Angular runner reinforcement

Code:

PFI08_C031_012ZN









Electrical spare parts



Hour meter

Code:

AC000_E015_009



RCBO 13A

Code:

AC000_E012_028



Lamp switch

Code:

AC000_E012_027



8 modules cover

Code:

AC000_E000_008



Relay

Code:

AC000_E006_096



Inlet socket 230V 16A

Code:

AC000_E011_005



Outlet socket 230V 16A

Code:

AC000_E011_007



Earth post

Code:

AC000_M038_035



Light sensor 230V

Code:

AC000_E016_004



Light sensor capacitor

AC000_E000_070



Selector

Code:

AC000_E006_041

Chassis spare parts



Stabilizer lock pin

Code:

AC000_M000_086



Stabilizer beam

Code:

XMA_C000_015ZN



Stabilizer

Code:

XMA_C000_026





Lighting Tower Specialist

TRIME s.p.a.

Strada per Robecco, snc

20081 Cassinetta di Lugagnano (MI) - ITALY

Tel. +39 02 942 1724

www.trime.it - info@trime.it