



genuine spare parts

fast moving items

 
X-START

4x1000W MH



TRIME

Lighting Tower Specialist

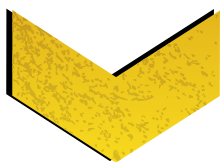

X-START

4x1000W MH



info contacts

+ 39 02 942 1724

info@trime.it

www.trime.it

Mast & Floodlights spare parts



Floodlight head

Code:
AC000_E026_001



Lamp 1000W

Code:
AC000_E026_018



Floodlight head glass

Code:
AC000_E026_024



Floodlight upper support

Code:
PFM08_C000_010ZN



Floodlight lower support

Code:
PFM08_C000_049ZN



Anti-drag spacer

Code:
AS000_M023_001



 
Multiposition handle

Code:
AC000_M000_007



Lamp ignitor

Code:
AC000_E026_002

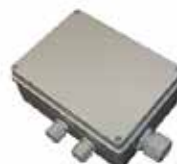

Junction box

Code:
AS000_E006_004



Coiled cable

Code:
AC000_E006_016



Mast winch

Code:
AC000_M000_084



Mast rope L.4300 mm
full eyelet / free cable

Code:
AC000_M021_009



Mast rope L.1460 mm
full / dug eyelet

Code:
AC000_M021_013



Mast rope L.1455 mm
full / dug eyelet

Code:
AC000_M021_011



Mast rope L.1415 mm
full / dug eyelet

Code:
AC000_M021_006



Mast winch handle

Code:
AC000_M000_084_01



Mast rotation lock pin

Code:
AC000_M000_003



Bubble level

Code:
AC000_M016_002



Pulley D.60

Code:
AC000_M021_002



Pulley D.62

Code:
AC000_M021_003



Mast & Floodlights spare parts



Pulley D.63

Code:
AC000_M021_008



Angular runner

Code:
AS000_M000_005



Angular runner
reinforcement

Code:
PFI08_C031_012ZN

Electrical spare parts



Ignition switch

Code:
K-1524863590



Hour meter

Code:
AC000_E015_009



RCBO 40A

Code:
AC000_E012_031



Lamp switch

Code:
AC000_E012_027



8 modules cover

Code:
AC000_E000_008



Glow plug signal lamp

Code:
AC000_E015_014



Battery alarm lamp

Code:
AC000_E015_017



Coolant alarm lamp

Code:
AC000_E015_016



Oil alarm lamp

Code:
AC000_E015_015



Engine protection
panel

Code:
AC000_E014_005



Thermal circuit
breaker

Code:
AC000_E012_013



Outlet socket
230V 16A

Code:
AC000_E011_007



Emergency stop
button

Code:
SI000_G006_010



 
1000W Ballast

Code:
AC000_E026_012



Battery

Code:
AC000_E000_027

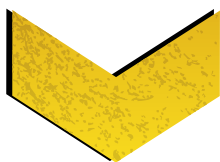

X-START

4x1000W MH



info contacts

+ 39 02 942 1724

info@trime.it

 
www.trime.it

Electrical spare parts



12V 30A relay

Code:
AC000_E000_040

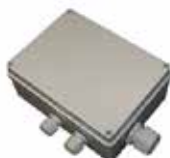

Junction box

Code:
AS000_E006_003



Earth post

Code:
AC000_M038_035

Engine spare parts



40µF capacitor

Code:
AC000_E000_035



Fan belt

Code:
K-1628297013



Air filter external element

Code:
K-TA04093230



Air filter internal element

Code:
K-TA04093220



Engine Stop Timer

Code:
K-1685160014



Cooling Water Expansion

Code:
K-EG66172400



Fuel filter

Code:
K-1522143170



Fuel lift pump

Code:
K-R140151352



Fuel pre-filter

Code:
AC000_M001_008



Engine oil drain pump

Code:
AS000_M000_060



Oil drain pipe kit

Code:
AC000_G001_001



Anti-vibration buffer

Code:
AC000_M024_054



Oil filter

Code:
K-W21ESO1600



Kubota lamp Timer

 
Code:
K-1569465990

info contacts

+ 39 02 942 1724

info@trime.it

www.trime.it

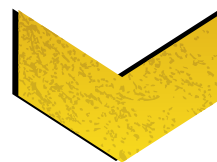

X-START

4x1000W MH

Chassis spare parts



Fuel tank cap

Code:
AC000_M000_014



Fuel level indicator

Code:
AS000_M016_062



Handle with lock

Code:
AC000_M000_017



Door hinge

Code:
AC000_M000_009



Stabilizer lock pin

Code:
AC000_M000_086



Stabilizer beam

Code:
XSTART_C000_009ZN



Stabilizer

Code:
AS000_M000_048



Rudder Stabilizer

Code:
XSTART_C003_042ZN



Rudder Stabilizer handle

Code:
AC000_M000_026



Wheel

Code:
AC000_M000_042



 
Right mudguard

Code:
XSTART_C004_033



Left mudguard

Code:
XSTART_C004_034

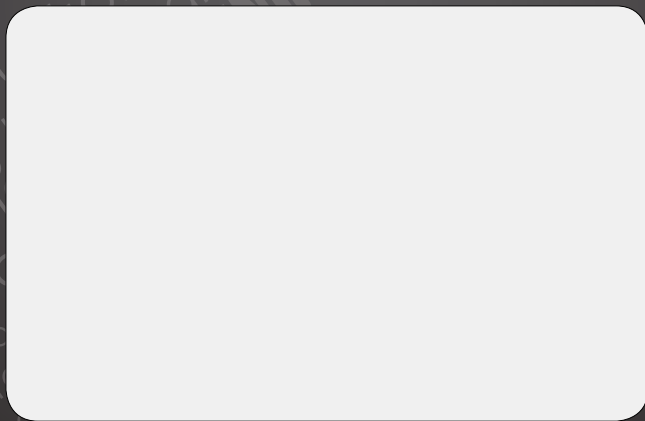

www.trime.it - info@trime.it