

Biometric Keypad Battery Replacement

Step 1

Pull battery compartment down to expose old batteries.



Step 2:

Unplug batteries from cable connector and insert new Duracell batteries



Step 3:

Slide battery compartment up into the keypad housing.

