




## **Setting the Burner Ignition Position – FlexiBurn 780**

**WARNING:** Any maintenance work undertaken on a James Heal instrument must be done so by a trained and competent person. Where electrical work is detailed, this should only be completed by a qualified engineer. James Heal is not responsible for damage or injury arising from work carried out by any person not qualified to do so. If in doubt, please contact James Heal or your local James Heal Agent.


The ignition offset is a measure of how far from the vertical the burner has to move back so that its tip is under the ignition electrodes.

Increasing the offset moves the burner ignition position further back away from the rig / vertical.

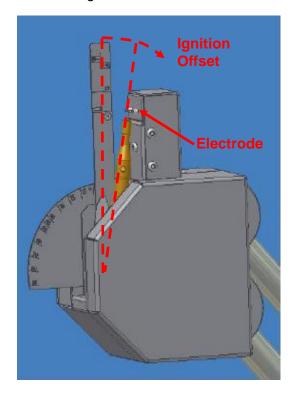

1) Power up the Flexiburn.


and down key so that option 6 configuration is highlighted, then press the enter key, to enter the configuration menu.

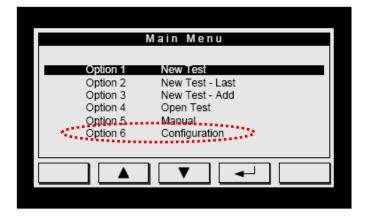






2) When in the configuration menu use the same procedure as above to select and go to "Option 5 System Data".

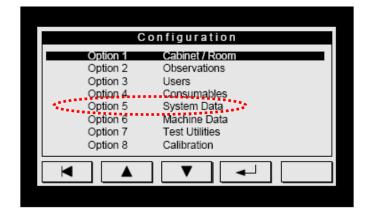

3) When in the system data screen select "Parameter Lock".


Use the enter key to ensure that this is set to "Disabled"

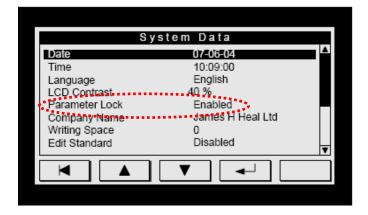

4) Scroll further down the System data menu until "Ignition Offset" is highlighted.

Press enter and you should now see the edit screen shown opposite.

If the burner is not moving far enough towards the ignition point increase the number of steps using the Up/down arrows then press enter to return to the System Meni

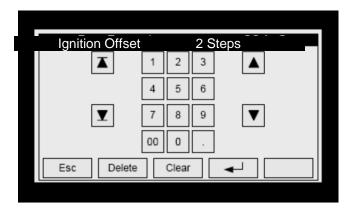






5) Exit the "System Menu", then the "Configuration Menu" using the back key,



From the main menu select "Option 5 Manual".

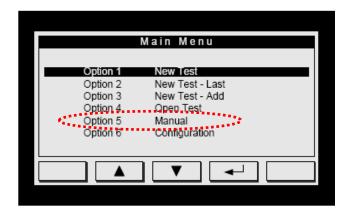

6) Repeatedly use the "Jog" and "Zero" keys to move the burner and check that on its return the burner reaches the correct position for ignition.

If not return to step 1 and adjust the Ignition Offset again.

