


Customizing The Password On The Dr. Dish:

On start up, after entering the password (Default is "999"):

1. Enter settings mode by **pressing** and **holding** both arrow keys simultaneously

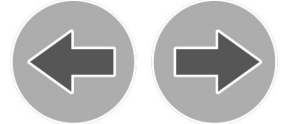

2. Once inside settings mode, use the right arrow key to find "**Password Setting**"



3. **Hold** enter key on "**Yes**" icon to select



4. Enter a new Password using the arrow keys, pressing enter after each character

5. Press "**Reset**" key to exit settings

