


HFC-125 INSTRUCTIONAL SIGNS

APPLICATION

Instructional signs must be supplied in order to provide a system in which the function of all devices is easy to understand. Fike offers several different “standard” signs to comply with NFPA. All signs are durable plastic and backed with a strong adhesive for easy installation. Signs are typically installed at all entrances (CAUTION - Room Protected by HFC-125) and near any device for which the extra explanation is helpful.


“HFC-125 RELEASE” SIGN (P/N 02-10312)

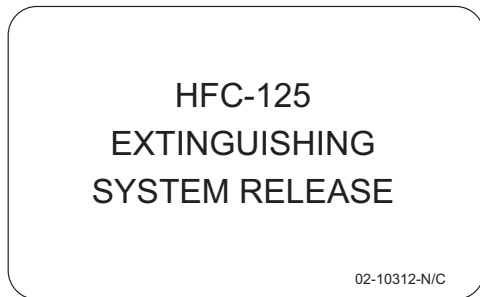

DESCRIPTION

The purpose of the “Release” sign is to identify the manual release station as the place where the HFC-125 System can be manually discharged. It also minimizes the possibility of the manual station being mistaken for a fire alarm device. The sign is 4” x 2.25” x 1/16” (102 x 57 x 1.6mm) and is constructed of white plastic with red lettering. The “HFC-125 Release” Sign should normally be located under each HFC-125 manual release station for quick positive identification.


“IF ACTIVE, DO NOT ENTER” SIGN (P/N 02-10313)

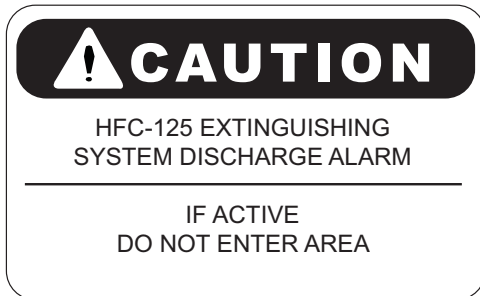

DESCRIPTION

The purpose of this sign is to alert personnel that the room is protected with an HFC-125 system and that they should not enter the area when the alarm sounds. This sign measures 9” x 6” x 1/16” (229 mm x 152 mm x 1.6 mm) and is white plastic with black lettering and yellow caution background. The sign should be placed adjacent to each audible/visual device (typically located outside the area) used to notify personnel that the ECARO-25 system has discharged.

“AREA PROTECTED BY HFC-125 ” SIGN (P/N 02-10314)

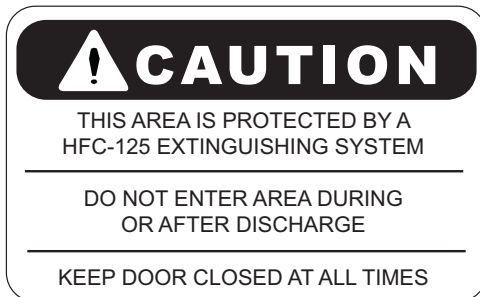

DESCRIPTION

The purpose of the Caution Sign is to alert personnel that the room is protected by an HFC-125 System and that all doors should be kept closed in the event of fire. The sign is 10” x 13” x 1/16” (254 x 330 x 1.6mm) and white plastic with black lettering and yellow caution background. The Caution Sign should normally be located on the entrance door(s) leading into any room where HFC-125 protection is being provided.

Form No. IV.1.08.01


**“IF ACTIVE, EXIT AREA” SIGN
(P/N 02-10309)**



DESCRIPTION

The purpose of this sign is to alert personnel that the room is protected with an HFC-125 system and that they should exit the area immediately when the the alarm sounds. The sign is 9” x 6” x 1/16” (229 x 152 x 1.6mm) and is white plastic with black lettering and yellow caution background. The System Discharge Sign is located next to or under an audible or visual alarm inside of the protected space. This sign, together with the alarm device, will alert personnel when HFC-125 agent has been discharge and allow them to take appropriate action


**“ABORT, PUSH AND HOLD” SIGN
(P/N 02-10310)**

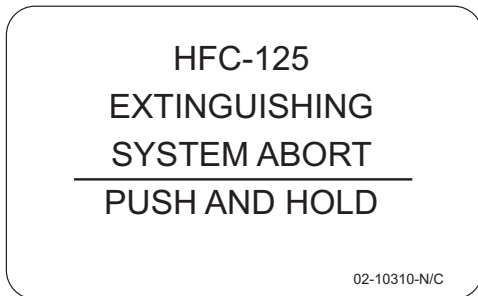

DESCRIPTION

The purpose of the Abort Sign is to identify the presence of the HFC-125 System Abort Station. The sign is 4” x 2.25” x 1/16” (102 x 57 x 1.6mm) and is constructed of white plastic with red lettering. The System Abort Station is designed to provide a manual means by which the HFC-125 system actuation circuit may be interrupted. The System Abort Sign should be located next to each HFC-125 Abort Station for quick positive identification.

**“MAIN/RESERVE” SIGN
(P/N 02-10311)**

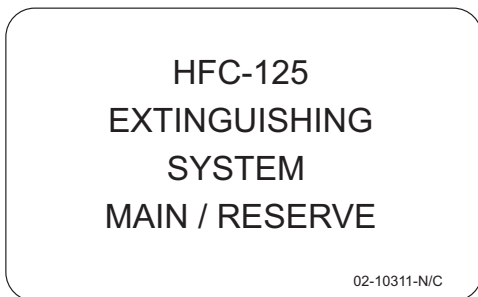

DESCRIPTION

The purpose of Main/Reserve Sign is to identify the presence of the HFC-125 Main/Reserve Switch Station. The sign is 4” x 2.25” x 1/16” (102 x 57 x 1.6mm) and is constructed of white plastic with red lettering. The Main/Reserve Sign should be located under the Main/Reserve Switch for positive identification. A Main/Reserve Switch is used with systems that incorporate main and reserve (back up) HFC-125 Agent storage.



Copyright © Fike Corporation All Rights Reserved.
Form No. IV.1.08.01 April, 2010 Specifications are subject to change without notice.