

	MODEL NUMBER: PD168-051 100mm x 200mm	Document Number: PD196-269R1
	Wall Mount Installation Instructions	Page 1 of 2

Scope:

To install the PD168-051 wall mount kit to a PDi ELED television.

Tool List:



1. Safety glasses/goggles
2. P1 or P2 Phillips screwdriver
3. Level
4. 1/4" hex bit driver

Safety Steps

1. Always wear safety glasses/goggles to prevent injury from debris.
2. Follow the installation/removal instructions for existing products.

Installation Procedure:

1. Select a location on the wall **approximately 9 inches** below the ceiling. Position PD181-697 bracket, level, and locate two mounting holes. Secure the bracket to the wall (mounting hardware is not included). (Fig. 1)
2. Attach PD181-596 bracket to PD181-677 adapter plate using (4) each PDIPPHMSM4X76 screws and #10 internal tooth lock washers. (Fig. 2)

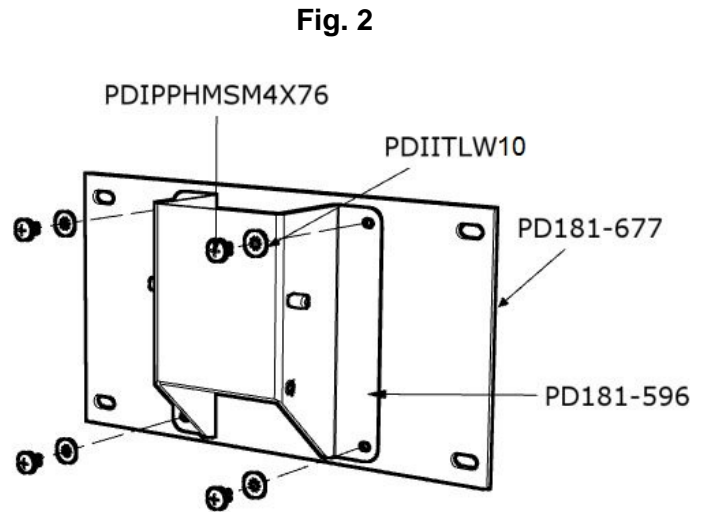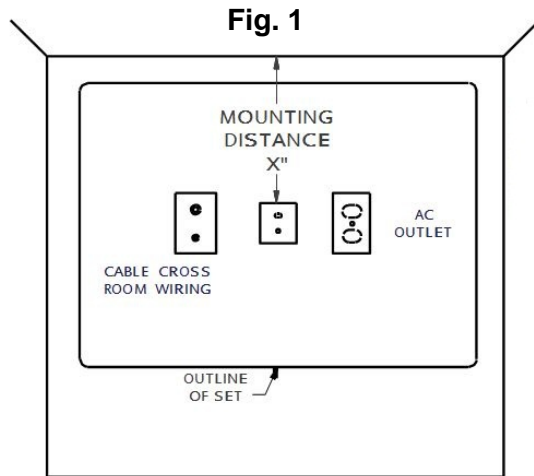


Parts List		
Qty	Part Number	Description
1	PD181-596	100mm Mounting Bracket to LCD
1	PD181-677	100mm x 200mm Adapter Plate
1	PD181-697	Vertical Wall Mount Bracket
1	PD196-269	Installation Instructions
2	PD218-001	8" ty-wrap
1	PD219-020	Tamper Resistant Hex Bit
2	PDIPPBHSCS103250	Pilfer Proof 10-32 x 1/2 Button Head Socket Screw
4	PDIPPHMSM4X76	M4 x .7 x 6mm Long Phillips Head Screw
4	PDIITLW10	#10 Internal Tooth Lock Washer
4	PDIPPHMSM5X810	M5 x .8 x 10mm Long Phillips Head Screw
4	PDIPPHMSM6X116	M6 x 1 x 16mm Long Phillips Head Screw
4	PDIFW10	#10 Flat Washer
4	PDIPPHMSM4710	M4 x .7 x 10mm Long Phillips Head Screw

The PDIFW10 AND PDIPPHMSM4710 washers and screws are included to be used if this adapter plate is being paired with a TV that requires M4 mounting screws.


- Secure PD181-677 adapter plate to TV using:
 (4) PDIPPHMSM5X810 screws for 29" TV or
 (4) PDIPPHMSM6X116 screws for 32" TV
 (Fig. 3)

PDIPPHMSM5X810 (29")
 PDIPPHMSM6X116 (32") **Fig. 3**

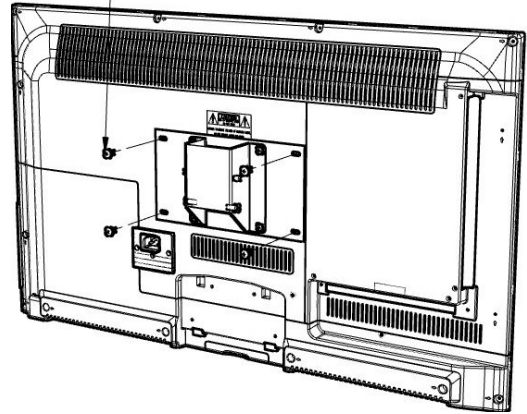

- Mate the PD181-596 mounting bracket to PD181-697 bracket on wall using (2) PDIPPBHSCS103250 pilfer proof button head socket screws. Make sure the pivot bolts are retained in the "L" shaped slot (Fig. 4)

PDIPPBHSCS103250 **Fig. 4**

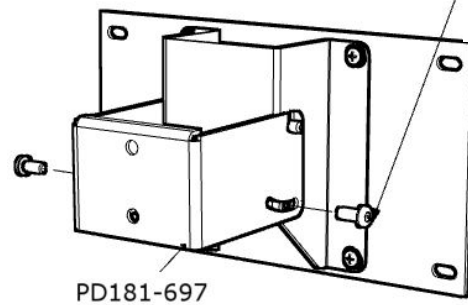

- The TV's tilt can be adjusted by loosening both Pilfer Screws, adjusting tilt, and then tightening.

