

AirFit[™] F20 **Air**Touch F20

Full face mask














User guide English


Fitting / 配戴 / 配戴

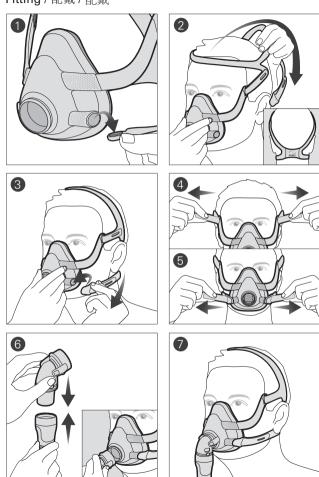

İ

Adjustment / 调整 / 調整



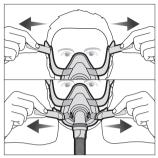


Removal / 取下面罩 / 取下面罩








Disassembly / 取下面罩 / 取下面罩

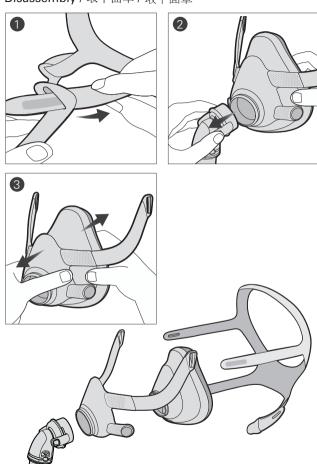


Reassembly / 重新组装 / 重新組裝

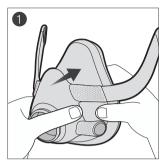

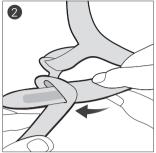

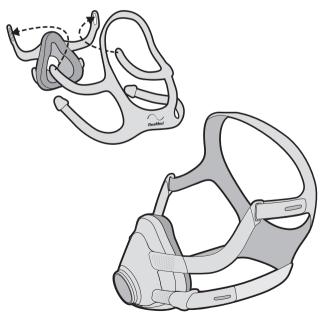

Cleaning the vent / 清洗通气孔 / 清洗通氣孔

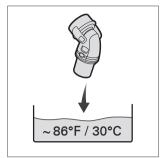





ENGLISH



AirTouch[™] F20

Full face mask

Thank you for choosing the AirFit™ F20/AirTouch™ F20. These masks are identical—except for the interchangeable AirFit F20 silicone cushion and AirTouch F20 foam cushion. This offers two choices for your mask, depending on your preferred comfort, stability and seal.

This document provides the user instructions for:

- AirFit[™] F20/AirFit[™] F20 for Her
- AirTouch[™] F20/AirTouch[™] F20 for Her

These masks are referred to collectively as F20 throughout this manual. These masks may not be available in all countries.

Using this guide

Please read the entire guide before use. When following instructions, refer to the images at the front of the guide.

Intended use

The F20 is a non-invasive accessory used for channeling airflow (with or without supplemental oxygen) to a patient from a positive airway pressure (PAP) device such as a continuous positive airway pressure (CPAP) or bilevel system.

The F20 is:

- to be used by patients weighing more than 66 lb (30 kg) for whom positive airway pressure therapy has been prescribed
- intended for single-patient reuse in the home environment and multipatient reuse in the hospital/institutional environment.

AirTouch F20 cushion

The cushion is intended for single-patient reuse in both home and hospital/institutional environments and recommended to be replaced monthly.

QuietAir

The QuietAir elbow is intended for single-patient reuse in both home and hospital/institutional environments.

△ WARNING

Magnets are used in the lower headgear straps and the frame of the F20. Ensure the headgear and frame is kept at least 2" (50 mm) away from any active medical implant (eg, pacemaker or defibrillator) to avoid possible effects from localised magnetic fields. The magnetic field strength is less than 400 mT.

Contraindications

Use of masks with magnetic components is contraindicated in patients with the following pre-existing conditions:

- a metallic hemostatic clip implanted in your head to repair an aneurysm
- metallic splinters in one or both eyes following a penetrating eye injury.

- The mask must be used under qualified supervision for users who
 are unable to remove the mask by themselves. The mask may not
 be suitable for those predisposed to aspiration.
- The mask must be fitted with the supplied elbow (containing the valve and vent assembly) to ensure safe and functional usage unless otherwise specified. Do not use the mask if the valve or vent assembly is damaged or missing.
- The elbow, valve and vent assembly have specific safety functions. The mask should not be worn if the valve is damaged as it will not be able to perform its safety function. The elbow should be replaced if the valve is damaged, distorted or torn. The vent holes and valve should be kept clear.
- The mask should only be used with CPAP or bilevel devices recommended by a physician or respiratory therapist.
- Avoid connecting flexible PVC products (eg, PVC tubing) directly to any part of the mask. Flexible PVC contains elements that can be damaging to the materials of the mask, and may cause the components to crack or break.

- The mask should not be used unless the device is turned on. Once the mask is fitted, ensure the device is blowing air. Explanation: CPAP and bilevel devices are intended to be used with special masks (or connectors) which have venting to allow continuous flow of air out of the mask. When the device is turned on and functioning properly, new air from the device flushes the exhaled air out through the mask holes. When the device is turned off, the mask valve opens to atmosphere allowing fresh air to be breathed. However, a higher level of exhaled air may be rebreathed when the device is off. This applies to most full face masks for use with CPAP and bilevel devices.
- Follow all precautions when using supplemental oxygen.
- Oxygen flow must be turned off when the CPAP or bilevel device is not operating, so that unused oxygen does not accumulate within the device enclosure and create a risk of fire.
- Oxygen supports combustion. Oxygen must not be used while smoking or in the presence of an open flame. Only use oxygen in well ventilated rooms.
- At a fixed rate of supplemental oxygen flow, the inhaled oxygen concentration varies, depending on the pressure settings, patient breathing pattern, mask, point of application and leak rate. This warning applies to most types of CPAP or bilevel devices.
- The technical specifications of the mask are provided for your clinician to check that they are compatible with the CPAP or bilevel device. If used outside specification or if used with incompatible devices, the seal and comfort of the mask may not be effective, optimum therapy may not be achieved, and leak, or variation in the rate of leak, may affect the CPAP or bilevel device function.
- Discontinue using this mask if you have ANY adverse reaction to the use of the mask, and consult your physician or sleep therapist.
- Using a mask may cause tooth, gum or jaw soreness or aggravate an existing dental condition. If symptoms occur, consult your physician or dentist.
- The F20 line of full face CPAP masks are not intended to be used simultaneously with nebuliser medications that are in the air path of the mask/tube.

- As with all masks, some rebreathing may occur at low CPAP pressures.
- Refer to your CPAP or bilevel device manual for details on settings and operational information.
- · Remove all packaging before using the mask.

Using your mask

When using your mask with ResMed CPAP or bilevel devices that have mask setting options, refer to the Technical specifications section in this user guide for the correct setting.

For a full list of compatible devices for this mask, see the Mask/Device Compatibility List on www.resmed.com/downloads/masks. If you do not have internet access, please contact your ResMed representative.

Use a standard conical connector if pressure readings and/or supplemental oxygen are required.

Fitting

- 1. Twist and pull both magnetic clips away from the frame.
- Ensure that the ResMed logo on the headgear is facing outwards and is upright. With both lower headgear straps released, hold the mask against your face and pull the headgear over your head.
- 3. Bring the lower straps below your ears, and attach the magnetic clip to the frame
- Undo the fastening tabs on the upper headgear straps. Pull the straps evenly until the mask is stable and positioned as shown in the illustration. Reattach the fastening tabs.
- Undo the fastening tabs on the lower headgear straps. Pull the straps evenly until the mask is stable and sits comfortably on the chin. Reattach the fastening tabs.
- Connect the device air tubing to the elbow. Attach the elbow to the mask by pressing the side buttons and pushing the elbow into the mask, ensuring it clicks in on both sides.
- Your mask and headgear should be positioned as shown in the illustration

Adjustment (AirFit F20)

If necessary, slightly adjust the position of the mask for the most comfortable fit. Ensure that the cushion is not creased and the headgear is not twisted.

1. Turn on your device so that it is blowing air.

Adjustment tips:

- With air pressure applied, pull the mask away from your face to allow the cushion to inflate and reposition onto your face.
- To resolve any leaks at the upper part of the mask, adjust the upper headgear straps. For the lower part, adjust the lower headgear straps.
- ✓ Adjust only enough for a comfortable seal. Do not overtighten as this may cause discomfort.

Adjustment (AirTouch F20)

If necessary, slightly adjust the position of the mask for the most comfortable fit. Ensure that the headgear is not twisted.

1. Turn on your device so that it is blowing air.

Adjustment tips:

- To resolve any leaks at the upper part of the mask, adjust the upper headgear straps. For the lower part, adjust the lower headgear straps.
- ✓ Adjust enough for a comfortable seal.

Removal

- 1. Twist and pull both magnetic clips away from the frame.
- 2. Pull the mask away from your face and back over your head.

Disassembly

If the mask is connected to your device, disconnect the device air tubing from the elbow.

- Undo the fastening tabs on the upper headgear straps. Pull the straps out of the frame.
 - Tip: Keep the magnetic clips attached to the lower headgear straps to easily distinguish the upper and lower straps when reassembling.
- 2. Remove the elbow from the mask by pressing the side buttons and pulling the elbow away.
- 3. Hold the side of the frame between the upper and lower arms. Gently pull the cushion away from the frame.

Reassembly

- Attach the cushion to the frame by aligning the circular openings and pushing together until retained.
- With the ResMed logo on the headgear facing outside and upright, thread the upper headgear straps into the frame slots from the inside. Fold them over to secure.

Cleaning your mask at home (AirFit F20)

It is important to follow the steps below to get the best performance out of your mask.

↑ WARNING

- As part of good hygiene, always follow cleaning instructions and use a mild liquid detergent. Some cleaning products may damage the mask, its parts and their function, or leave harmful residual vapours that could be inhaled if not rinsed thoroughly.
- Regularly clean your mask and its components to maintain the quality of your mask and to prevent the growth of germs that can adversely affect your health.

△ CAUTION

Visible criteria for product inspection: If any visible deterioration of a system component is apparent (cracking, discolouration, tears etc.), the component should be discarded and replaced.

Daily/After each use:

- 1. Disassemble the mask according to the disassembly instructions.
- Rinse the frame, elbow and cushion under running water. Clean with a soft brush until dirt is removed.
- 3. Soak the components in warm water (approximately 30°C) with a mild liquid detergent for up to ten minutes.
- 4. Shake the components vigorously in the water for at least one minute.
- 5. Brush the moving parts of the elbow and around the vent holes.
- Brush the areas of the frame where the arms connect, and inside and outside the frame where the elbow connects.
- 7. Rinse the components under running water.
- Leave the components to air dry out of direct sunlight. Make sure to squeeze the arms of the frame to ensure that excess water is removed.

Weekly:

- Disassemble the mask. The magnets can remain attached to the headgear during cleaning.
- 2. Handwash the headgear in warm water (approximately 30°C) with mild liquid detergent.
- Rinse the headgear under running water. Inspect to ensure the headgear is clean and detergent free. Wash and rinse again, if necessary.
- 4. Squeeze the headgear to remove excess water.
- 5. Leave the headgear to air dry out of direct sunlight.

Cleaning your mask at home (AirTouch F20)

It is important to follow the steps below to get the best performance out of your mask. It is recommended to replace your cushion every month.

⚠ WARNING

- As part of good hygiene, always follow cleaning instructions.
 Some cleaning products may damage the mask, its parts and their function, or leave harmful residual vapours that could be inhaled if not rinsed thoroughly.
- Regularly clean your mask and its components to maintain the quality of your mask and to prevent the growth of germs that can adversely affect your health.

⚠ CAUTION

- Visible criteria for product inspection: If any visible deterioration
 of a system component is apparent (cracking, discolouration,
 tears, etc.), the component should be discarded and replaced.
- The cushion must not be submerged in liquid as this may damage the cushion and affect mask performance.
- Discard the cushion if it is submerged in liquid or heavily soiled.

Cleaning the cushion

You do not need to clean the cushion every day. If any visible deterioration of the cushion is apparent, the cushion should be discarded and replaced.

- If required, wipe the outside of the foam cushion with CPAP wipes or similar alcohol-free wipes and allow to dry.
- Do not rinse or submerge in liquid
- Do not expose to domestic cleaning products or cleaning devices
- Do not store or place in direct sunlight.

Cleaning the frame and elbow

Daily:

- Disassemble the mask components according to the disassembly instructions.
- 2. Rinse the frame and elbow under running water.
- 3. Clean with a soft brush until dirt is removed.
- 4. Soak the components in warm water (approximately 30°C) with a mild liquid detergent for up to ten minutes.
- 5. Shake the components vigorously in the water for at least one minute.
- 6. Brush the moving part of the elbow and around the vent holes.
- Brush the areas of the frame where the arms connect, and inside and outside the frame where the elbow connects.
- 8. Rinse the components under running water.
- 9. Leave the components to air dry out of direct sunlight. Make sure to squeeze the arms of the frame to ensure excess water is removed.

Cleaning the headgear

Weekly:

- Disassemble the mask. The magnets can remain attached to the headgear during cleaning.
- Handwash the headgear in warm water (approximately 30°C) with mild liquid detergent.
- Rinse the headgear under running water. Inspect to ensure the headgear is clean and detergent free. Wash and rinse again if necessary.
- 4. Squeeze the headgear to remove excess water.
- 5. Leave the headgear to air dry out of direct sunlight.

Reprocessing the mask between patients

Reprocess this mask when using between patients. Cleaning, disinfection and sterilisation instructions are available on

www.resmed.com/downloads/masks. If you do not have internet access, please contact your ResMed representative.

Troubleshooting (AirFit F20)

Problem/possible cause	Solution			
Mask is uncomfortable.				
Headgear straps are too tight.	The cushion membrane is designed to inflate against your face to provide a comfortable seal with low headgear tension. Adjust straps evenly. Ensure that the headgear straps are not too tight and that the cushion is not creased.			
Mask could be the wrong size.	Talk to your clinician to have your face size checked against F20 fitting template. Note that sizing across different masks is not always the same.			
Mask is too noisy.				
Elbow incorrectly installed or incorrect assembly of the mask system.	Remove the elbow from your mask, then reassemble according to the instructions. Check that the mask is correctly assembled according to the instructions.			
Vent is dirty.	Use a soft bristle brush to clean the vent.			

Solution
Refit your mask according to the instructions. Ensure that you position the cushion correctly on your face before pulling headgear over your head. Do not slide the mask down your face during fitting as this may lead to creasing of the cushion.
Talk to your clinician to have your face size checked against fitting template. Note that sizing across different masks is not always the same.

Troubleshooting (AirTouch F20)

Problem/possible cause	Solution			
Mask is uncomfortable.				
Headgear straps are too tight.	Adjust straps evenly. Ensure that the headgear straps are not too tight.			
Mask could be the wrong size.	Talk to your clinician to have your face size checked against F20 fitting template. Note that sizing across different masks is not always the same.			
Mask is too noisy.				
Elbow incorrectly installed.	Remove the elbow from your mask, then reassemble according to the instructions.			
Vent is dirty.	Use a soft bristle brush to clean the vent.			
Mask leaks around the face.				
Headgear straps are too loose.	Tighten the straps evenly until you have a comfortable seal.			
Cushioned is not positioned correctly.	Repostion mask on your face. If leak continues, turn off device, resettle your cushion and then turn device back on.			
Cushion is nearing the end of its life.	Cushion performance may deteriorate as it nears the end of its life.			
	Adjust your headgear and if the problem persists, replace the cushion.			
Mask could be the wrong size.	Talk to your clinician to have your face size checked against fitting template. Note that sizing across different masks is not always the same.			

The mask contains passive venting to protect against rebreathing. As a result of manufacturing variations, the vent flow rate may vary. Pressure Flow (cm H ₂ O) (L/min) 3 19 10 37 16 48 24 60 30 69 30 69 40 82 AirFit F2O AirTouch F2O Dead space: Empty volume of the mask to the end of the swivel. The mask deadspace varies according to cushion size. Therapy pressure 3 to 40 cm H ₂ O 3 to 40 cm H ₂ O Closed to atmosphere: Drop in pressure measured (nominal) at 50 L/min 0.2 cm H ₂ O 0.6 cm H ₂ O Resistance with Anti Asphyxia Valve (AAV) copen to atmosphere lnspiration at 50 L/min: 0.6 cm H ₂ O 0.7 cm H ₂ O Anti Asphyxia Valve (AAV) open-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Sound: DECLARED DUAL-NUMBER NOISE EMISSION VALUES in accordance with ISO 4871. The A-weighted sound power level (with Standard elbow) 20 dBA 21 dBA Pressure level (with QuietAir elbow) 21 dBA 21 dBA Pressure level (with QuietAir elbow) 22 dBA 22 dBA Pressure level (with QuietAir elbow) 13 dBA 13 dBA Pressure level (with QuietAir elbow) 13 dBA 13 dBA Pressure level (with QuietAir elbow) 13 dBA 13 dBA	Technical specifications				
Pressure (cm H ₂ O) (L/min) 3 19 10 37 10 37 16 48 24 60 30 69 40 82 AirFit F2O AirTouch F2O Dead space: Empty volume of the mask to the end of the swivel. The mask deadspace varies according to cushion size. Therapy pressure Resistance with Anti Asphyxia Valve (AAV) closed to atmosphere: Drop in pressure measured (nominal) at 50 L/min at 100 L/min 0.2 cm H ₂ O 0.6 cm H ₂ O 0.6 cm H ₂ O 0.6 cm H ₂ O 0.7 cm H ₂ O Anti Asphyxia Valve (AAV) open-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Sound: DECLARED DUAL-NUMBER NOISE EMISSION VALUES in accordance with ISO 4871. The A-weighted sound prossure level of the mask at a distance of 1 m, with uncertainty of 3 dBA, are shown Power level (with Standard elbow) Pressure level (with Standard elbow) Pressure level (with Standard elbow) Pressure level (with Standard elbow) 24 dBA Pressure level (with Standard elbow) Pressure level (with Standard elbow	3 7				he vent
Community Comm		flow rate may vary.	·		
AirFit F20 AirTouch F20 Dead space: Empty volume of the mask to the end of the swivel. The mask deadspace varies according to cushion size. Therapy pressure Resistance with Anti Asphyxia Valve (AAV) closed to atmosphere: Drop in pressure measured (nominal) at 50 L/min at 100 L/min 0.6 cm H20 O.6 cm H20 O.6 cm H20 O.6 cm H20 AirTouch F20 AirTouch F20 AirTouch F20 O.7 cm H20 O.8 cm H20 O.8 cm H20 O.8 cm H20 AirTouch F20 O.8 cm H20 O.9 cm H20 O.9 cm H20 O.9 cm H20 AirTouch F20 O.9 cm H20 O.9 cm H20 O.9 cm H20 O.9 cm H20 Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Sound: DECLARED DUAL-NUMBER NOISE EMISSION VALUES in accordance with ISO 4871. The A-weighted sound power level and the A-weighted sound pressure level of the mask at a distance of 1 m, with uncertainty of 3 dBA, are shown Power level (with Standard elbow) Power level (with QuietAir elbow) Pressure level (with Standard elbow) Power level (with Standard elbow) Power level (with Standard elbow) Power level (with Standard elbow) Pressure level (with Standard elbow)	100				
Dead space: Empty volume of the mask to the end of the swivel. The mask deadspace varies according to cushion size. Therapy pressure Resistance with Anti Asphyxia Valve (AAV) closed to atmosphere: Drop in pressure measured (nominal) at 50 L/min at 100 L/min 0.6 cm H ₂ 0 0.6 cm H ₂ 0 0.7 cm H ₂ 0 0.7 cm H ₂ 0 Anti Asphyxia Valve (AAV) open-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Sound: DECLARED DUAL-NUMBER NOISE EMISSION VALUES in accordance with ISO 4871. The A-weighted sound power level and the A-weighted sound pressure level of the mask at a distance of 1 m, with uncertainty of 3 dBA, are shown Power level (with Standard elbow) Pressure level (with Standard elbow) 20 AirFit F20 AirTouch F20 240 mL (Large) 281 mL (Large) 3 to 40 cm H ₂ 0 3 to 40	80			/	
AirFit F20 AirTouch F20 Dead space: Empty volume of the mask to the end of the swivel. The mask deadspace varies according to cushion size. Therapy pressure 3 to 40 cm H20 3 to 40 cm H20 Resistance with Anti Asphyxia Valve (AAV) closed to atmosphere: Drop in pressure measured (nominal) at 50 L/min 0.6 cm H20 0.6 cm H20 Resistance with Anti Asphyxia Valve (AAV) open to atmosphere lnspiration at 50 L/min: 0.6 cm H20 0.7 cm H20 0.7 cm H20 Anti Asphyxia Valve (AAV) open-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Sound: DECLARED DUAL-NUMBER NOISE EMISSION VALUES in accordance with ISO 4871. The A-weighted sound power level and the A-weighted sound pressure level of the mask at a distance of 1 m, with uncertainty of 3 dBA, are shown Power level (with Standard elbow) 21 dBA 21 dBA Pressure level (with Standard elbow) 22 dBA 22 dBA	Cuatro		-	-	
AirFit F20 AirTouch F20 Dead space: Empty volume of the mask to the end of the swivel. The mask deadspace varies according to cushion size. Therapy pressure 3 to 40 cm H20 3 to 40 cm H20 Resistance with Anti Asphyxia Valve (AAV) closed to atmosphere: Drop in pressure measured (nominal) at 50 L/min 0.6 cm H20 0.6 cm H20 Resistance with Anti Asphyxia Valve (AAV) open to atmosphere lnspiration at 50 L/min: 0.6 cm H20 0.7 cm H20 0.7 cm H20 Anti Asphyxia Valve (AAV) open-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Sound: DECLARED DUAL-NUMBER NOISE EMISSION VALUES in accordance with ISO 4871. The A-weighted sound power level and the A-weighted sound pressure level of the mask at a distance of 1 m, with uncertainty of 3 dBA, are shown Power level (with Standard elbow) 21 dBA 21 dBA Pressure level (with Standard elbow) 22 dBA 22 dBA	25 60				
AirFit F20 AirTouch F20 Dead space: Empty volume of the mask to the end of the swivel. The mask deadspace varies according to cushion size. Therapy pressure 3 to 40 cm H20 3 to 40 cm H20 Resistance with Anti Asphyxia Valve (AAV) closed to atmosphere: Drop in pressure measured (nominal) at 50 L/min 0.6 cm H20 0.6 cm H20 Resistance with Anti Asphyxia Valve (AAV) open to atmosphere lnspiration at 50 L/min: 0.6 cm H20 0.7 cm H20 0.7 cm H20 Anti Asphyxia Valve (AAV) open-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Sound: DECLARED DUAL-NUMBER NOISE EMISSION VALUES in accordance with ISO 4871. The A-weighted sound power level and the A-weighted sound pressure level of the mask at a distance of 1 m, with uncertainty of 3 dBA, are shown Power level (with Standard elbow) 21 dBA 21 dBA Pressure level (with Standard elbow) 22 dBA 22 dBA	£ 40		++++		
AirFit F20 AirTouch F20 Dead space: Empty volume of the mask to the end of the swivel. The mask deadspace varies according to cushion size. Therapy pressure Besistance with Anti Asphyxia Valve (AAV) closed to atmosphere: Drop in pressure measured (nominal) at 50 L/min 0.2 cm H20 0.6 cm H20 0.6 cm H20 Resistance with Anti Asphyxia Valve (AAV) open to atmosphere Inspiration at 50 L/min: 0.7 cm H20 Anti Asphyxia Valve (AAV) open-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Sound: DECLARED DUAL-NUMBER NOISE EMISSION VALUES in accordance with ISO 4871. The A-weighted sound power level and the A-weighted sound pressure level of the mask at a distance of 1 m, with uncertainty of 3 dBA, are shown Power level (with Standard elbow) 20 AlirFit F20 AirTouch F20 AirTouch F20 AirTouch F20 Ati Aur Ban Air Ban Ban Air Ban	§ 20				
AirFit F20					
AirFit F20 AirTouch F20 Dead space: Empty volume of the mask to the end of the swivel. The mask deadspace varies according to cushion size. Therapy pressure 3 to 40 cm H₂0 3 to 40 cm H₂0 Resistance with Anti Asphyxia Valve (AAV) closed to atmosphere: Drop in pressure measured (nominal) at 50 L/min 0.2 cm H₂0 0.2 cm H₂0 0.2 cm H₂0 Resistance with Anti Asphyxia Valve (AAV) open to atmosphere Inspiration at 50 L/min: 0.6 cm H₂0 0.6 cm H₂0 0.6 cm H₂0 Expiration at 50 L/min: 0.7 cm H₂0 0.7 cm H₂0 Anti Asphyxia Valve (AAV) open-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Sound: DECLARED DUAL-NUMBER NOISE EMISSION VALUES in accordance with ISO 4871. The A-weighted sound power level and the A-weighted sound pressure level of the mask at a distance of 1 m, with uncertainty of 3 dBA, are shown Power level (with Standard elbow) 30 dBA 30 dBA Power level (with QuietAir elbow) 21 dBA 21 dBA 21 dBA Pressure level (with Standard elbow) 22 dBA 22 dBA	2 4 6 8 10 12 14		2 34 36 38 40	40	02
end of the swivel. The mask deadspace varies according to cushion size. Therapy pressure 3 to 40 cm H_2O 3 to 40 cm H_2O Resistance with Anti Asphyxia Valve (AAV) closed to atmosphere: Drop in pressure measured (nominal) at 50 L/min 0.2 cm H_2O 0.2 cm H_2O 0.6 cm H_2O 0.7 cm H_2O 0.8 cm H_2O 0.9 cm H_2O		1.	AirFit F20	AirToud	h F20
end of the swivel. The mask deadspace varies according to cushion size. Therapy pressure 3 to 40 cm H_2O 3 to 40 cm H_2O Resistance with Anti Asphyxia Valve (AAV) closed to atmosphere: Drop in pressure measured (nominal) at 50 L/min 0.2 cm H_2O 0.2 cm H_2O 0.6 cm H_2O 0.7 cm H_2O 0.8 cm H_2O 0.9 cm H_2O	Dead space: Empty vol	ume of the mask to the	240 mL (Large)	281 mL (Large)
Therapy pressure 3 to 40 cm H_2O 3 to 40 cm H_2O Resistance with Anti Asphyxia Valve (AAV) closed to atmosphere: Drop in pressure measured (nominal) 0.2 cm H_2O 0.2 cm H_2O at 100 L/min 0.6 cm H_2O 0.6 cm H_2O Resistance with Anti Asphyxia Valve (AAV) open to atmosphere Inspiration at 50 L/min: 0.6 cm H_2O 0.6 cm H_2O Expiration at 50 L/min: 0.7 cm H_2O 0.7 cm H_2O 0.7 cm H_2O Anti Asphyxia Valve (AAV) open-to-atmosphere pressure 40 cm 40	end of the swivel. The m	ask deadspace varies		,	
Resistance with Anti Asphyxia Valve (AAV) closed to atmosphere: Drop in pressure measured (nominal) at 50 L/min 0.2 cm H_20 0.2 cm H_20 0.6 cm H_20 at 100 L/min 0.6 cm H_20 0.7 cm H_20 0.8 cm H_20 0.8 cm H_20 0.8 cm H_20 0.8 cm H_20 0.9	according to cushion size	e.			
closed to atmosphere: Drop in pressure measured (nominal) at 50 L/min 0.2 cm H_2O 0.2 cm H_2O 0.6 cm H_2O 0.7 cm H_2O 0.8 cm H_2O 0.9 cm H_2O	Therapy pressure		3 to 40 cm H ₂ O	3 to 40 c	m H ₂ O
measured (nominal) at 50 L/min	Resistance with Anti A	Asphyxia Valve (AAV)			
at 50 L/min 0.2 cm H_2O 0.2 cm H_2O 0.6 cm H_2O at 100 L/min 0.6 cm H_2O 0.7 cm H_2O 0.8 cm H_2O 0.9	closed to atmosphere:	Drop in pressure			
at 100 L/min					
Resistance with Anti Asphyxia Valve (AAV) open to atmosphere Inspiration at 50 L/min: 0.6 cm H₂0 0.6 cm H₂0 0.7 cm H₂0	,			_	
open to atmosphere Inspiration at 50 L/min: 0.6 cm H_20 0.6 cm H_20 Expiration at 50 L/min: 0.7 cm H_20 0.7 cm H_20 Anti Asphyxia Valve (AAV) open-to-atmosphere pressure $\leq 3 \text{ cm H}_20$ $\leq 3 \text{ cm H}_20$ Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure $\leq 3 \text{ cm H}_20$ $\leq 3 \text{ cm H}_20$ Sound: DECLARED DUAL-NUMBER NOISE EMISSION VALUES in accordance with ISO 4871. The A-weighted sound power level and the A-weighted sound pressure level of the mask at a distance of 1 m, with uncertainty of 3 dBA, are shown Power level (with Standard elbow) 30 dBA 30 dBA Power level (with QuietAir elbow) 21 dBA 21 dBA Pressure level (with Standard elbow) 22 dBA 22 dBA	at 100 L/min		0.6 cm H ₂ O 0.6 cm H ₂ O		1 ₂ 0
Inspiration at 50 L/min: 0.6 cm H_2O 0.6 cm H_2O 0.7 cm H_2O 4 atmosphere pressure Anti Asphyxia Valve (AAV) closed-to- ≤3 cm H_2O ≤3 cm H_2O atmosphere pressure Sound: DECLARED DUAL-NUMBER NOISE EMISSION VALUES in accordance with ISO 4871. The A-weighted sound power level and the A-weighted sound pressure level of the mask at a distance of 1 m, with uncertainty of 3 dBA, are shown Power level (with Standard elbow) 30 dBA 30 dBA Power level (with QuietAir elbow) 21 dBA 21 dBA Pressure level (with Standard elbow) 22 dBA 22 dBA		Asphyxia Valve (AAV)			
Expiration at 50 L/min: 0.7 cm H_2O 0.7 cm H_2O 0.7 cm H_2O Anti Asphyxia Valve (AAV) open-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Anti Asphyxia Valve (AAV) closed-to-atmosphere pressure Sound: DECLARED DUAL-NUMBER NOISE EMISSION VALUES in accordance with ISO 4871. The A-weighted sound power level and the A-weighted sound pressure level of the mask at a distance of 1 m, with uncertainty of 3 dBA, are shown Power level (with Standard elbow) 30 dBA 30 dBA Power level (with QuietAir elbow) 21 dBA 21 dBA Pressure level (with Standard elbow) 22 dBA 22 dBA					
Anti Asphyxia Valve (AAV) open-to- $ \le 3 \text{ cm H}_20 $			- -		
	Expiration at 50 L/min:				-2-
Anti Asphyxia Valve (AAV) closed-to- $\leq 3 \text{ cm H}_2\text{O}$ $\leq 3 \text{ cm H}_2\text{O}$ atmosphere pressure Sound: DECLARED DUAL-NUMBER NOISE EMISSION VALUES in accordance with ISO 4871. The A-weighted sound power level and the A-weighted sound pressure level of the mask at a distance of 1 m, with uncertainty of 3 dBA, are shown Power level (with Standard elbow) 30 dBA 30 dBA Power level (with QuietAir elbow) 21 dBA 21 dBA Pressure level (with Standard elbow) 22 dBA 22 dBA		≤3 cm H ₂ O	≤3 cm H	20	
atmosphere pressure Sound: DECLARED DUAL-NUMBER NOISE EMISSION VALUES in accordance with ISO 4871. The A-weighted sound power level and the A-weighted sound pressure level of the mask at a distance of 1 m, with uncertainty of 3 dBA, are shown Power level (with Standard elbow) 30 dBA 30 dBA Power level (with QuietAir elbow) 21 dBA 21 dBA Pressure level (with Standard elbow) 22 dBA 22 dBA	· · ·				
Sound: DECLARED DUAL-NUMBER NOISE EMISSION VALUES in accordance with ISO 4871. The A-weighted sound power level and the A-weighted sound pressure level of the mask at a distance of 1 m, with uncertainty of 3 dBA, are shown Power level (with Standard elbow) 30 dBA 30 dBA Power level (with QuietAir elbow) 21 dBA 21 dBA Pressure level (with Standard elbow) 22 dBA 22 dBA	1 7				
ISO 4871. The A-weighted sound power level and the A-weighted sound pressure level of the mask at a distance of 1 m, with uncertainty of 3 dBA, are shown Power level (with Standard elbow) 30 dBA 30 dBA Power level (with QuietAir elbow) 21 dBA 21 dBA Pressure level (with Standard elbow) 22 dBA 22 dBA					
the mask at a distance of 1 m, with uncertainty of 3 dBA, are shown Power level (with Standard elbow) 30 dBA 30 dBA Power level (with QuietAir elbow) 21 dBA 21 dBA Pressure level (with Standard elbow) 22 dBA 22 dBA					
Power level (with Standard elbow) 30 dBA 30 dBA Power level (with QuietAir elbow) 21 dBA 21 dBA Pressure level (with Standard elbow) 22 dBA 22 dBA					
Power level (with QuietAir elbow) 21 dBA 21 dBA Pressure level (with Standard elbow) 22 dBA 22 dBA	· · · · · · · · · · · · · · · · · · ·				
Pressure level (with Standard elbow) 22 dBA 22 dBA					
	Pressure level (with QuietAir elbow) 13 dBA 13 dBA				

Environmental conditions	Operating temperature: 5°C to 40°C Operating humidity: 15% to 95% non-condensing Storage and transport temperature: -20°C to +60°C Storage and transport humidity: up to 95% non-condensing
Gross dimensions	Mask fully assembled with elbow assembly (no headgear) 154 mm (H) \times 159 mm (W) \times 147 mm (D)
International Commission on Non-Ionising Radiation Protection (ICNIRP)	Magnets used in this mask are within ICNIRP guidelines for general public use.
Service life	The service life of the F20 mask system is dependent on the intensity of usage, maintenance, and environmental conditions to which the mask is used or stored. As this mask system and its components are modular in nature, it is recommended that the user maintain and inspect it on a regular basis, and replace the mask system or any components if deemed necessary or according to the 'visual criteria for product inspection' in the 'Cleaning your mask at home' section of this guide. Refer to the 'Mask components' section of this guide for information of how to order replacement parts.
Mask setting options Device Setting	For AirSense, AirCurve or S9: Select 'Full Face'. For other devices: Select 'MIR FULL' (if available), otherwise select 'FULL FACE' as the mask option.
Full Face	

Notes:

- This product is not made with PVC or phthalates such as DEHP, DBP or BBP.
- This product is not made with natural rubber latex.
- The manufacturer reserves the right to change these specifications without notice.

Storage

Ensure that the mask is thoroughly clean and dry before storing it for any length of time. Store the mask in a dry place out of direct sunlight.

Disposal

This mask does not contain any hazardous substances and may be disposed of with your normal household refuse.

Symbols

The following symbols may appear on your product or packaging:

REF CATALOG NUMBER	Catalogue number	LOT BATCH CODE	Batch code
HUMDITY LIMITATION	Humidity limitation	20°C 140°F -4°F TEMPERATURE	Temperature limitation
FRAGILE, HANDLE WITH CARE	Fragile, handle with care	NOT MADE WITH NATURAL PRIMITER LATER	Not made with natural rubber latex
MANUFACTURER	Manufacturer	EC REP	European Authorised Representative
KEEP DRY	Keep away from rain	THIS WAY UP	This way up
Full Face Mask	Full face mask	Dover herry Full Face	Device setting - Full Face
S	Size - small	M	Size - medium
0	Size - large		
\triangle	Indicates a Warning or Cautio special measures for the safe		you to a possible injury or explains



Caution, consult accompanying documents



Do not use if package damaged



Single patient reuse



Discard once signs of deterioration forms



Do not expose to direct sunlight



Replace once signs of deterioration forms



Do not use domestic cleaner or domestic cleaning devices



Clean with alcohol-free wipes only



Do not use alcohol wipes



Keep dry and away from liquids



Do not submerge in liquids

Consumer Warranty

ResMed acknowledges all consumer rights granted under the EU Directive 1999/44/EC and the respective national laws within the EU for products sold within the European Union.

Mask components / 面罩组件 / 面罩組件

		AirFit F20 / AirTouch F20	AirFit F20 for Her / AirTouch F20 for Her
Α	QuietAir - Elbow / 弯头 / 彎頭	63494	63494
1	Valve (AAV) / 阀门(AAV) / 閥門(AAV)		
2	Vent / 通气孔 / 通氣孔		
3	Side buttons / 侧按钮 / 側按鈕		
4	Swivel / 万向轴 / 萬向軸		
В	Frame/框架/框架	_	_
C	AirFit F20 - Cushion / 护垫/護墊	63467 (S) 63468 (M) 63469 (L)	63467 (S) 63468 (M) 63469 (L)
	AirTouch F20 - Cushion / 护垫 / 護墊	63028 (S) 63029 (M) 63030 (L)	63028 (S) 63029 (M) 63030 (L)
D	Headgear / 头带 / 頭帶	63470 (S) 63471 (Std) 63472 (L)	63473 (Std)
5	Magnetic clips / 磁性夹 / 磁性夾		
6	Lower headgear straps / 下部头带 / 下部頭帶		
7	Upper headgear straps / 上部头带 / 上部頭帶		
A+B	B+C		
	AirFit F20 - Frame system / 框架系统 / 框架系統	63460 (S) 63461 (M) 63462 (L)	63463 (S) 63464 (M)
	AirTouch F20 - Frame system / 框架系统 / 框架系統	63021 (S) 63022 (M) 63023 (L)	63024 (S) 63025 (M)

		AirFit F20 / AirTouch F20	AirFit F20 for Her / AirTouch F20 for Her
A+B	+C+D		
	AirFit F20 - Complete system / 完整系统 / 完整系統	APAC: 63420 (S) 63421 (M) 63422 (L)	APAC: 63423 (S) 63424 (M)
		ANZ: 63430 (S) 63431 (M) 63432 (L)	ANZ: 63433 (S) 63434 (M)
		CHINA: 63435 (S) 63436 (M) 63437 (L)	CHINA: 63438 (S) 63439 (M)
	AirTouch F20 - Complete system / 完整系统 / 完整系統	APAC/ANZ: 63051 (S) 63052 (M) 63053 (L)	
		CHINA: 63066 (S) 63067 (M) 63068 (L)	
E	Standard Elbow / 标准弯头 / 標準彎管	63476	63476

S: Small / 小号 / 小號


M: Medium / 中号 / 中號

L: Large / 大号 / 大號

Std: Standard / 标准 / 標準





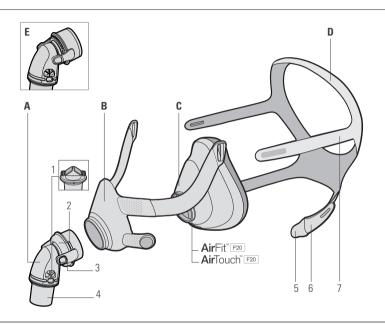



ResMed Ltd

1 Elizabeth Macarthur Drive Bella Vista NSW 2153 Australia

See ResMed.com for other ResMed locations worldwide. AirFit, AirTouch, AirSense, AirCurve and QuietAir are trademarks and/or registered trademarks of the ResMed family of companies. For patent and other intellectual property information, see ResMed.com/ip. © 2017 ResMed Ltd. 638117/1 2017-09

