



Technical Information – Jumpers, Connectors and Memory MCX Series (6633-, 6638-, 6685-, 6700-xxx) System Host Board

Layout Diagram

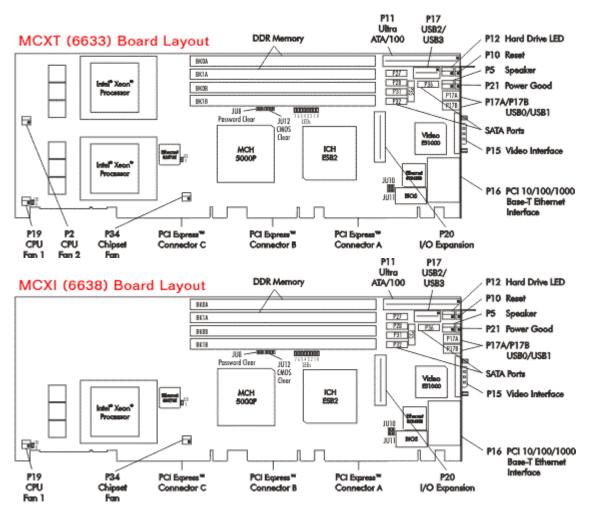



TRENTON Technology Inc. 2350 Centennial Drive • Gainesville, Georgia 30504 Sales (800) 875-6031 • Phone (770) 287-3100 • Fax (770) 287-3150

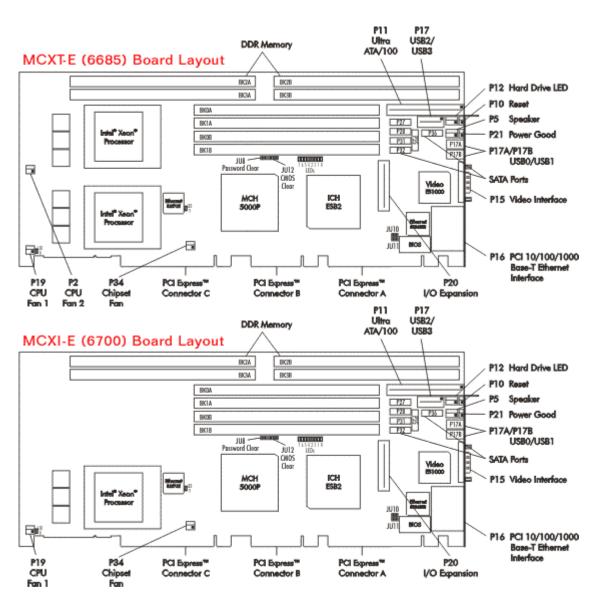

Jumpers & LEDs

The setup of the configuration jumpers on the SHB is described below. An asterisk (*) indicates the default value of each jumper.

NOTE: For two-position jumpers (3-post), "RIGHT" is toward the bracket end of the board; "LEFT" is toward the processor.

JU8 Password Clear

Install for one power-up cycle to reset the password to the default (null password). Remove for normal operation. \ast

JU10/11 System Flash ROM Operational Modes

The Flash ROM has two programmable sections: the Boot Block for "flashing" in the BIOS and the Main Block for the executable BIOS and PnP parameters. Normally only the Main Block is updated when a new BIOS is flashed into the system.

JU10 JU11



All Blocks Write Enabled Boot Block Write Protected Block 2-16 Write Protected Remove * Install Remove

Remove * Remove Install

JU12 CMOS Clear

Install on the LEFT to clear. Install on the RIGHT to operate. *

NOTE: To clear the CMOS, power down the system and install the jumper on the LEFT. Wait for at least two seconds, move the jumper back to the RIGHT and turn the power on. When AMIBIOS displays the "CMOS Settings Wrong" message, press F1 to go into the BIOS Setup Utility, where you may reenter your desired BIOS settings, load optimal defaults or load failsafe defaults.

JU13 AT Power Supply Operation

Install when using an AT-style system power supply. Remove for all other system power supplies.*

Jumpers & LEDs (continued)

Ethernet LEDs

Each of the two Ethernet interfaces on the SHB's I/O bracket has two LEDs for status indication and an RJ-45 network connector.

LED/Connector	Description
Activity LED	Green LED which indicates network activity. This is the upper LED on the LAN connector (i.e., toward the memory sockets).
Off	No current network transmit or receive activity
On (flashing)	Indicates network transmit or receive activity.
Speed LED	Green LED which identifies the connection speed. This is the lower LED on the LAN connector (i.e., toward the edge connectors).
Off	Indicates a valid link at 1000-Mb/s
On	Indicates a valid link at 100-Mb/s.
RJ-45 Network Connectors	The RJ-45 network connector requires a Connectors category 5 (CAT5) unshielded twisted-pair (UTP) 2-pair cable for a 100-Mb/s network connection or a category 3 (CAT3) or higher UTP 2-pair cable for a 10-Mb/s network connection. A category 5e (CAT5e) or higher UTP 2-pair cable

Backplane LAN LED

The backplane LAN LED (LED11) is a green LED located near PCI Express edge connector C and directly above the lower left anchor of the MCH heat sink. This LED indicates the status of communication between the SHB and the backplane as shown below:

LED Status	Description
Off	Indicates the LAN is inactive and link communications have not been established.
On (flashing)	Indicates that data is being transferred between the SHB and the backplane.
On (solid)	Indicates the LAN has a valid link and is ready for data transfers.

is recommended for a 1000-Mb/s (Gigabit) network connection.

Power On LED

The Power On LED (LED11) is a red LED located at the center bottom of the SHB and is used to indicate the presence



TRENTON Technology Inc. 2350 Centennial Drive • Gainesville, Georgia 30504 Sales (800) 875-6031 • Phone (770) 287-3100 • Fax (770) 287-3150

of the VCC voltage needed by the MCXX's DDR memory. When the LED is on this indicates that VCC_DDR is present and at an acceptable level to drive the SHBs memory DIMMs.

POST Code LEDs

As the POST (Power On Self Test) routines are performed during boot-up, test codes are displayed on Port 80 POST code LEDs 1 through 8, which are located in the center of the board to the right of the processor and are numbered from top (1) to bottom (8). Refer to the board layout diagram for the exact location of the POST code LEDs.

These POST codes may be helpful as a diagnostic tool. Specific error codes are listed in Appendix A - BIOS Messages section of the MCXX Technical Reference Manual, along with a chart to interpret the LEDs into hexadecimal format.



Jumpers & LEDs (continued)

CPU Throttling LED

The CPU throttling LED (LED9), which is located in the upper left corner of the MCXX, indicates the status of CPU thermal shutdown, as shown below:

LED Status	Description
Off	Indicates the CPU is operating within acceptable thermal levels.
On (flashing)	Indicates the CPU is throttling down to a lower operating speed due to rising CPU temperature.
On (solid)	Indicates the CPU has reached the thermal shutdown threshold limit. The SHB is still operating, but a thermal shutdown may soon occur.

NOTE: When a thermal shutdown occurs, the LED will stay on in systems using non- ATX/EPS power supplies. The CPU will cease functioning, but power will still be applied to the SHB. In systems with ATX/EPS power supplies, the LED will turn off when a thermal shutdown occurs because system power is removed via the ACPI soft control power signal S5. In this case, all SHB LEDs will turn off; however, stand-by power will still be present.

Connectors

NOTE: Pin 1 on the connectors is indicated by the square pad on	P19 - CPU Fan 13 pin single row header, Molex #22-23-2031			
the PCB.	F	PIN SIGNAL		
P2 - CPU Fan 2		1 Gnd		
3 pin single row header, Molex #22-23-2031		2 +12V		
PIN SIGNAL		3 Fan Tach		
1 Gnd				
2 +12V		O Expansion Mezz controlled impedan		
3 FanTach		e #MIS-038-01-FD-		
	PIN	SIGNAL	PIN	SIGNAL
P5 - Speaker Port Connector 4 pin single row header, Amp #640456-4	1	+12V	2	+5V_STANDBY
PIN SIGNAL	3	NC	4	+5V_STANDBY
1 Speaker Data	5	NC	6	+5V_DUAL
2 Key	7	NC	8	+5V_DUAL
3 Gnd	9	NC	10	NC
4 +5V	11	NC	12	NC
	13	ICH_SMI#	14	ICH_RCIN#
P10 - External Reset Connector	15	ICH_SIOPME#	16	ICH_A20GATE
2 pin single row header, Amp #640456-2	17	Gnd	18	Gnd
PIN SIGNAL	19	L_FRAME#	20	L_AD3
1 External Reset In (Low Active)	21	L_DRQ1#	22	L_AD2
2 Gnd	23	L_DRQ0#	24	L_AD1



Connec	tors (Continued)						
	wis (Conunucu)			25	SERIRQ	26	L_AD0
	P11 - ATA/100 Hard Drive Connector		27	Gnd	28	Gnd	
40 pin du	al row header, Amp #1	-176	01610-3	29	PCLK14SIO	30	PCLK33LPC
PIN	SIGNAL	PIN	SIGNAL	31	Gnd	32	Gnd
1	Reset	2	Gnd	33	SMBDATA_RESUME	34	IPMB_DAT
3	Data 7	4	Data 8	35	SMBCLK_RESUME	36	IPMB_CLK
5	Data 6	6	Data 9	37	SALRT#_RESUME	38	IPMB_ALRT#
7	Data 5	8	Data 10	39	Gnd	40	Gnd
9	Data 4	10	Data 11	41	EXP_CLK100	42	EXP_RESET#
11	Data 3	12	Data 12	43	EXP_CLK100#	44	ICH_WAKE#
13	Data 2	14	Data 13	45	Gnd	46	Gnd
15	Data 1	16	Data 14	47	C_PE_TXP4	48	C_PE_RXP4
17	Data 0	18	Data 15	49	C_PE_TXN4	50	C_PE_RXN4
19	Gnd	20	NC	51	Gnd	52	Gnd
21	DRQ 0	22	Gnd	53	C_PE_TXP3	54	C_PE_RXP3
23	IOW	24	Gnd	55	C_PE_TXN3	56	C_PE_RXN3
25	IOR	26	Gnd	57	Gnd	58	Gnd
27	IORDY	28	SELPDP	59	C_PE_TXP2	60	C_PE_RXP2
29	DACK 0	30	Gnd	61	C_PE_TXN2	62	C_PE_RXN2
31	IRQ 14	32	NC	63	Gnd	64	Gnd
33	Add 1	34	PCBL DET*	65	C_PE_TXP1	66	C_PE_RXP1
35	Add 0	36	Add 2	67	C_PE_TXN1	68	C_PE_RXN1
37	CS 1P	38	CS 3P	69	Gnd	70	Gnd
39	IDEACTP	40	Gnd	71	+3.3V	72	+5V
* For AT	A/66 and ATA/100 driv	ves,	which should be set	73	+3.3V	74	+5V
	Select for proper speed e detected, pin definitio			75	+3.3V	76	+5V
	P12 - Hard Drive LED Connector 4 pin single row header, Amp #640456-4			Power Good LED ingle row header, Amp #6	5404	56-2	
PIN	SIGNAL			PIN SIGNAL			
1	LED +			1 LED -			
2	LED -			2 LED +			
3	LED -						
			ATA PORT 0 ertical connector, Molex =	#674	491-0031		



Connectors (Continued)

P15 - Video Interface Connector 15 pin HD15 connector, Kycon #K31X-E15S-N

PIN	SIGNAL	PIN	SIGNAL	PIN	SIGNAL
1	Red	6	Gnd	11	NC
2	Green	7	Gnd	12	EEDI
3	Blue	8	Gnd	13	HSYNC
4	NC	9	+5V	14	VSYNC
5	Gnd	10	Gnd	15	EECS

P16 - 10/100/1000Base-T Ethernet Connector - LAN1/LAN2

Dual RJ-45 connector, Pulse #JG0-0024NL Each individual RJ-45 connector is defined as follows:

PIN SIGNAL

- 1 TRP1+
- 2 TRP1-
- 3 TRP2+
- 4 TRP3+
- 5 TRP3-
- 6 TRP2-
- 7 TRP4+
- 8 TRP4-

P17 - Universal Serial Bus (USB) Connector

8 pin dual row header, Molex #702-46-08-01 (+5V fused with self-resetting fuses)

PIN	SIGNAL	PIN	SIGNAL
1	+5V - USB2	2	+5V - USB3
3	USB2-	4	USB3-
5	USB2+	6	USB3+
7	Gnd - USB2	8	Gnd - USB3
917A - U	niversal Serial Bus	s(USB)	Connector

P17A - Universal Serial Bus(USB) Connector USB vertical connector, Molex #47500-0001

(+5V fused with self-resetting fuse)

PIN SIGNAL

+5V - USB0

PIN SIGNAL PIN SIGNAL

1	Gnd	5	RX-
2	TX+	6	RX+
3	TX-	7	Gnd

4 Gnd

P28 - SATA PORT1

7 pin vertical connector, Molex #67491-0031

PIN	SIGNAL	PIN	SIGNAL
1	Gnd	5	RX-
2	TX+	6	RX+
3	TX-	7	Gnd
4	Gnd		

P31 - SATA PORT2

7 pin vertical connector, Molex #67491-0031

PIN	SIGNAL	PIN	SIGNAL
1	Gnd	5	RX-
2	TX+	6	RX+
3	TX-	7	Gnd
4	Gnd		

P32 - SATA PORT3

7 pin vertical connector, Molex #67491-0031

PIN	SIGNAL	PIN	SIGNAL
1	Gnd	5	RX-
2	TX+	6	RX+
3	TX-	7	Gnd
4	Gnd		

P34 - Chipset Fan

3 pin single row header, Molex #22-23-2031

PIN SIGNAL

- 1 Gnd
- 2 +12V
- 3 FanTach



1 +5V 2 USE	7 - USB0 30-	P35 - SATA PORT4 7 pin vertical connector, Molex #67491-0031					
3 USE	30+	PIN	SIGNAL	PIN	SIGNAL		
4 Gnd	l - USB0	1	Gnd	5	RX-		
		2	TX+	6	RX+		
Connector	<u>s (Continued)</u>	3	TX-	7	Gnd		
USB vertical	ersal Serial Bus(USB) Connector connector, Molex #47500-0001 <i>v</i> ith self-resetting fuses)	4 P36 - SA T	Gnd				
PIN SIG	NAL		cal connector,	Molex #674	91-0031		
1 +5V	7 - USB1	PIN	SIGNAL				
2 USE	31-	1	Gnd				
3 USE	31+	2	TX+				
4 Gnd	l - USB1	3	TX-				
		4	Gnd				

Memory

The four-channel Double Data Rate (DDR2) memory interface on the MCXT and MCXI SHBs supports up to 16GB of Fully Buffered DIMM (FB-DIMM) memory; the MCXT-E and MCXI-E models support up to 32GB of FB-DIMM memory.

FB-DIMMs have "Advanced Memory Buffer" chips that provide enhanced signal integrity and improved error detection that help reduce soft memory errors. FB-DIMM memory technology improves overall system reliability by extending the current ECC capability to include protection of command and address data. FD-DIMMs feature automatic retries when a memory error is detected, which results in uninterrupted system operation in the event of transient errors.

An MCX-series SHB uses industry standard 72-bit wide ECC gold finger FB-DIMM memory modules in four (MCXT/MCXI) or eight (MCXT-E/MCXI-E) 240-pin sockets. The FB-DIMMs must be PC2-4200 or PC2-5300 (DDR2-533 or DDR2-667) and comply with the JEDEC Rev. 2.0 specifications.

The following dual-rank FB-DIMM sizes are supported:

FB-DIMM Size	DIMM Type	ECC
512MB	Registered	64M x 72
1GB	Registered	128M x 72
2GB	Registered	256M x 72
4GB	Registered	512M x 72



A minimum of one 512MB FB-DIMM is required and must be populated in DIMM socket BK0A.

NOTE: With the bracket end of the board to the right, the four FB-DIMM sockets available on the MCXT and MCXI SHBs are numbered BK0A, BK1A, BK0B and BK1B, from top to bottom. On the extended-memory MCXT-E and MCXI-E SHBs, there are an additional four FB-DIMM sockets. The upper sockets are BK2A and BK2B, from left to right, and the lower sockets are BK3A and BK3B. These socket definitions are illustrated in the board layouts. All memory modules must have gold contacts.

NOTE: To maximize memory interface speed and bandwidth, and to take full advantage of the four-channel memory interface of the SHB's memory controller hub, the FB-DIMMs in socket banks 0A and 1A must be identical with respect to manufacturing, speed, timing and organization. Likewise, FB-DIMMs used in sockets 0B and 1B must be identical. FB-DIMMs in socket banks contained within the same memory channel, i.e., 0A and 2A do not have to be identical.

A minimum of one 512MB FB-DIMM is required and must be populated in DIMM socket BK0A. When using more that one FB-DIMM, you must populate the memory sockets in multiples of two in order to maximize the speed and performance of the memory interface. The following table explains the DDR2 FB-DIMM population rules:

FB-DIMM POPULATION CONFIGURATION	FB	FB-DIMM Sockets (MCXT, MCXE)				FB-DIMM Sockets (MCXT-E, MCXI-E)			
	BANK 0A	BANK 1A	BANK 0B	BANK 1B	BANK 2A	BANK 2B	BANK 3A	BANK 3B	
Single Module	FB-DIMM	Empty	Empty	Empty	Empty	Empty	Empty	Empty	
Two Modules	FB-DIMM	FB-DIMM	Empty	Empty	Empty	Empty	Empty	Empty	
Four Modules	FB-DIMM	FB-DIMM	FB-DIMM	FB-DIMM	Empty	Empty	Empty	Empty	
Six Modules	FB-DIMM	FB-DIMM	FB-DIMM	FB-DIMM	FB-DIMM	FB-DIMM	Empty	Empty	
Eight Module	FB-DIMM	FB-DIMM	FB-DIMM	FB-DIMM	FB-DIMM	FB-DIMM	FB-DIMM	FB-DIMM	