

SUPPLEMENTAL

Gazebo Kits Oval Base Instructions www.alansfactoryoutlet.com

PHOTOS FOR

OVAL BASE.

* OVAL FLOOR INSTRUCTIONS *


Gazebo Kits Oval Base Instructions www.alansfactoryoutlet.com



SET OUTSIDE 2 JOIST FIRST
THEN FILL IN REMAINING
JOIST APPROX. 24" ON CTR.
OUTSIDE TO OUTSIDE OF 2X8
JOIST MEAS. IS BASED ON
GAZEBO SIZE.

EXAMPLE: JOIST SHOULD BE
SPACED 48" ON 12'X 16'.

*12'x18' shown in
photos.*

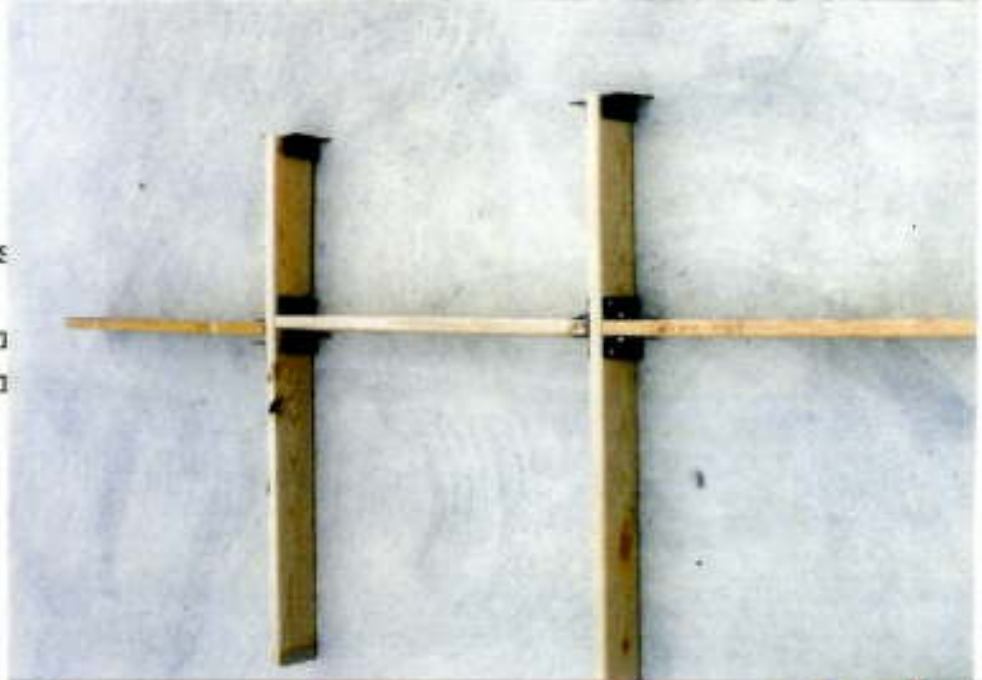

PREASSEMBLE END SUB ASSEMBLY
AS SHOWN. ATTACH ANGLE BRACKETS
TO ENDS OF LONGEST 2X6 JOIST.
2X6 JOIST WITH DRILLED HOLES AT
EACH END GOES IN CTR. AND SHORT
2X6 JOIST ATTACH ON OUTSIDE.



CENTER END SUB ASSEMBLY ON
2X8 JOIST AND ATTACH WITH
8 PCS 3/8 X 2" LAGS.

NOTE: KEEP FLUSH ON BOTTOM
OF 2X8 JOIST.

* OVAL FLOOR - CONT'D *

Gazebo Kits Oval Base Instructions www.alansfactoryoutlet.com

FASTEN SHORT 2X6 TO 2X8
JOIST - CENTER BETWEEN

TO ACCEPT
2X4 SPOKES.

NOTE LOCATION OF JOIST WITH
NOTCH TO ACCEPT STEP. ALSO
SKIRT IS NOTCHED TO ACCEPT
STEP.

INSTALLED SKIRT AND STEP
SHOWN.

NOTE: 2X6 JOIST SHOULD BE
FLUSH ON BOTTOM OF SKIRT.



* OVAL FLOOR - CONT'D *

Gazebo Kits Oval Base Instructions www.alansfactoryoutlet.com

ALL POSTS AT CORNERS
BEFORE INSTALLING 2X4
RAILS AND FILLERS.

BETWEEN CORNERS ARE
LAPPED ON TOP OF FLOOR AND
SECURED DOWN WITH 4-4"
SCREWS. DO NOT SCREW TO
CORNER POSTS UNTIL RAILINGS ARE
INSTALLED.



SEE UP PHOTO OF SPOKES
AND FILLERS.



SEE UP PHOTO OF CORNER
CONNECTION.



* OVAL FLOOR - CONT'D *

Gazebo Kits Oval Base Instructions www.alansfactoryoutlet.com

FLOOR SECTIONS PARTIALLY INSTALLED. INSTALL FLOOR SECTION WITH STEP CUT OUT FIRST. FLOOR SECTION SHOULD BE BACK AGAINST POST AND FLUSH ON 2 SIDES OF STEP. FASTEN WITH 2pcs 3" SCREWS. DO NOT SCREW OTHER SECTIONS UNTIL ALL ARE LAID IN AND PROPERLY ALIGNED.



CLOSE UP PHOTO OF INSTALLED STEP.



BASE SHOWN WITH CENTER RING INSTALLED.

