


STEP (10) CAPPING THE GAZEBO

10

AFTER FELT IS LOCATED ON ROOF JOINTS, START THE CAPPER INSTALLATION BY PLACING IN PAIRS (ONE RIGHT HAND - ONE LEFT HAND) OVER THE FELT. THE LEFT HAND CAPPERS HAVE AN ANGLE CUT ON THE SIDE. FOR THE CAPPER INSTALLATION DESCRIBED BELOW REFERENCE FIGURES 24 & 25. START CAPPERS AT BOTTOM OF ROOF BY PLACING "BOTTOM CAPPER # 1" FLUSH WITH BOTTOM ROOF EDGE. FASTEN THE CAPPERS TO THE SHINGLES USING 1 1/4" LONG GALVANIZED ROOFING NAILS OR CUSTOMER CHOICE OF APPROPRIATE FASTENER. PLACE THE FASTENER AT THE UPPER PORTION OF THE CAPPER SO THE NEXT CAPPER WILL COVER THE NAIL HEAD. NEXT PLACE "BOTTOM CAPPER # 2" FLUSH WITH BOTTOM EDGE AND ON TOP OF # 1. NOW MOVE UP TO THE NEXT ROW OF SHINGLES PLACING THE "REGULAR CAPPERS" JUST BELOW SHINGLES. USE THE REGULAR CAPPERS ALL THE WAY TO "TOP CAPPER # 2", THEN USE "TOP CAPPER # 1" OVER # 2 TO FINISH THE CAPPER INSTALLATION. FINALLY, LOCATE THE CUPOLA ON THE TOP CHIMNEY (SEE FIGURE 26) AND FASTEN TO THE CHIMNEY RING WITH (4) FINISH NAILS EQUALLY SPACED AROUND THE CUPOLA PERIMETER.

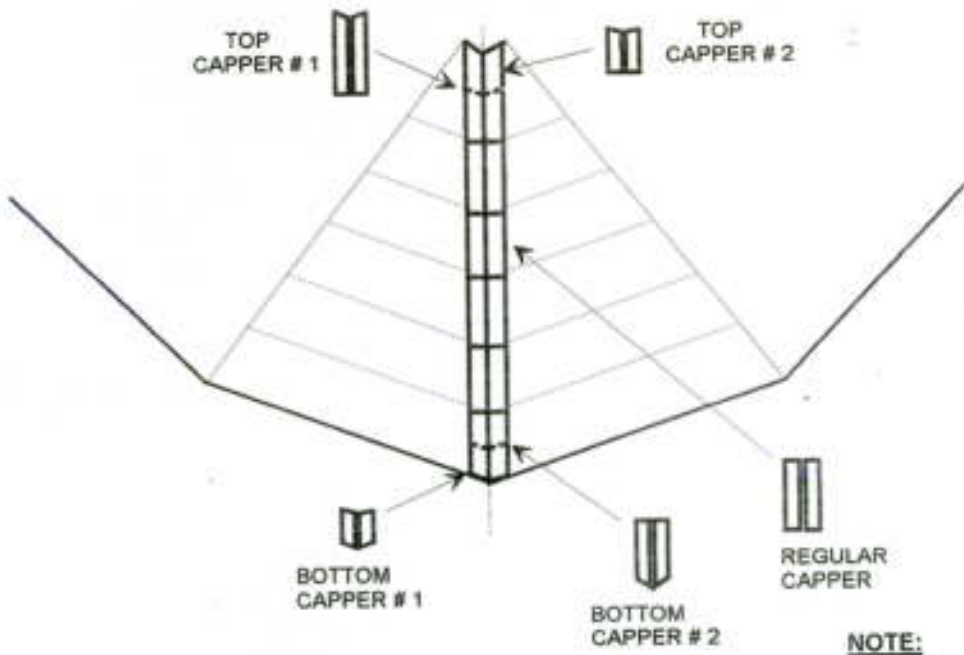

NOTE:
ALWAYS HAVE HELP AND EXERCISE PROPER SAFETY PROCEDURES WHEN INSTALLING THE ROOF COMPONENTS

NOTE:
FOR BOTTOM CAPPER # 1, TURN THIN END DOWN. ALL OTHER CAPPERS, THICK END IS DOWN.

FIGURE 24: CAPPING THE GAZEBO



FIGURE 25: CAPPERS & CUPOLA