


To Install i-Design 3.3 in Windows 7 . . .

To install i-Design in Windows 7, follow these steps:

1. Go to Control Panel, then User Accounts.
2. Select "Change User Account Settings," then move the Security level bar DOWN.
3. Click OK.
4. Reboot the computer.
5. Install i-Design. When installing the setup file, select "Run as Administrator" if allowable.
6. Once installed, return computer to original security settings.
7. Reboot the computer.

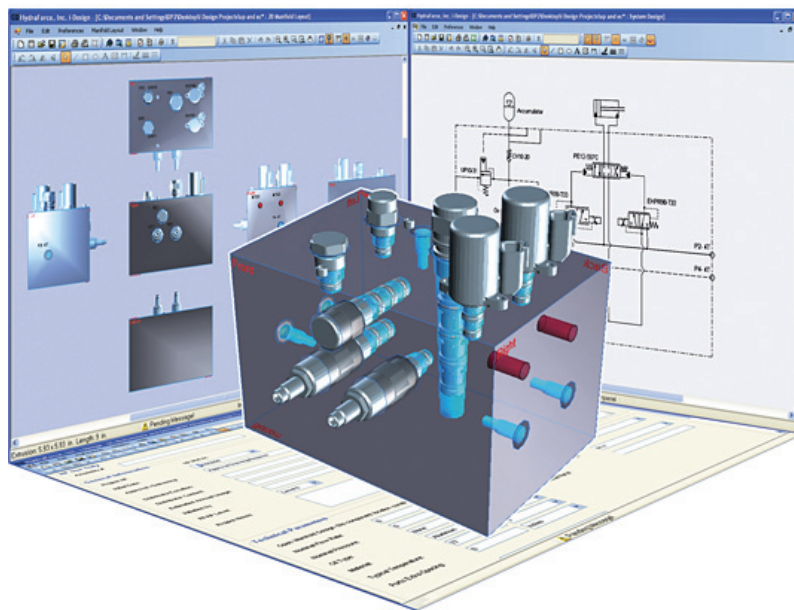

HydraForce is committed to continuing innovation in the design, manufacture, and application of hydraulic and electro-hydraulic control components and systems for the material handling and heavy-duty mobile equipment OEM industries.

For detailed information and specifications, visit www.hydraforce.com or contact your HydraForce representative.

HYDRAFORCE, INC.
500 Barclay Blvd. • Lincolnshire, IL
60069 USA Ph: 847 793 2300
E-Mail: sales@hydraforce.com
ISO 9001 & QS 9000
Member: National Fluid Power Assn.

HYDRAFORCE HYDRAULICS, LTD.
St. Stephens Street • Birmingham B6 4RG
England Ph: 0121 333 1800
E-Mail: sales@hydraforce.com
ISO 9001 & ISO 14001
Member: British Fluid Power Assn.

**HYDRAFORCE HYDRAULIC SYSTEMS
(CHANGZHOU) Co. LTD.**
388 W. Huanghe Road, Building 15A
GDH Changzhou Airport Indl Park, Xinbei District
Changzhou, China 213022
Ph: +86 186 2190 9398