


installation tips

zellige from clé



sort
blend all boxes for shade variation

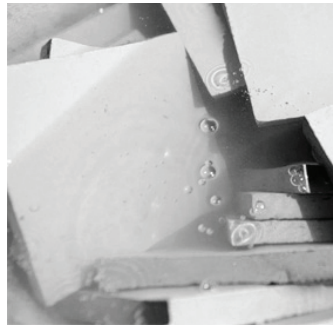

soak
in water for 1 - 2 minutes



prep
dust free and level walls



trowel
one layer of thinset on the wall



butter
another layer of thinset on the back of the tile




place
tiles one by one into wall adhesive



space
zellige's uneven edges require wedge spacers



snap
with tile cutter to cut

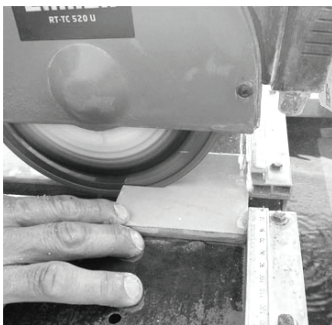

slice
with a diamond blade, if preferred



grout
match glaze color



polish
be sure not to leave grout film



for mosaics
mounted for easy installation



IMPORTANT: this guide is provided as a courtesy and is not intended to take the place of your tile contractor's expertise.
for questions contact 415-887-9011 or contact@cletile.com