




## RUSTIC CEDAR 9 SUMMARY INSTALLATION GUIDE




**CAUTION: ALWAYS INSTALL PRODUCT FROM LEFT TO RIGHT AND REMEMBER THAT POLYMER UNDERGOES EXPANSION/CONTRACTION DUE TO TEMPERATURE VARIATIONS. FOR A BETTER LOOK WE RECOMMEND TO INSTALL PRODUCT ON FLAT SURFACES (EX: PLYWOOD PANELS OR OSB PANELS). IF SECTIONS ARE INSTALLED ON A WALL WITH FURRINGS, FURRING STRIPS MUST BE INSTALLED OBLIQUELY AND SPACED BY 8"(20,32CM).**

FRANÇAIS  
AU VERSO


1

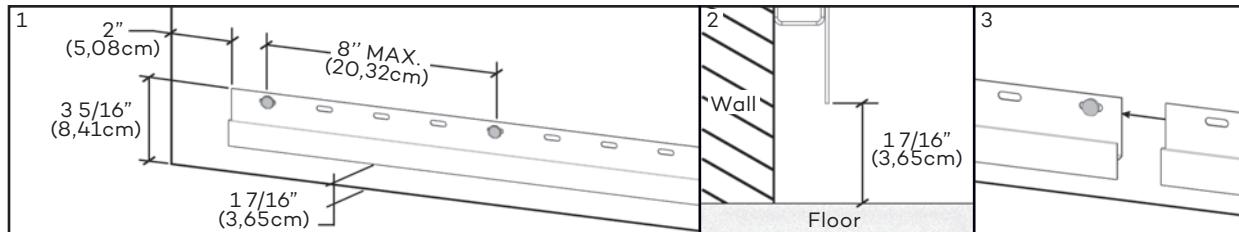

2

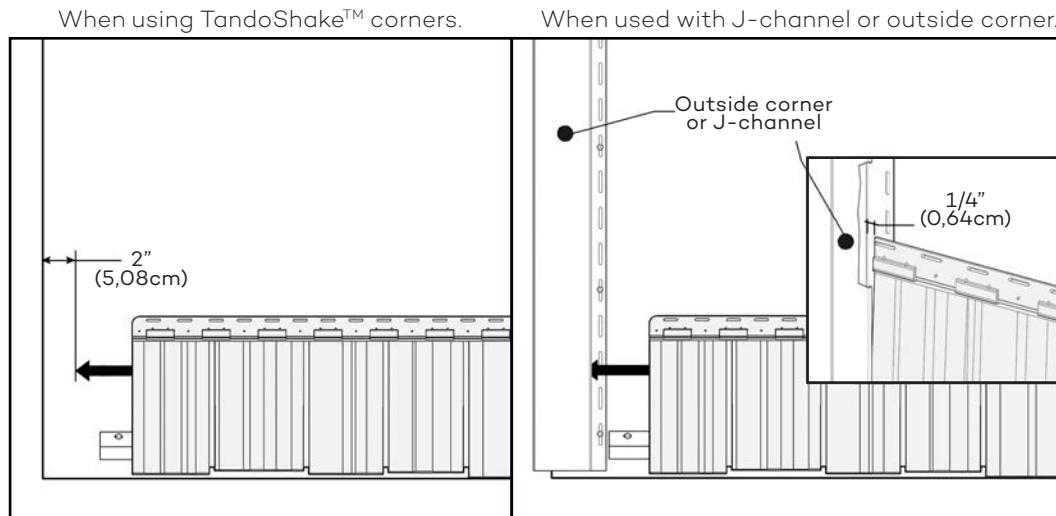


3

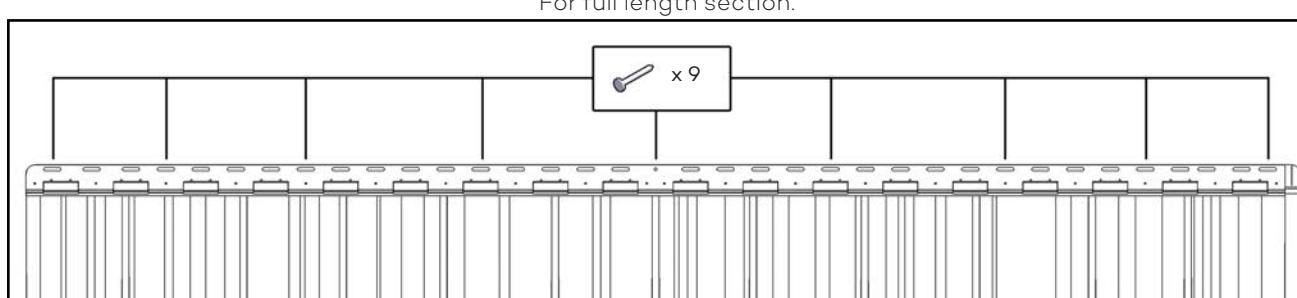

Maximum 8"(20,32cm) between each nails.


4

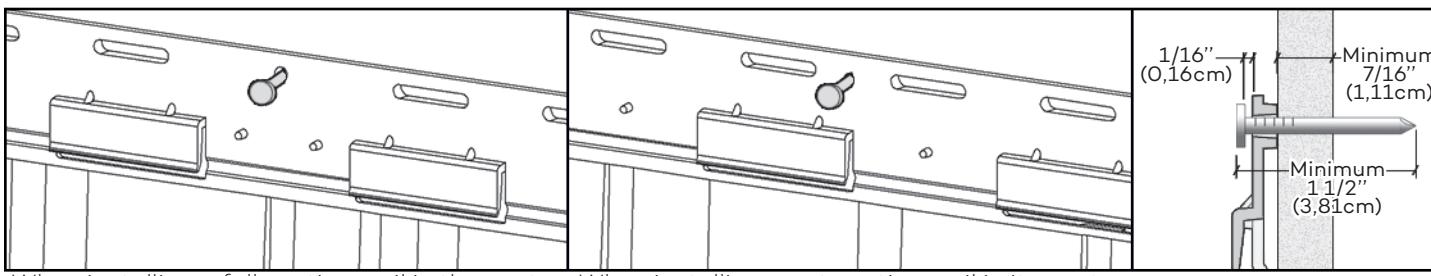

When installing a full section, nail in the center hole first.

When installing a cut section, nail in its center as shown.

5

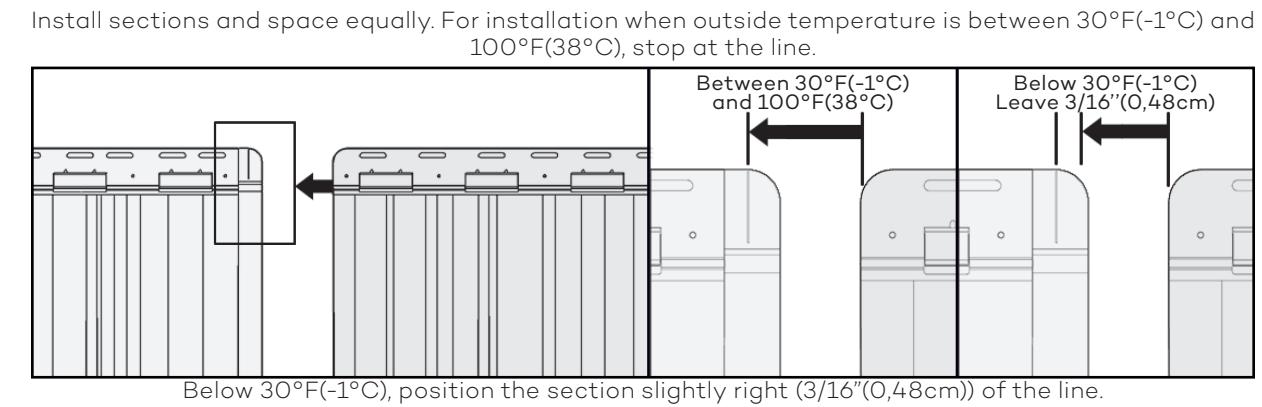


Below 30°F(-1°C), position the section slightly right (3/16"(0,48cm)) of the line.

6




Alternate the joints between rows.

7

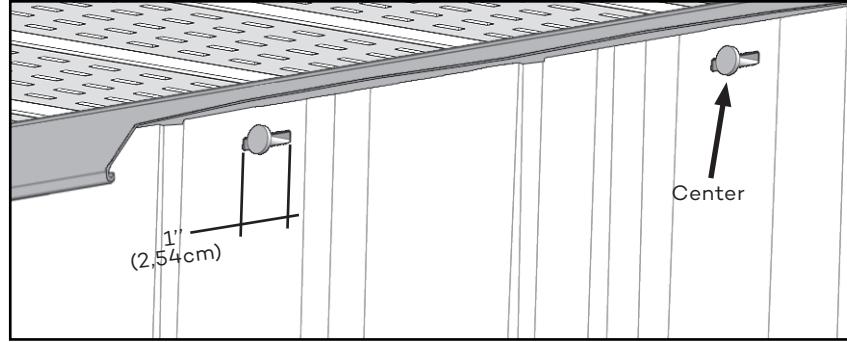

If you need to attach the section in an area other than the installation hole, create a 1"(2,54 cm) long slot to allow nailing. Always nail in the middle of the slot.

8

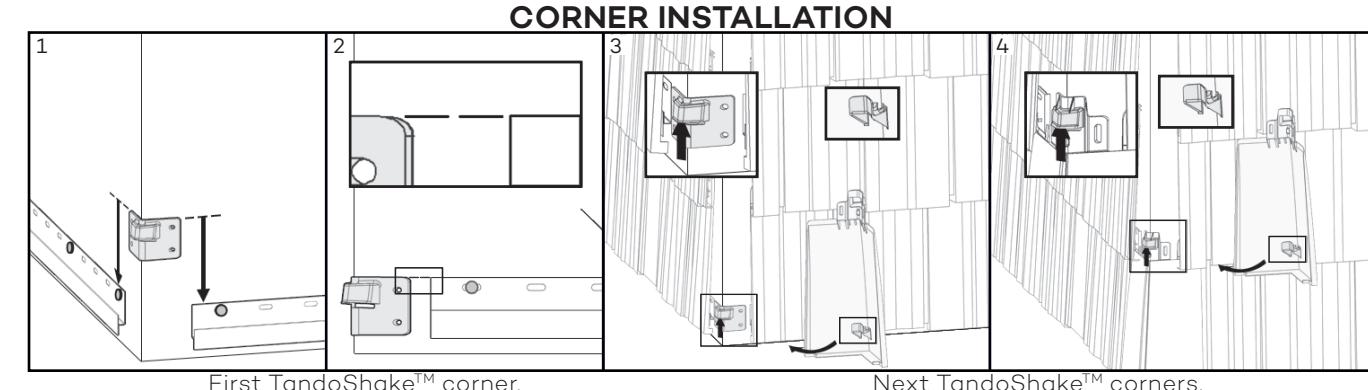

First TandoShake™ corner.

Next TandoShake™ corners.




## RUSTIC CEDAR 9 GUIDE INSTALLATION SOMMAIRE




**ATTENTION: TOUJOURS INSTALLER LE PRODUIT DE LA GAUCHE VERS LA DROITE ET NE JAMAIS OUBLIER QUE LES POLYMÈRES SUBISSENT DE L'EXPANSION/CONTRACTION DUES AUX VARIATIONS DE TEMPERATURE. POUR UNE MEILLEURE APPARENCE, NOUS RECOMMANDONS D'INSTALLER LE PRODUIT SUR DES SURFACES PLANES (EX: PANNEAUX DE CONTRE-PLAQUE OU OSB). SI INSTALLER SUR UN MUR LATTE, INSTALLER LES LATTES À L'OBLIQUE ET AUX 8"(20,32CM).**


1

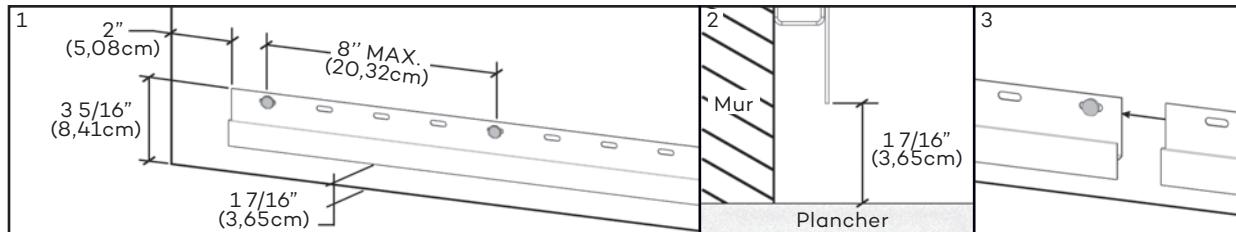

2

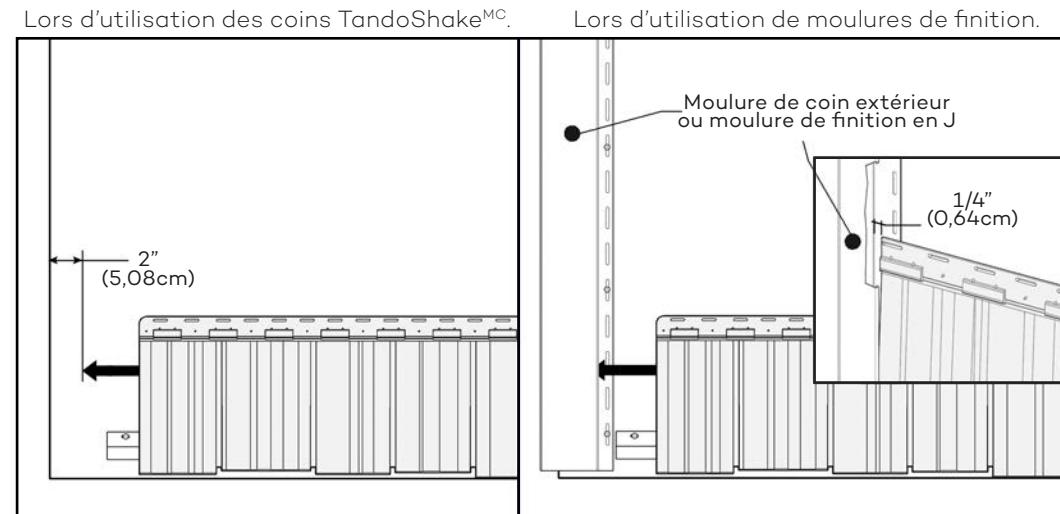


3

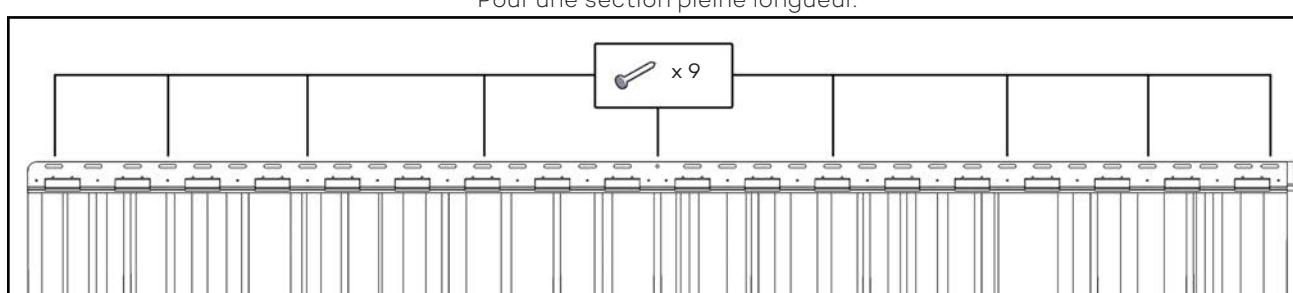

8"(20,32cm) maximum entre chaque clous.


4

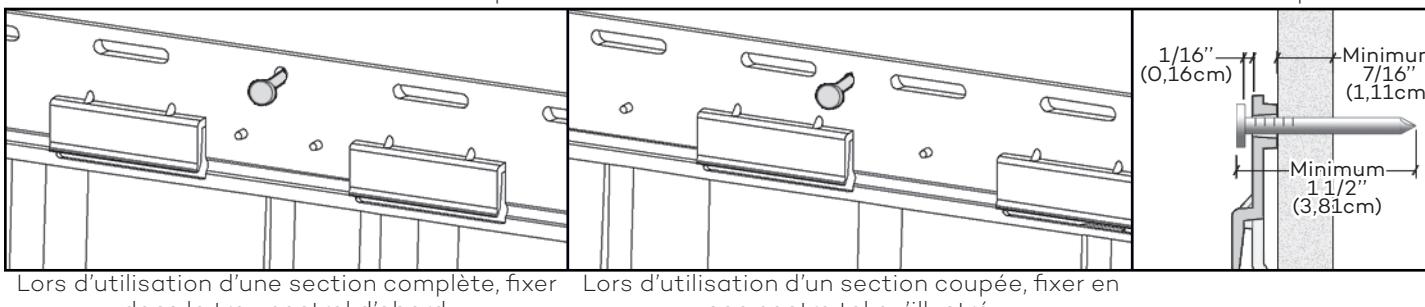

Lors d'utilisation d'une section complète, fixer dans le trou central d'abord.  
Lors d'utilisation d'un section coupée, fixer en son centre tel qu'illusté.

5

Installer les sections à la même distance de l'une à l'autre. Pour installation à une température extérieure entre 30°F(-1°C) et 100°F(38°C), arrêter à la ligne.

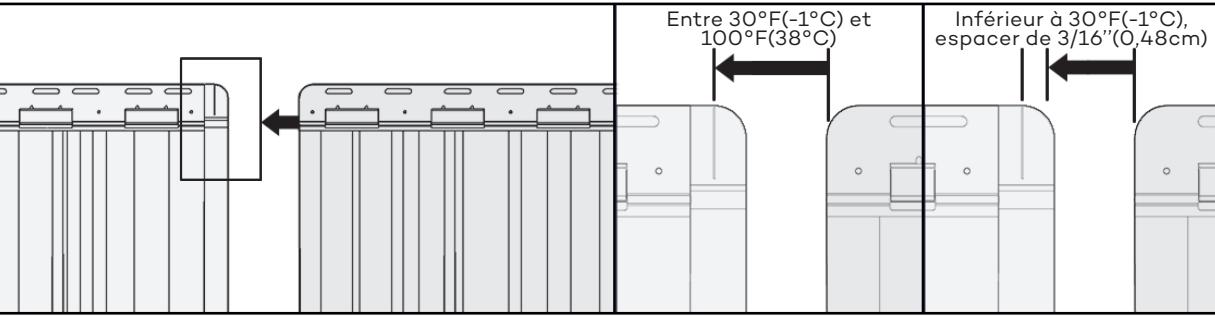


6




Alternater les joints entre les rangées.

7

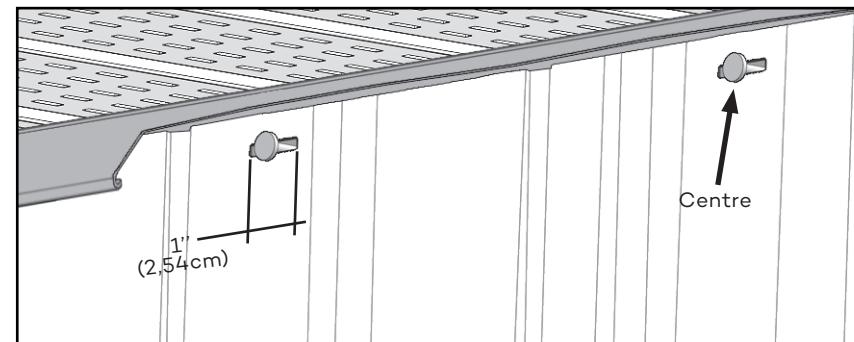

Si vous devez fixer les sections dans un endroit autre que dans les trous de fixation, faire une fente de 1"(2,54 cm) pour permettre de clouer. Toujours clouer au centre de la fente.

8

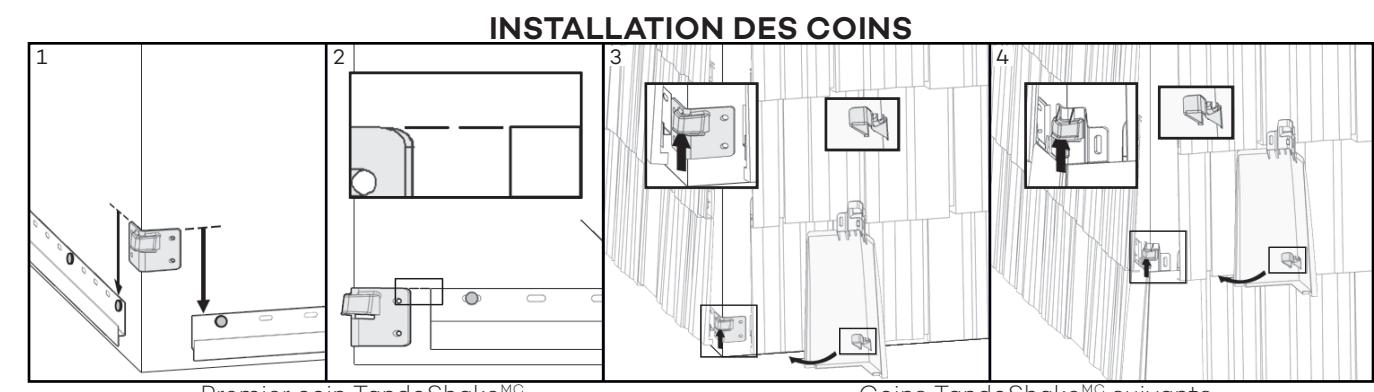

Premier coin TandoShake<sup>MC</sup>.

Coins TandoShake<sup>MC</sup> suivants.