
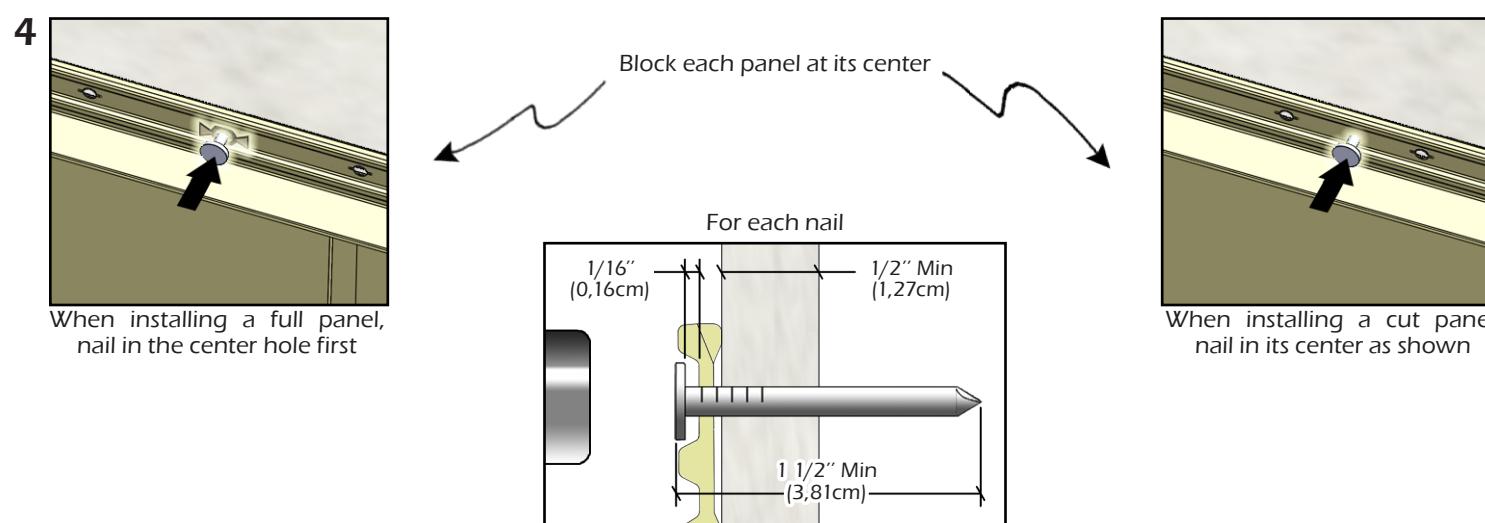
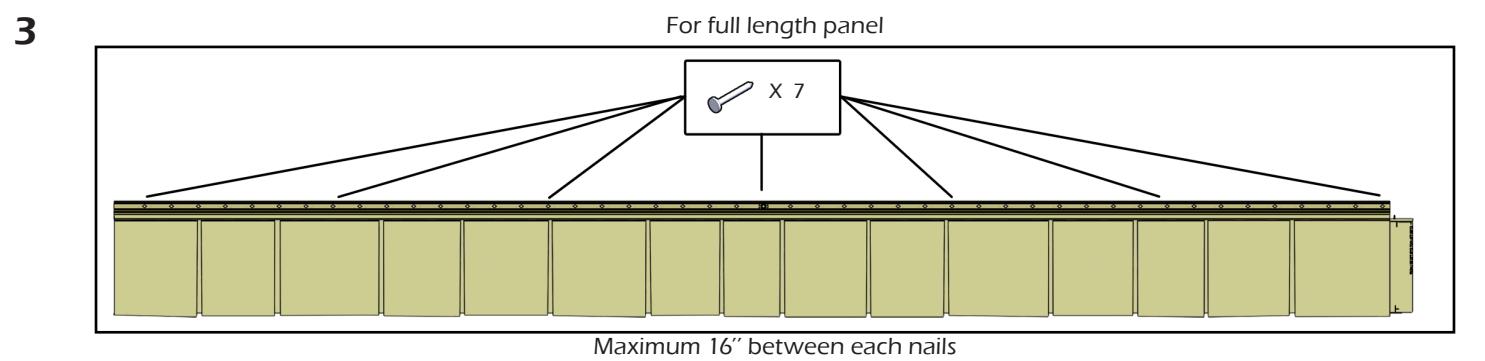
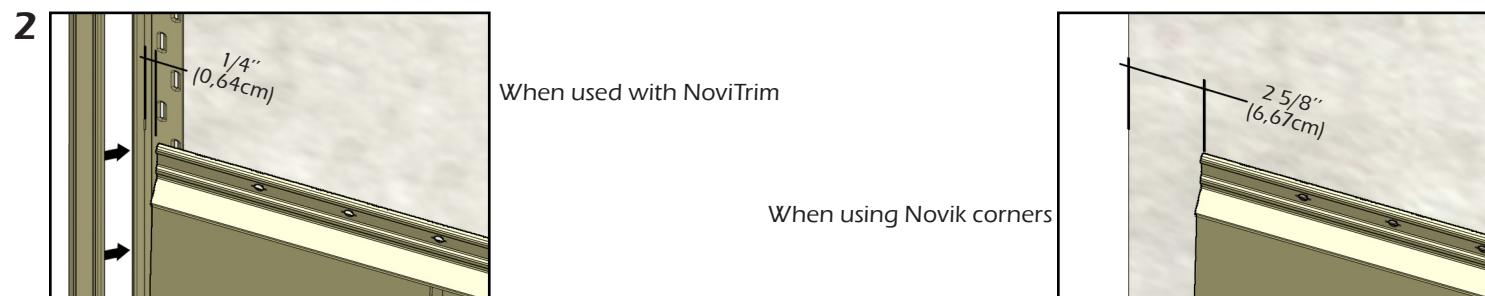


# NOVIKSHAKE™ RS8 - ROUGH SAWN 8' SHAKE SUMMARY INSTALLATION GUIDE


**CAUTION: ALWAYS INSTALL PRODUCT FROM LEFT TO RIGHT AND REMEMBER THAT POLYMER UNDERGOES EXPANSION/CONTRACTION DUE TO TEMPERATURE VARIATIONS. FOR A BETTER LOOK WE RECOMMEND TO INSTALL PANELS ON FLAT SURFACES (EX: PLYWOOD PANELS OR OSB PANELS). IF PANELS ARE INSTALLED ON A WALL WITH FURRINGS, FURRING STRIPS MUST BE INSTALLED OBLIQUELY AND SPACED BY 8"(20,32CM).**

FRANÇAIS  
AU VERSO

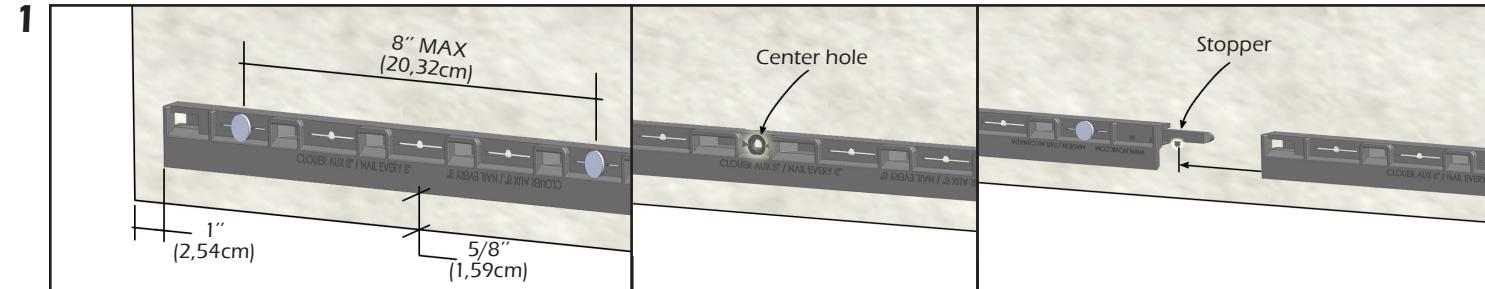

5



Installation when outdoor temperature is above 68°F(20°C), press against stopper.

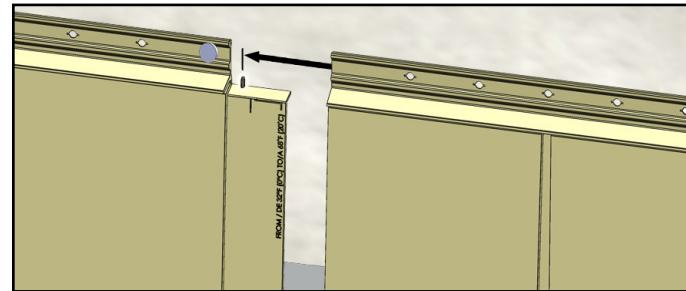


Installation when outdoor temperature is below 32°F(0°C), see complete installation guide.

6

Alternate the joints between rows

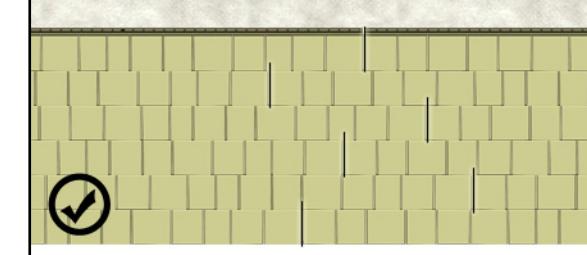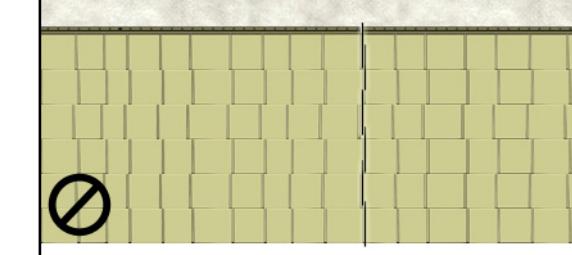


7

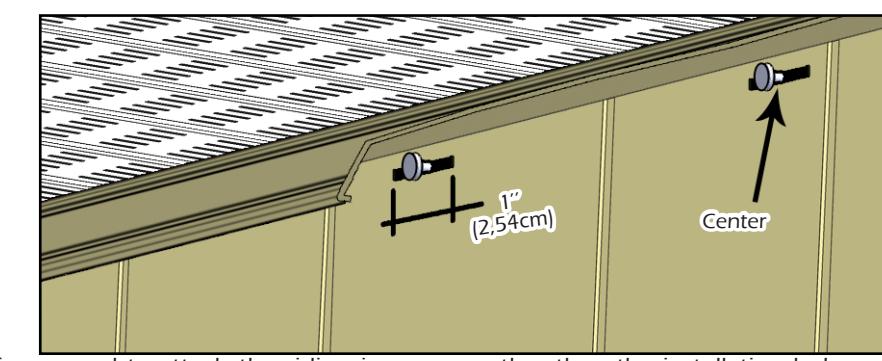


If you need to attach the siding in an area other than the installation hole, create a 1"(2,54 cm) long slot to allow nailing. Always nail in the middle of the slot.

8

NOVIK CORNER INSTALLATION

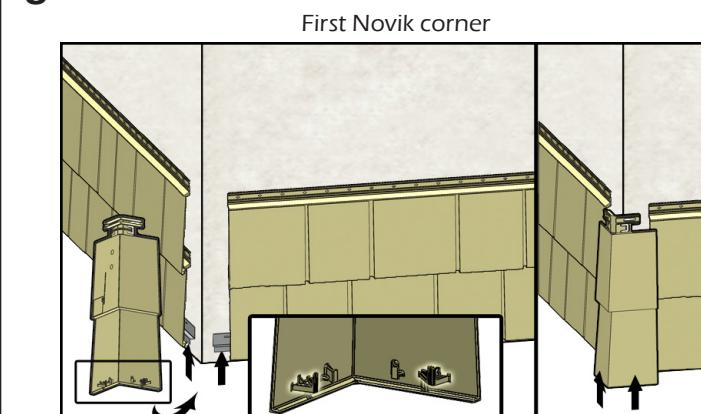

Install two rows for one Novik corner and push firmly near the hooks to fully engage the corners




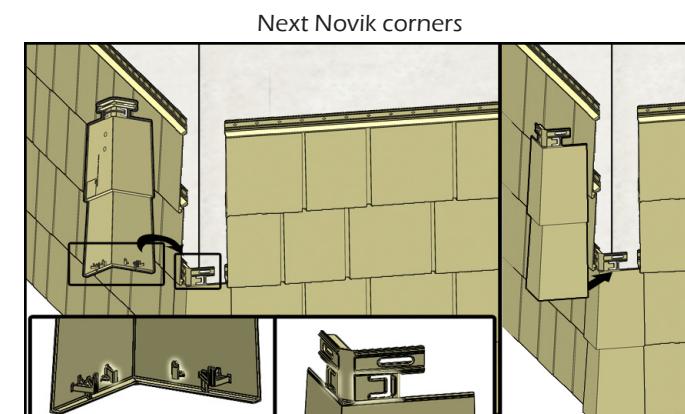


# NOVIKSHAKE<sup>MC</sup> RS8 - BARDEAU SIGNATURE 8'

## GUIDE D'INSTALLATION SOMMAIRE


ENGLISH ON  
REVERSE

**ATTENTION: TOUJOURS INSTALLER LE PRODUIT DE LA GAUCHE VERS LA DROITE ET NE JAMAIS OUBLIER QUE LES POLYMIÈRES SUBISSENT DE L'EXPANSION/CONTRACTION DUES AUX VARIATIONS DE TEMPÉRATURE.**  
**POUR UNE MEILLEURE APPARENCE, NOUS RECOMMANDONS D'INSTALLER LES PANNEAUX SUR DES SURFACES PLANES (EX: PANNEAUX DE CONTRE-PLAQUÉ OU OSB). SI INSTALLER SUR UN MUR LATTÉ, INSTALLER LES LATTES À L'OBLIQUE ET AUX 8"(20,32CM).**

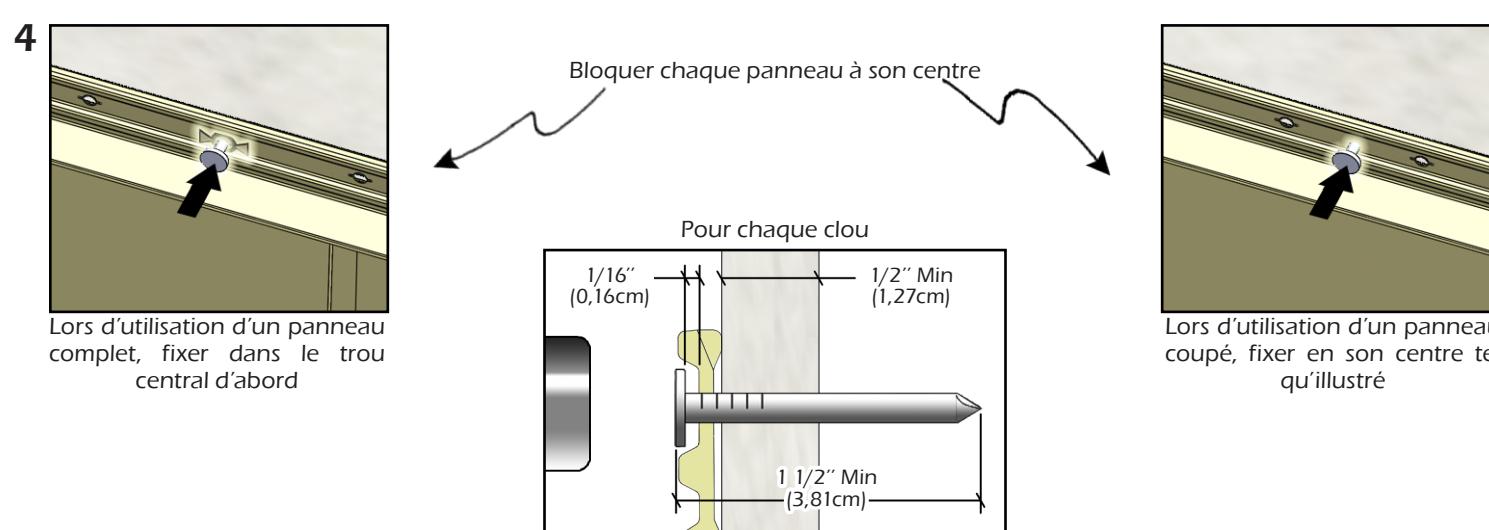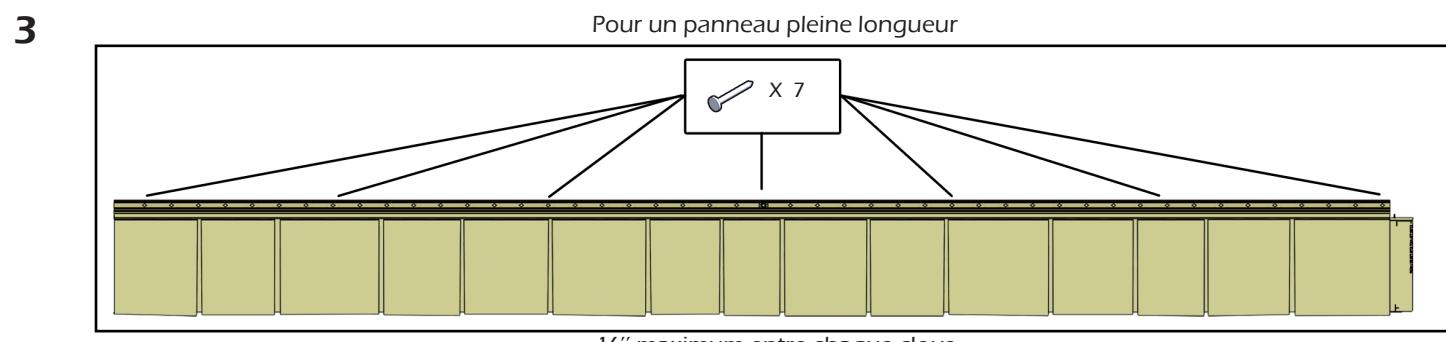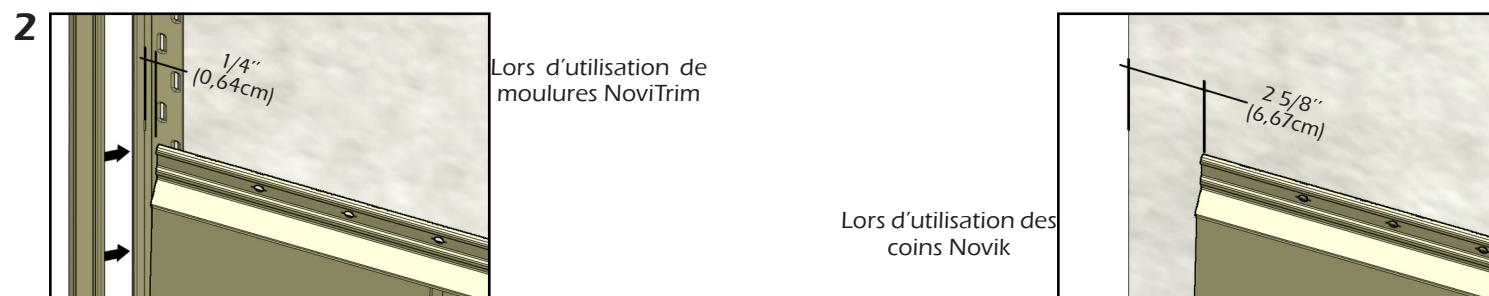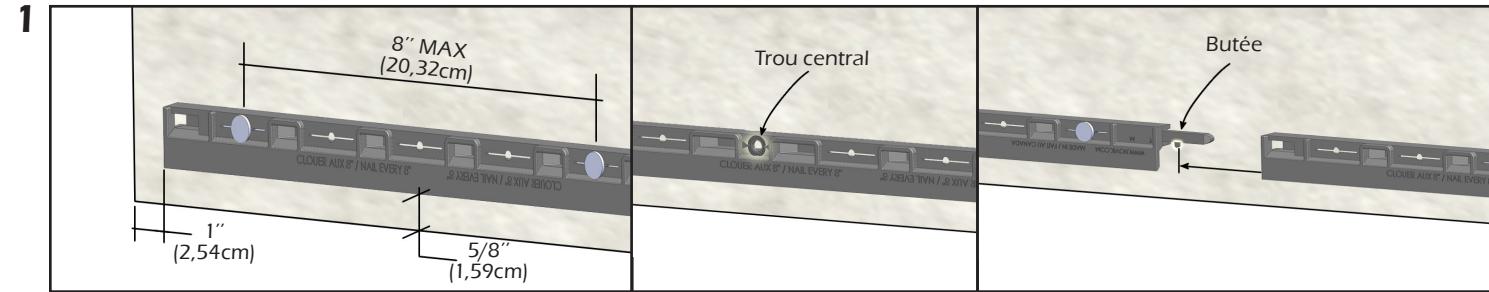


5

Installation à une température extérieure supérieure à 68°F(20°C), arrêter à la butée.

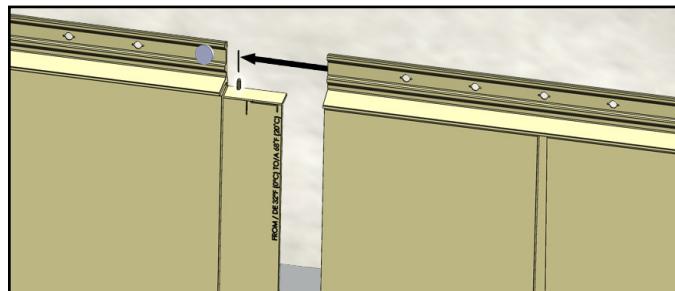


Installation à une température extérieure inférieure à 32°F(0°C), voir le guide d'installation détaillé.

6

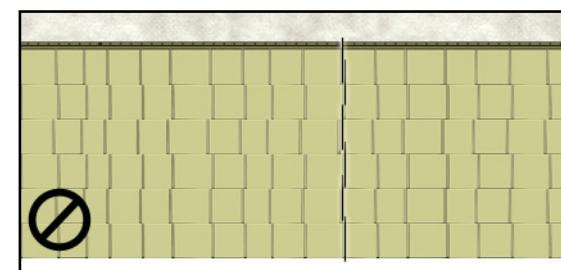


Alternner les joints entre les rangées

7

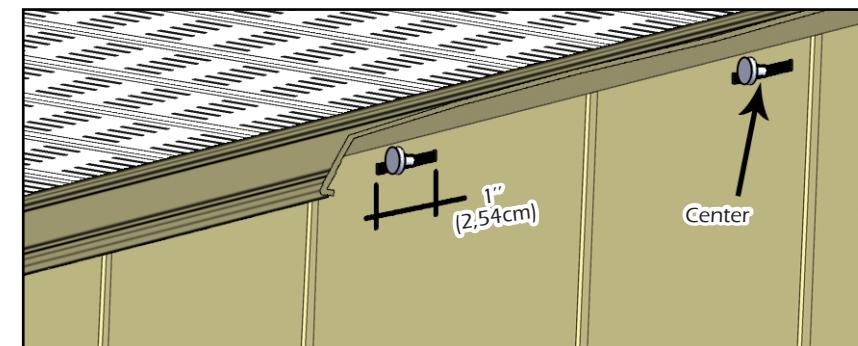

Si vous devez fixer les panneaux dans un endroit autre que dans les trous de fixation, faire une fente de 1"(2,54 cm) pour permettre de clourer. Toujours clourer au centre de la fente.

8

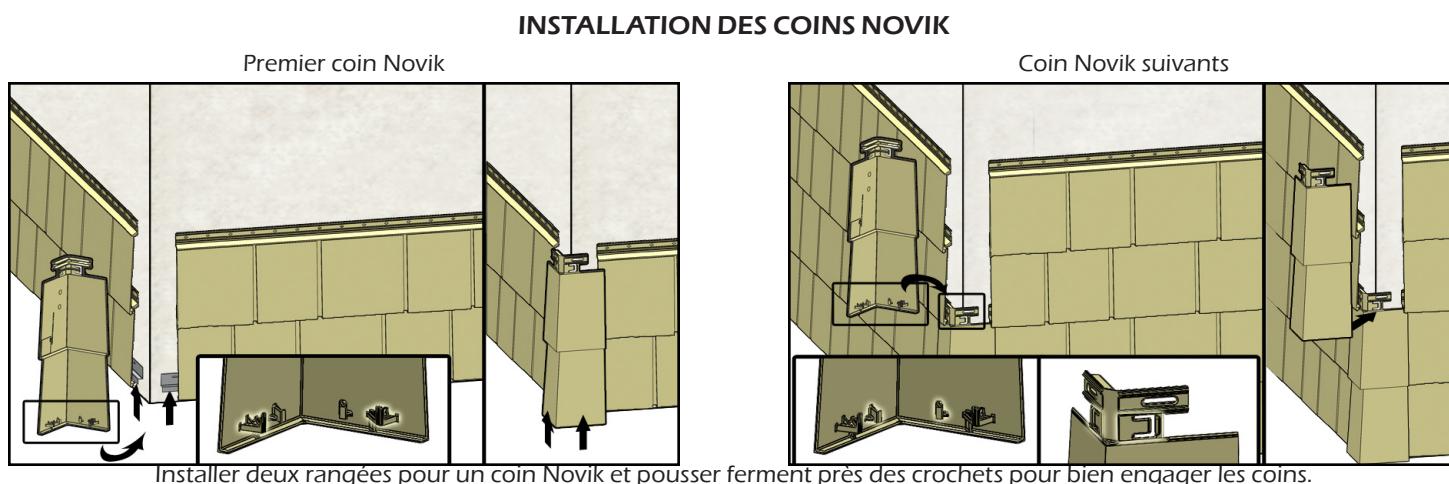

INSTALLATION DES COINS NOVIK

Coin Novik suivants



Pour le guide d'installation complet, voir [www.novik.com](http://www.novik.com).

NOVIK

20/04/2016

DIV0261B