

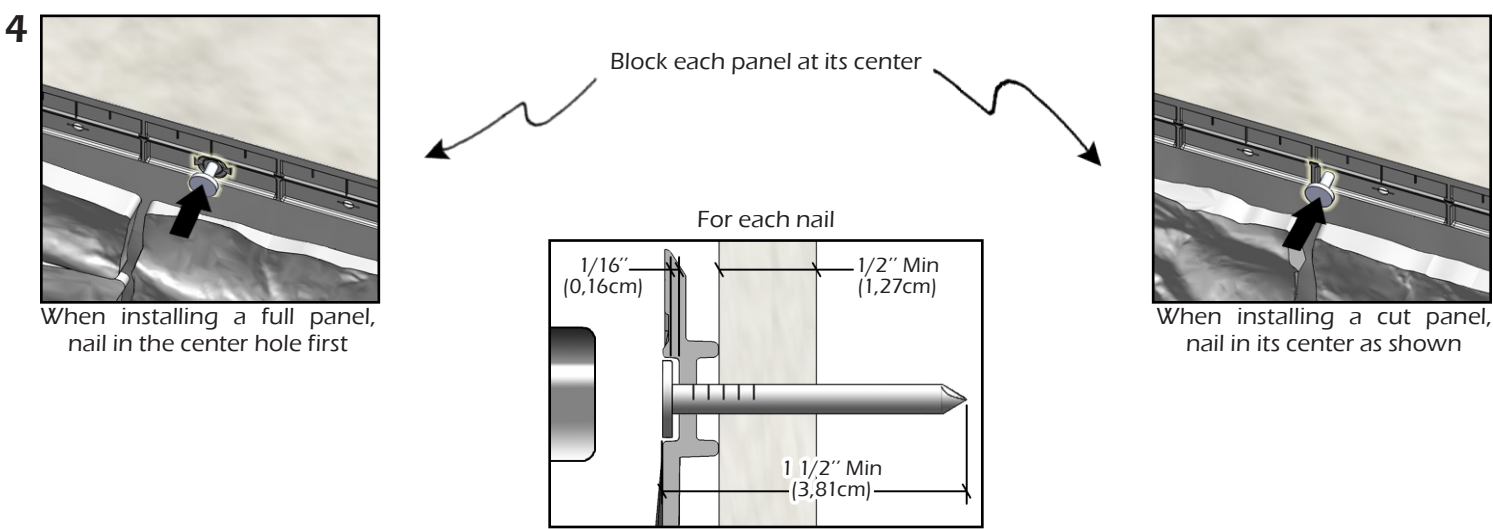
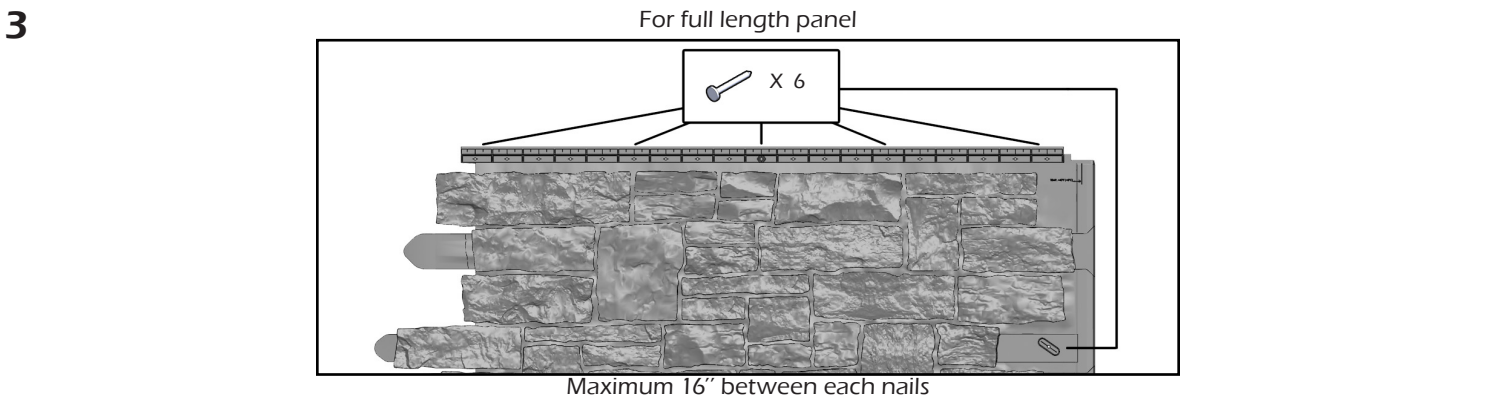
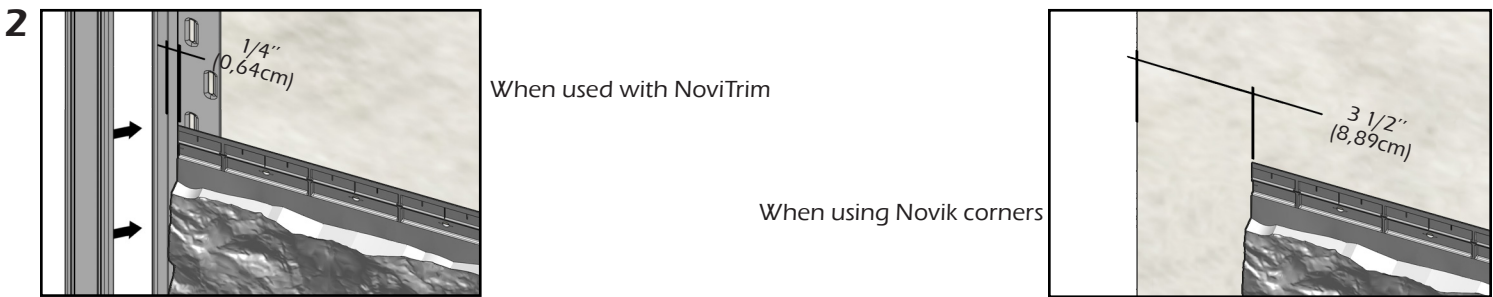


NOVIKSTONE™ SK - STACKED STONE
SUMMARY INSTALLATION GUIDE

CAUTION: ALWAYS INSTALL PRODUCT FROM LEFT TO RIGHT AND REMEMBER THAT POLYMER UNDERGOES EXPANSION/CONTRACTION DUE TO TEMPERATURE VARIATIONS.



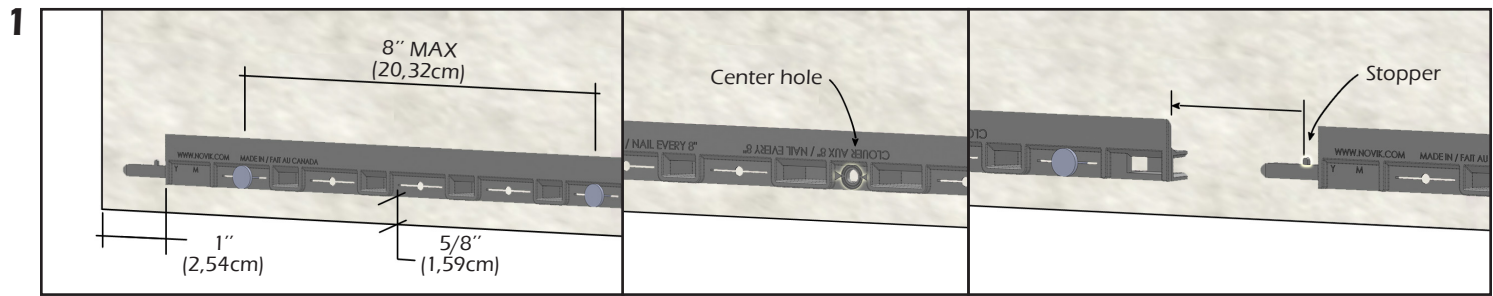


5 Installation when outdoor temperature is above 40°F(5°C). Press against stopper.

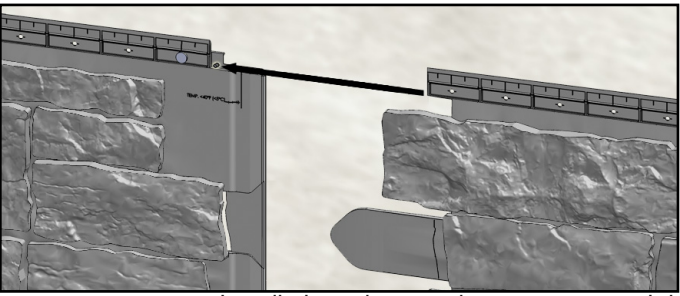


Installation when outdoor temperature is below 32°F(0°C), see complete installation guide.

Installation when outdoor temperature is below 40°F(5°C). Stop at the line

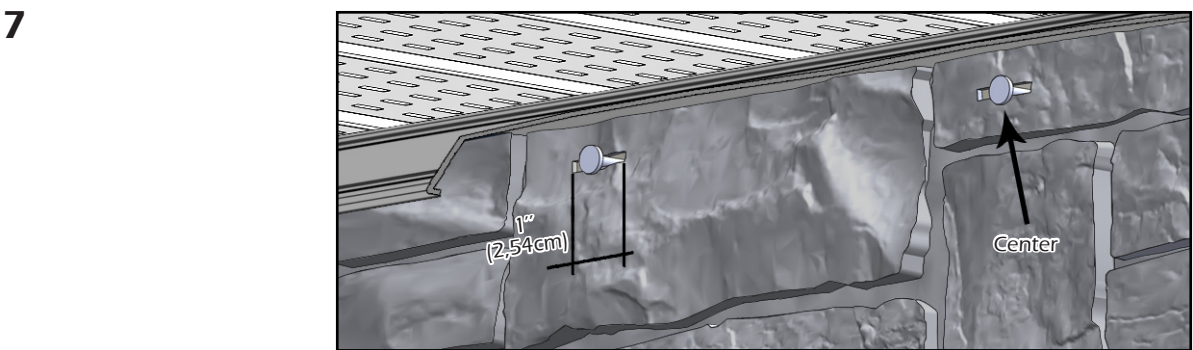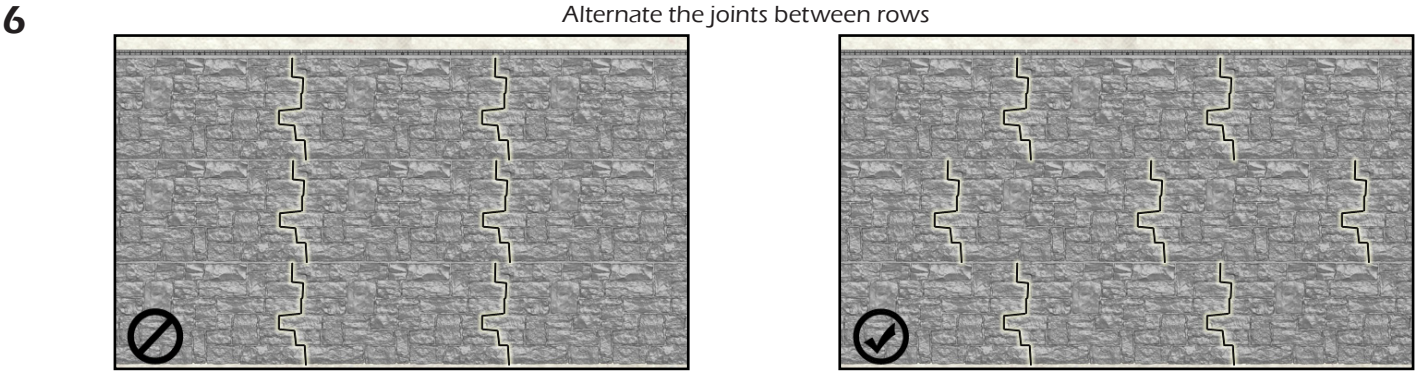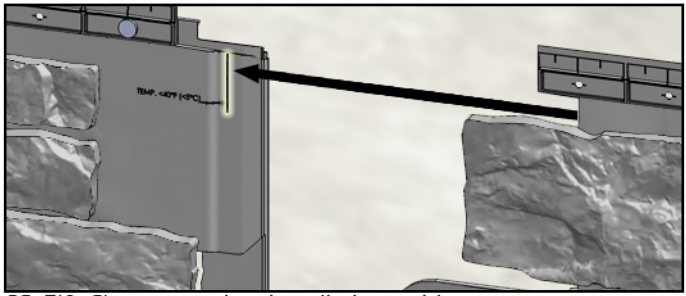

If you need to attach the siding in an area other than the installation hole, create a 1"(2,54 cm) long slot to allow nailing. Always nail in the middle of the slot.





8 NOVIK CORNER INSTALLATION

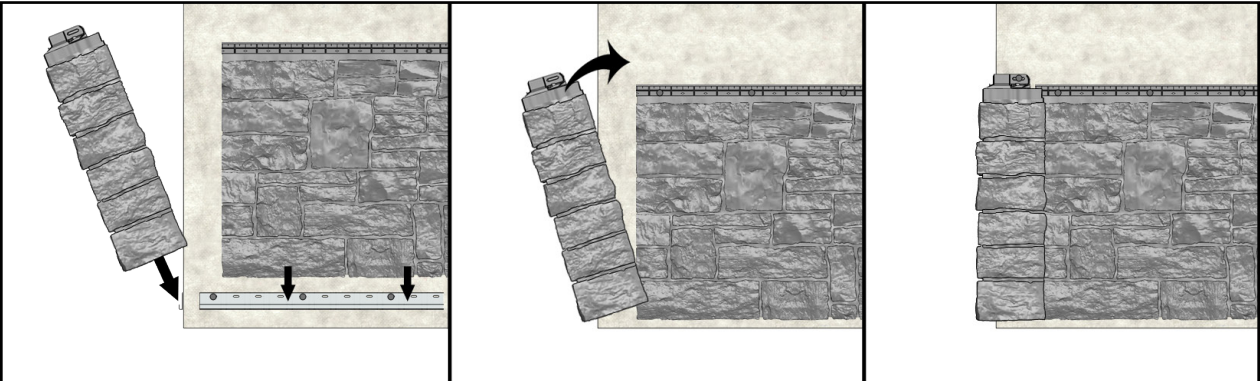


NOVIKSTONE^{MC} SK - PIERRES EMPILÉES

GUIDE D'INSTALLATION SOMMAIRE

ATTENTION: TOUJOURS INSTALLER LE PRODUIT DE LA GAUCHE VERS LA DROITE ET NE JAMAIS OUBLIER QUE LES POLYMÈRES SUBISSENT DE L'EXPANSION/CONTRACTION DUES AUX VARIATIONS DE TEMPÉRATURE.

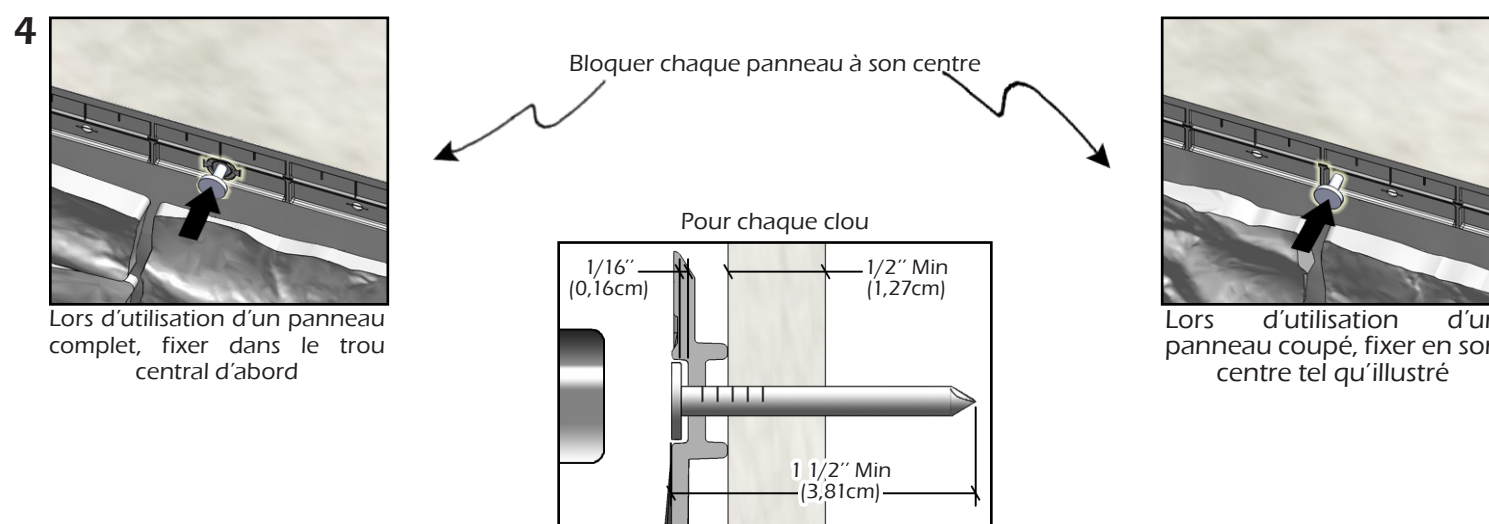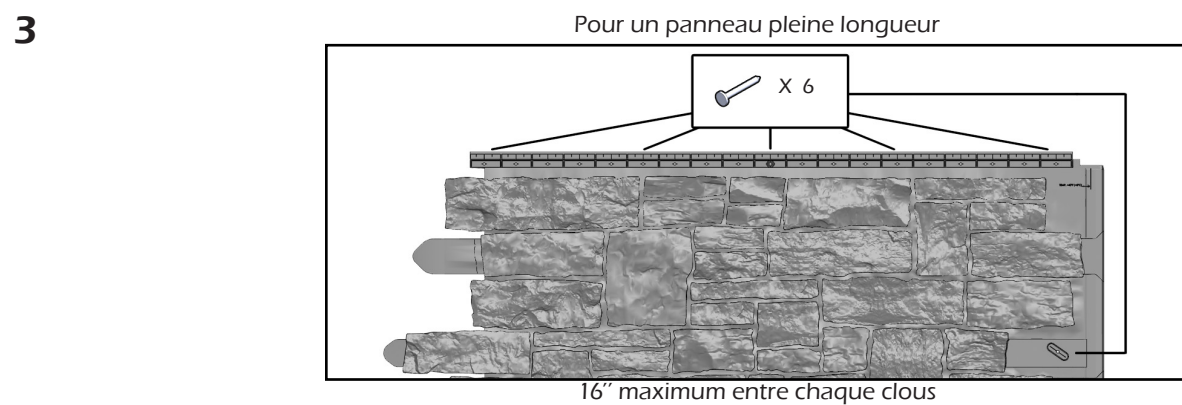
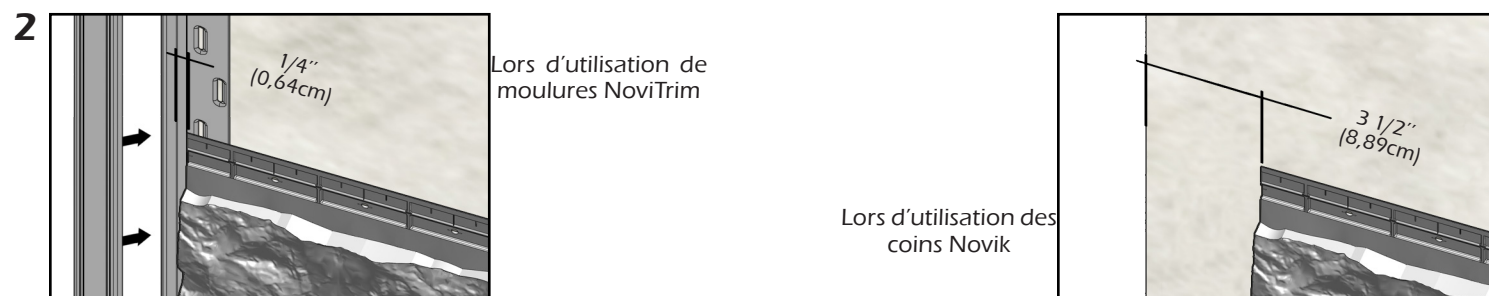
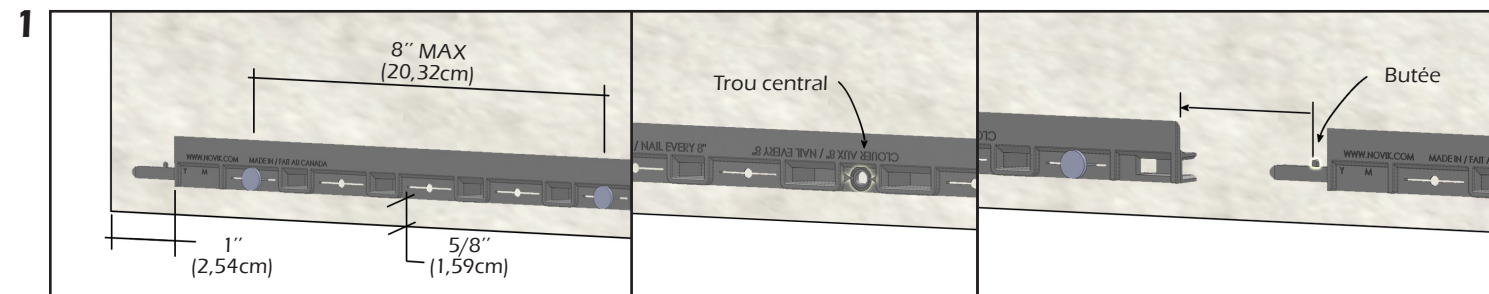


5 Installation à une température extérieure supérieure à 40°F(5°C). Arrêter à la butée.

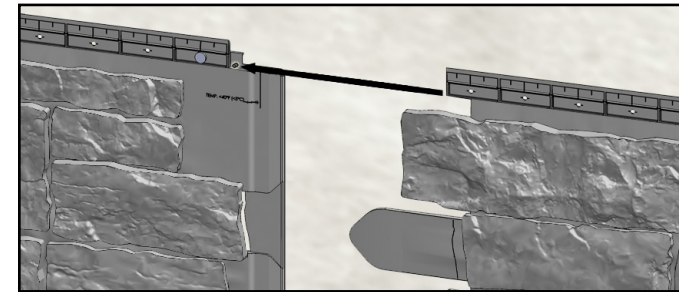

Installation à une température extérieure inférieure à 32°F(0°C), voir le guide d'installation détaillé.

Installation à une température extérieure inférieure à 40°F(5°C). Arrêter à la ligne

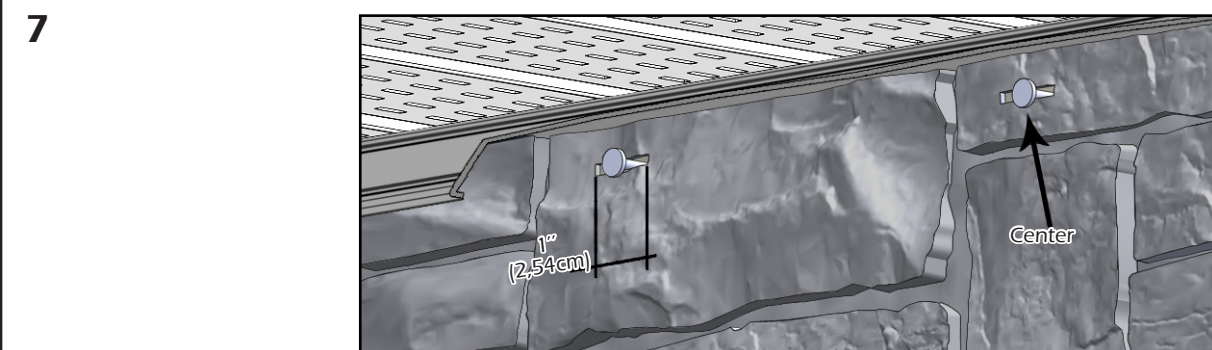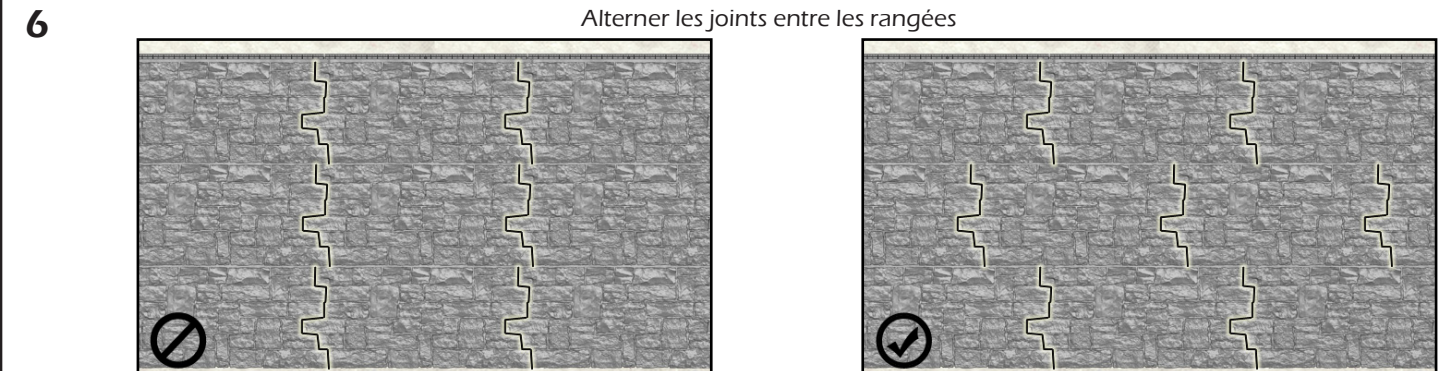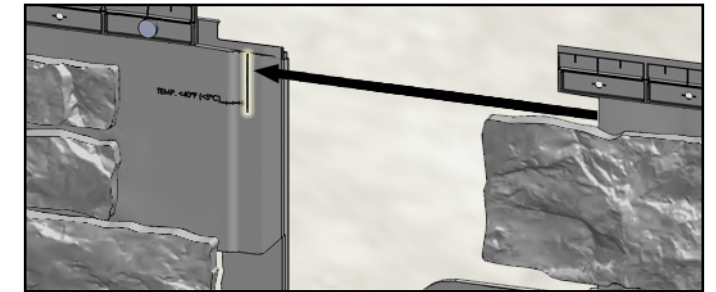

Si vous devez fixer les panneaux dans un endroit autre que dans les trous de fixation, faire une fente de 1\"(2,54 cm) pour permettre de clouer. Toujours clouer au centre de la fente.

