


FrameSaver® FusionFrame™

Field Instructions - One Piece Jambs




STEP 1: REMOVE BRICKMOULD AND WEATHERSTRIP

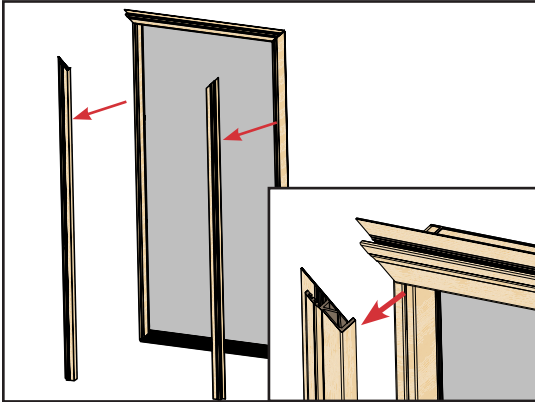


a. If attached, remove the brickmould assembly from the prehung door unit, and set aside.

TIP: Leave the header brickmould installed to help align the top of the door unit during installation.

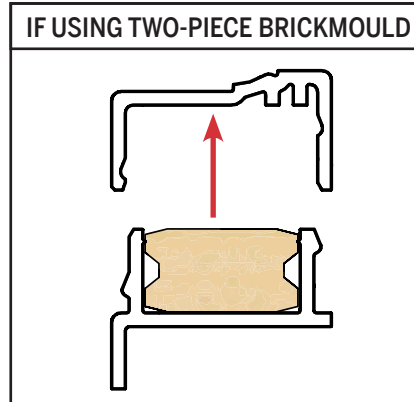


b. To simplify the brickmould install later, remove the covers and set aside. If the header brickmould was left in the unit, be sure to remove the cover and set aside.

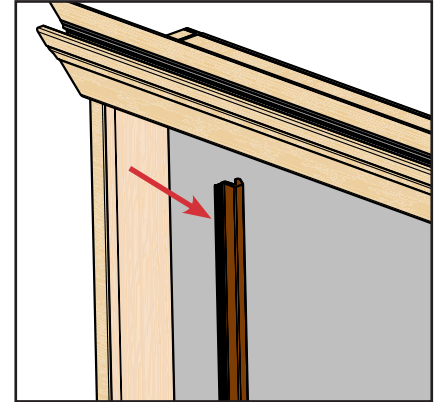


c. Pull the weatherstrip out of the jambs and set aside.


STEP 2: PLACE PREHUNG UNIT INTO THE ROUGH OPENING

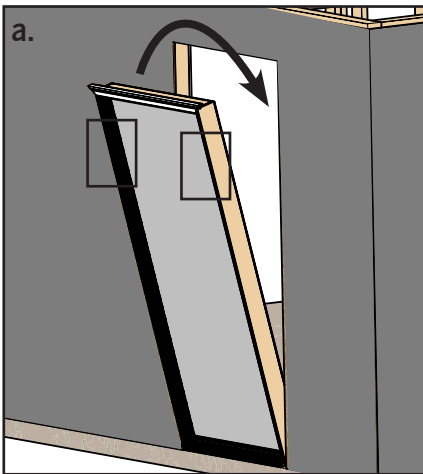

a. Position the door unit into the rough opening.

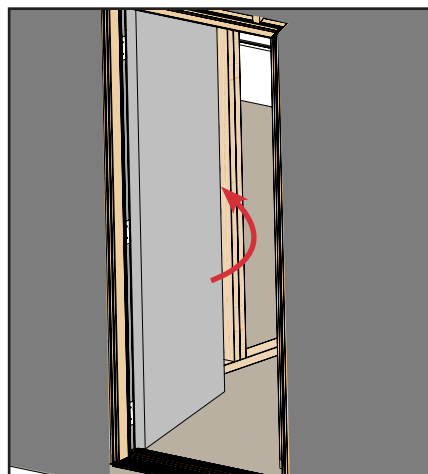


b. While holding the unit in place, prop the door panel open to access the jamb.

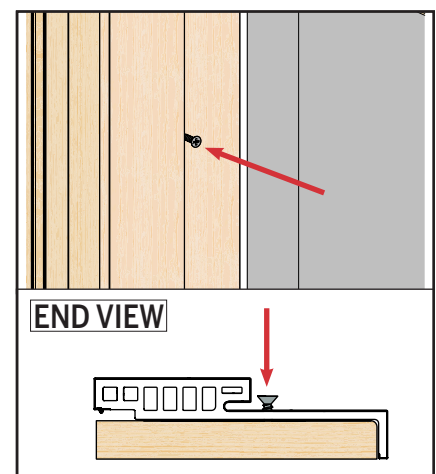

c. Install fasteners into the upper prenotched locations in the jamb to temporarily secure the unit.


⚠ Do not fully tighten these fasteners

STEP 3: ALIGN AND PLUMB UNIT

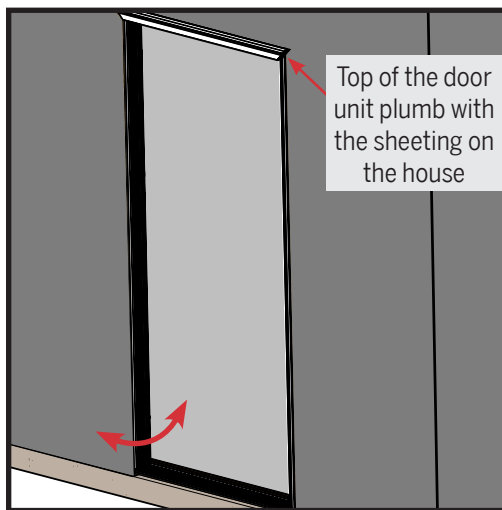

Align the top of the unit plumb to the sheeting on the home using the top brickmould. Adjust the bottom of the unit in or out to find plumb using a 6' level.

STEP 4: SHIM AND SECURE THE DOOR UNIT

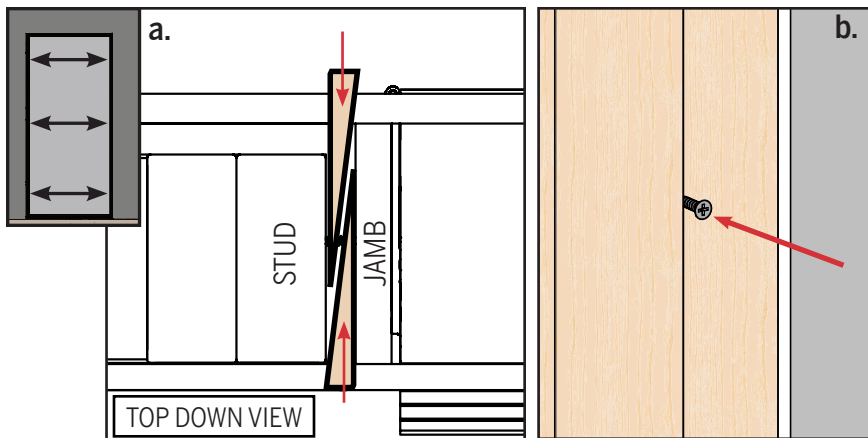


Be sure to insert at least one shim from each side (interior and exterior) to keep the jamb from twisting.

a. Shim the door unit between the jamb and stud to keep it square and plumb, starting behind the upper prenotched location.


b. Secure the fastener about 90% through the jamb. Repeat behind each of the prenotched fastener locations.

c. Once all of the shims and fasteners are installed, confirm margins and tighten fully. If margins are incorrect, increase or decrease shim thickness and repeat steps 4a and 4b.

STEP 5: INSTALL FLASHING TAPE AND WEATHERSTRIP

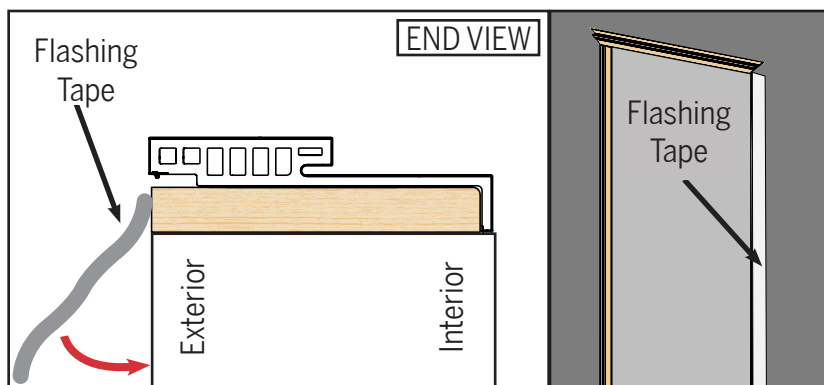


a. Install flashing tape from the wood edge of the jamb, away from the door opening.

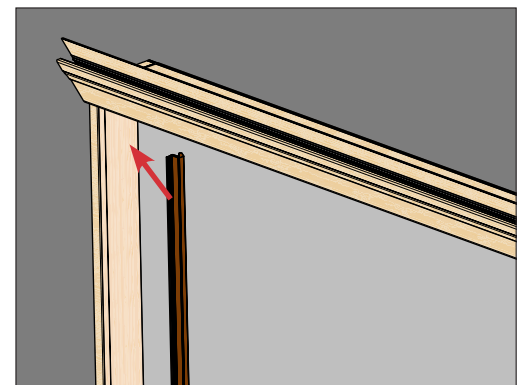


b. Reinstall weatherstripping around the frame.

STEP 6: INSTALL BRICKMOULD

1 PIECE BRICKMOULD:

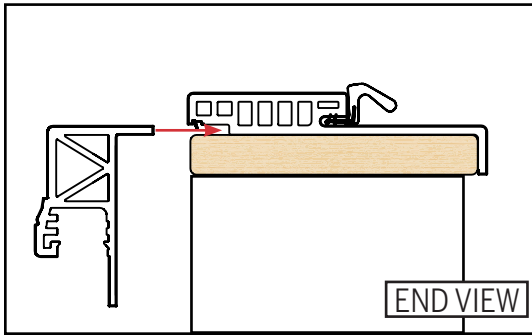


a. Insert the leg of the brickmould into the groove of the jamb.

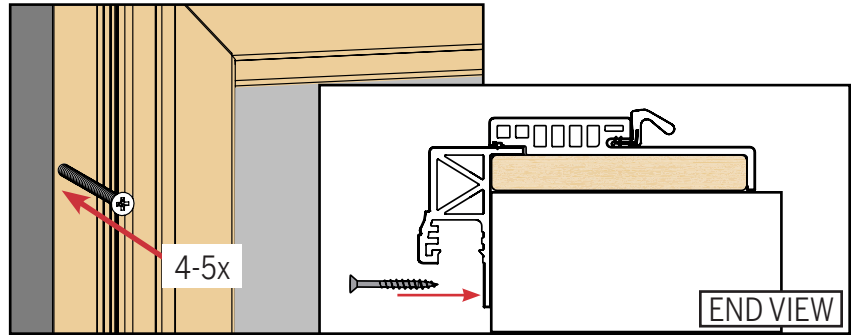


b. Install 4-5 fasteners, evenly spaced, through the nailing flange to secure the brickmould to the sheathing.


2 PIECE BRICKMOULD:

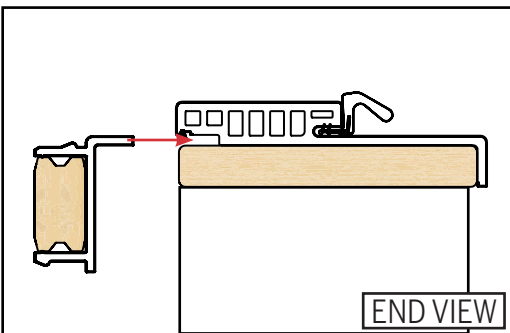

a. Insert the leg of the brickmould into the groove of the jamb.

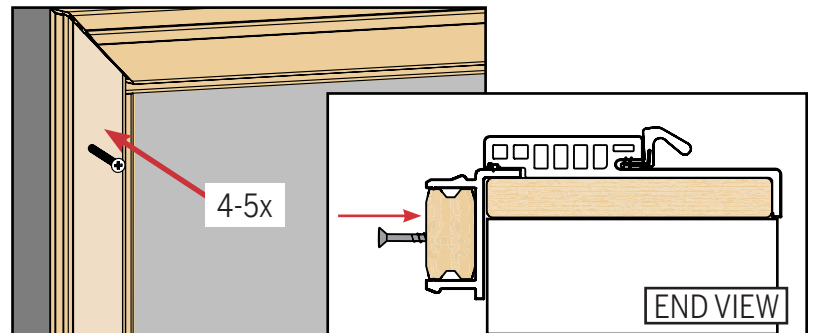

b. Install 4-5 fasteners, evenly spaced, through the wood core of the brickmould into the sheathing.

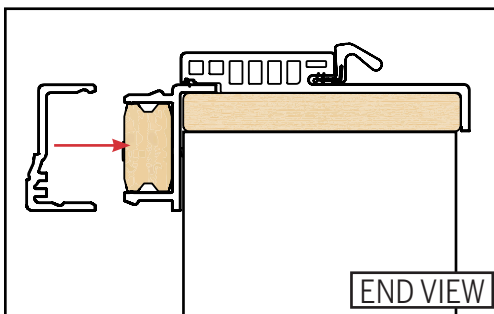

c. Reinstall the brickmould cover.