	MODEL NUMBER: <b>PD181-682</b>	Document Number: PD196-164R2
	Thin Wall Mount for PDI-DVD-SH	Page 1 of 2

**SAFETY STEPS:**

- 1) Always wear safety glasses/goggles to prevent injury from debris.
- 2) Follow the installation/removal instructions for your existing products.

**TOOL LIST:**

- 1) P1 or P2, phillips screw driver
- 2) 1/4 " hex bit driver
- 3) PD219-128 (supplied with kit) TORX T20 hex bit
- 4) Safety glasses/goggles

**PARTS LIST:**

- 1) PD181-682 wall mounting plate for PDI-DVD-SH
- 2) PDITPHMSM4X76 : TORX pan head machine screw M4-.7 x 6mm.
- 3) PD219-128 : TORX T20 hex bit



**PROCEDURE:**


**STEP 1:**

Remove the top cover by pressing down above the ribbed arrow located on the top front edge to release the snap tab. Save to reinstall later.

**STEP 2:**


Mount the PD181-682 bracket to the wall using four #8 sized fasteners and appropriate wall anchors. These fasteners/anchors are not supplied with the mount.

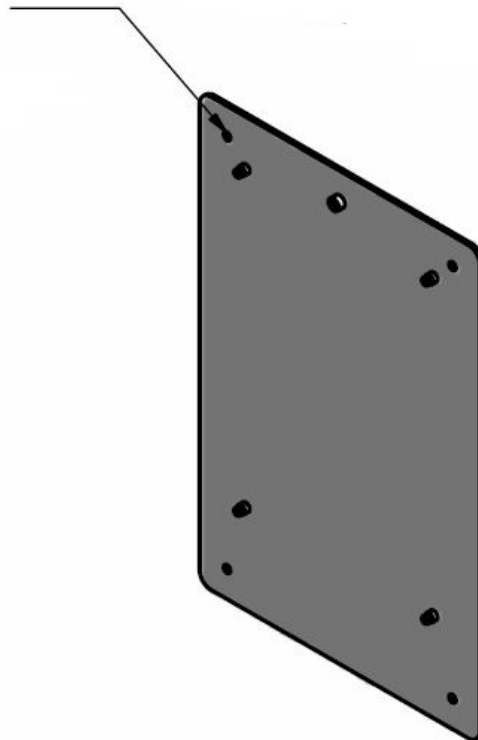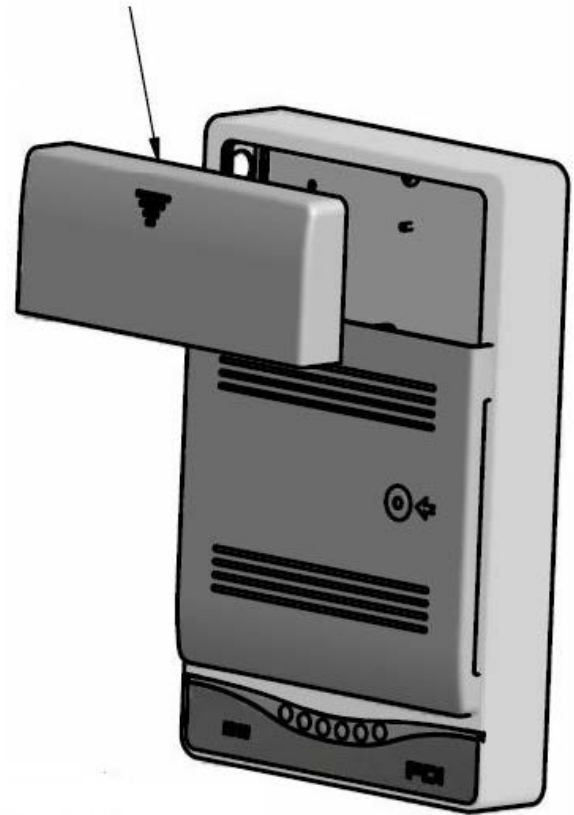



	MODEL NUMBER: <b>PD181-682</b>	Document Number: PD196-164R2
	Thin Wall Mount for PDI-DVD-SH	Page 2 of 2

**STEP 3:**

Attach the DVD-SH to the thin wall mounting bracket by aligning and inserting the (4) standoffs (Detail D) on the wall mounting bracket into the (4) matching keyholes (Detail C) in the back of the DVD-SH. The top two holes are visible thru the access cover opening. The lower two holes are not visible.

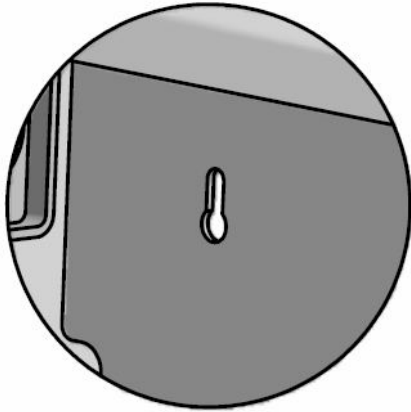

DETAIL C  
KEYHOLE

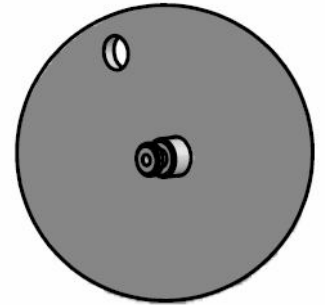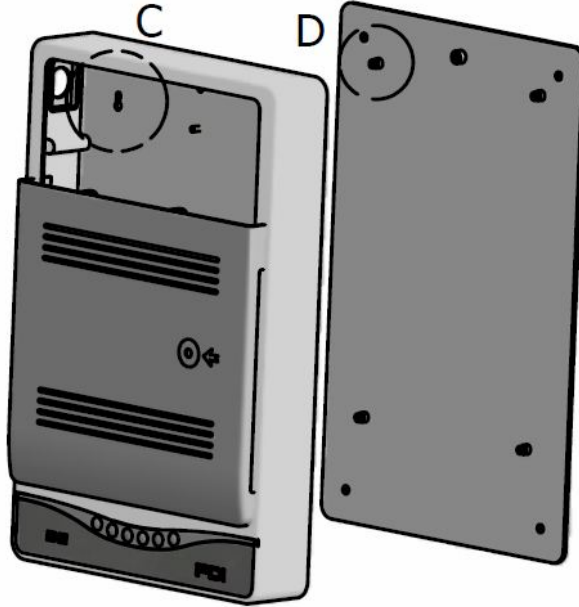

DETAIL D  
STANDOFF

**STEP 4:**

Install the mounting screw (PDITPHMSM4X76) to secure the DVD-SH to the thin wall mounting bracket. Make cabling and power connections and test functions. Reinstall the top front cover that was removed during the first step.

Route cables thru this strain relief opening to make connections.

