


The PDI 13" Top Mount is designed to mount a 13" TV to a PDI-178C style wall bracket. These instructions assume the wall bracket is correctly mounted with a clearance greater than 1 ½" between the top of the wall bracket and the ceiling.

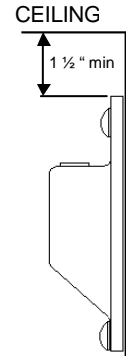

1. Mount TOP PLATE to MIDDLE BRACE PLATE with 2 short Philips bolts and locking nuts.
2. Position METAL SLEEVE between TOP PLATE and MIDDLE BRACE PLATE. Slide PIVOT PIN through sleeve. Attach with HEX BOLT and WASHER.
3. Attach TOP PLATE to TV cabinet with two long Philips.
4. Slide bottom V BRACE through PIVOT PIN. Position against TV cabinet and attach with two long Philips bolts.
5. Tighten all bolts and install in wall bracket.

