


Measuring Your Closet

CEILING HEIGHT

1. Start with the tape measure on the floor under your foot
2. Bring the tape to the corner where the ceiling and the wall meet
 - a. Keeping the tape taut at all times
 - b. Fold the tape where the ceiling/wall meet
 - c. Lower to eye level to see the number

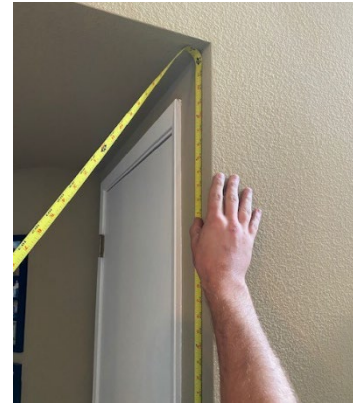


HEADER/SOFFIT HEIGHT

Header/soffit is the space above your doors in most reach-in closets

1. Repeat the steps for the ceiling. Stop when you get to the base of the header/soffit

WIDTH

1. Measure the width of the closet from corner to corner
2. Measure at 3 heights on the wall (low, middle high)
3. Record the smallest measurement

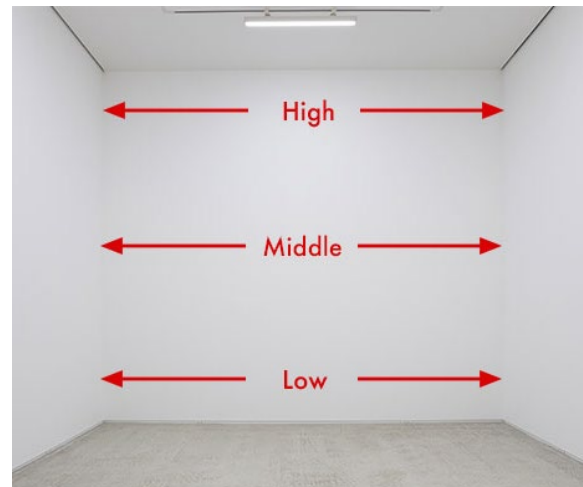

DEPTH

1. Secure the 1" mark against the back/side wall of the closet
2. Pull the tape until you reach front/next wall
3. Record the smallest measurement
4. Repeat steps for each wall

RETURN/WING WALLS

These are the walls at the front of the closet on either side of the door

1. Place tape against the wall in the corner and stretch to the door casing
2. Record this measurement for each return/wing wall.

OBSTRUCTIONS

Common obstructions include windows, outlets, switches, alarm boxes, safes, plumbing access, wires, fire sprinklers, light fixtures and vents.

1. Look at the walls, ceiling and floor and notate any obstructions on the measurement sheet.

