


2019 Audi A7/S7


Towing & Roadside Information




Roadside

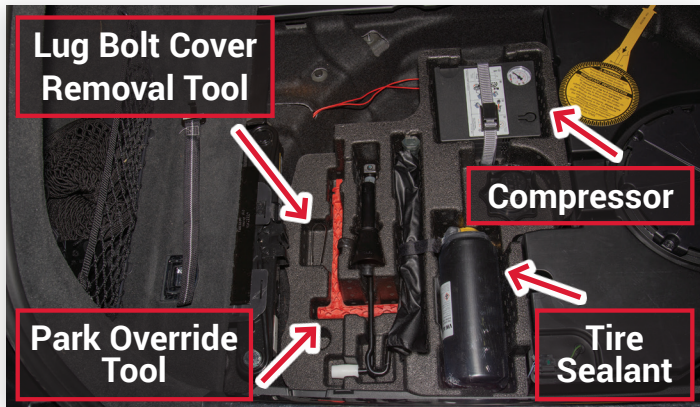

The roadside kit is located under the load floor in the trunk.

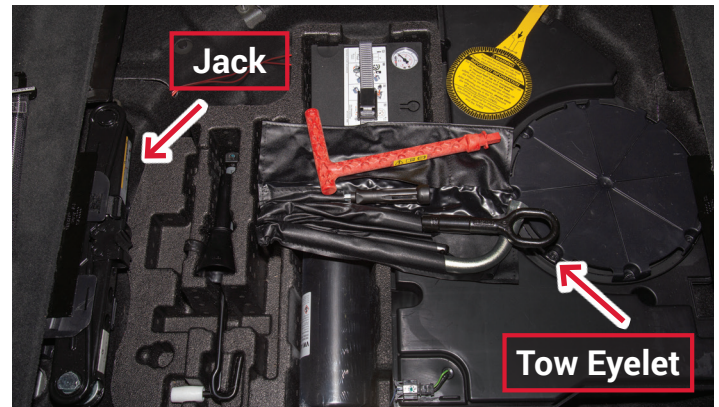

Tool kit.

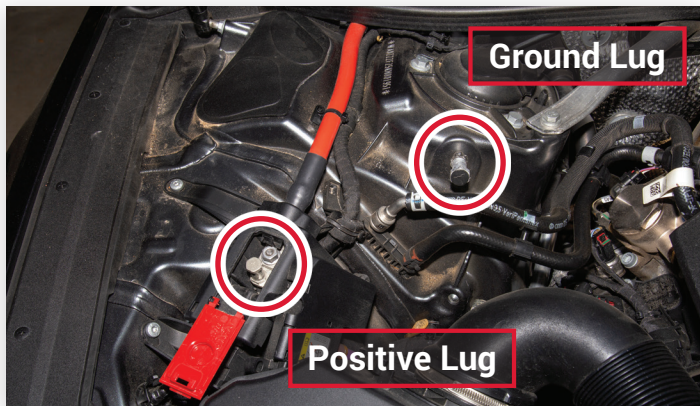

Jump start procedure.

Towing



FRONT: Press the bottom of the front eyelet cover to remove.



REAR: Press the top of the rear eyelet cover to remove.