




# McLaren 12C™

## Jump Start Procedure - Open Vehicle

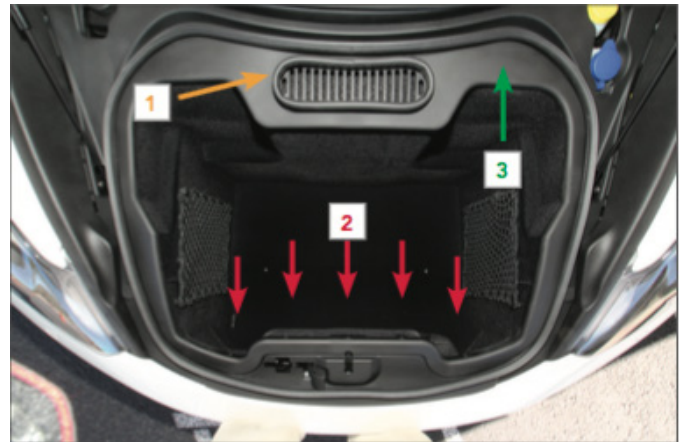

Once the "Bonnet" or front cargo cover has been opened do the following:

### Step 1

1. Remove HVAC Gasket
2. Remove 5 Phillips Screws Plastic Fasteners
3. Remove Surrounding Trim Panel

The Service Provider can access the front cargo area where the start battery is housed via the manual release found in the driver's side lower door opening. See arrows below.

---

## Step 2

4. 4mm Allen Screws – Qty. 2
5. #2 Phillips Screws – Qty. 7  
3 in Bottom of Tray  
2 in Each Side Behind Nets
6. #2 Phillips Screws – Qty. 8 Plastic Fasteners



---

## Step 3

Remove cargo liner tub to access the battery.



---

## Step 4

1. Disconnect CAN plug prior to connection of jump source.
2. Connect 12 Volt Jump Pack or Cables. Leave connected for 5 Minutes.
3. Start vehicle and run for 20 minutes to charge battery.
4. Reconnect CAN Plug, remove jump source, and check Battery Status\*.

\*See *Battery Status Tip Sheet*

Reassemble cargo area in opposite order of breakdown.



---

**The CAN Plug MUST be reconnected before reassembly of the cargo area.**

---