

2017 Volkswagen Atlas Roadside and Towing Information



The Atlas has no front tow eyelet provision. The connections for loading to a carrier are located in the floor of the vehicle behind the front tires.



Ground lug

Spare tire and tools.

Jump start procedure.



Remove the rubber plug and retain for reinstall after the tow is completed.



This is a reinforced hole suitable for use with mini J hooks.

Note:


• This vehicle is NOT to be retained by the reinforced holes used for loading. Always use an 8-point carrier kit for retention during towing.



2017 Volkswagen Beetle

Towing and roadside information



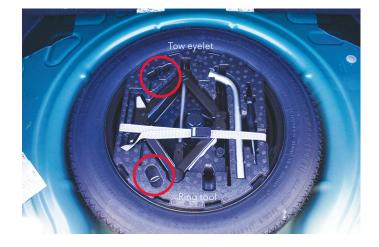








2017 Volkswagen CC

Towing and roadside information



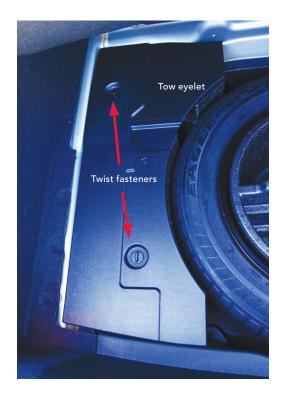





Press left side of front eyelet cover to remove.



Press bottom of rear eyelet cover to remove.



2017 Golf Sportwagen/Alltrack Towing and roadside information









Ring tool for removal of plastic lug bolt covers.

Tow eyelet remove jack handle.



Press left side of front eyelet cover to remove.



Press bottom of rear eyelet cover to remove.

Best Practices and Procedures



2017 Volkswagen Passat NMS

Roadside and Towing Information



The NMS Passat has no tow eyelet provisions, front or rear.

Spare tire and tools.

Reinforced holes are located in the floor behind the front tires.

Remove the rubber cover.



Mini J-hooks can be used in this reinforced hole for loading the vehicle.

Note:

 This vehicle is not to be retained by the reinforced holes used for loading. Always use an 8-Point carrier kit for retention during towing.

2017 Volkswagen Tiguan

Towing and roadside information









Press left side of front eyelet cover to remove.



Press bottom of rear eyelet cover to remove.







Press top of front eyelet cover to remove.



Press bottom of rear eyelet cover to remove.



Eyelet provisions are present on both sides of the Touareg – front and rear.