

2016/17 Volvo XC90 T5/T6 Shift Lock Override



If the vehicle cannot be driven (e.g., due to a discharged battery), the shift lock feature must be overridden in order to move the gear selector from park into neutral, allowing the vehicle to be rolled.


Step 1

Open the coin tray in front of the shifter, then lift away the rubber mat on the bottom of the coin tray exposing a small hole: the access to the mechanical shift lock override.



Step 2

Using a small plastic tool, depress the shift lock override.

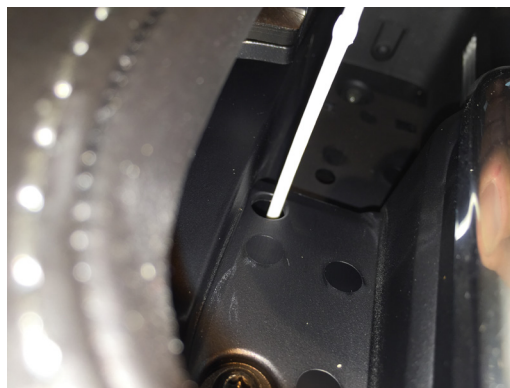

Step 3

Pull the shifter to neutral. Once vehicle is in neutral, use caution as vehicle could roll.



Notes:

The shift lock override must be depressed to return the shifter to park.

If the vehicle has the electronic parking brake engaged, the vehicle will not roll even if the shift lock is disengaged because the rear wheels will still be locked.