

## Prevent Process Water Contamination by Using Tank Vent Filtration



Operators of Food & Beverage process water systems try to keep their systems free of bacteria and spoilage organisms. Keeping a system free of bacteria is not necessarily a regulatory requirement, even pharmaceutical water for injection systems are not required to be bacteria-free, but bacteria free operation is still the goal of most operators.

Several methods may be used to keep bacteria and other spoilage organisms from entering the system, including filtration of the air that enters tanks as they are emptied. This document looks at how tank vent filters fit into the array of tools used to prevent contamination of a process water system by bacteria, mold and yeast.

### Prevention AND Remediation


Most of the time, the old saying “an ounce of prevention is worth a pound of cure” is true. Preventing an unwanted event is usually easier than repairing whatever damage is done if the event occurs. However, in virtually all water systems, including process water systems, it is safe to assume that BOTH prevention and remediation are needed to control microorganisms.

For our purposes, we will define prevention as not allowing bacteria to enter the system. The best way to do that is to design the system using components that are operated with a minimum of maintenance and also create barriers wherever there is the potential for bacteria or other organisms to enter from outside sources. Keeping the system components sealed and barriers in place is usually very effective. Unfortunately, almost any maintenance activity requires opening system components, exposing the interior of the system to the atmosphere and letting bacteria and other airborne organisms enter.

Since it is almost impossible to totally prevent bacteria from entering a system, remediation steps are needed to prevent the growth of microorganisms. Those steps can take three basic forms: 1) inhibiting organism growth with high temperatures or high flows, 2) killing microorganisms with system sanitizing/disinfection using heat or chemicals, and 3) physically removing organisms (filtration).

Using both prevention and remediation places multiple obstacles in the way of bacteria and mold that might affect product quality and potentially harm consumers and your brand.

**Figure 1 - Filters in Process Water Systems**

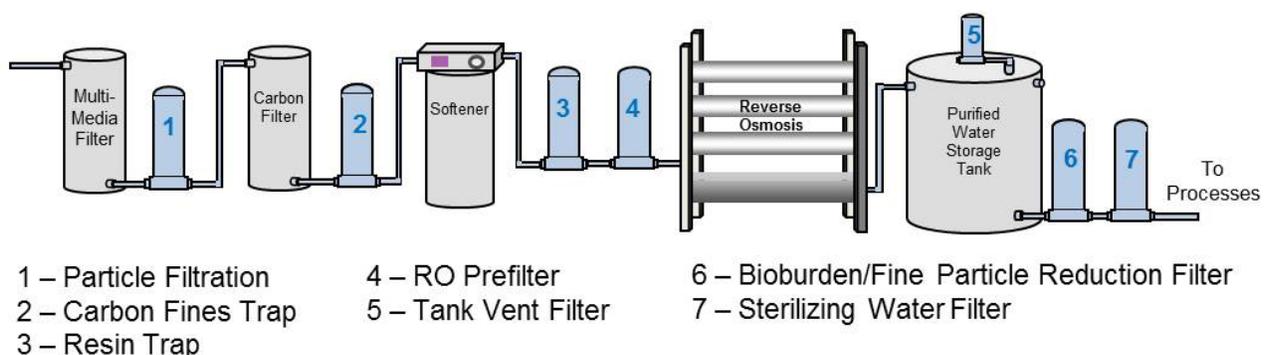

### Why Tank Vent Filters?

Whenever a tank is emptied, the volume of liquid removed has to be replaced by an equal volume of air or the tank will experience a vacuum condition and implode. As discussed above, that outside air contains bacteria and other organisms which have to be removed before the air enters the tank.

Figure 1 on the next page shows multiple filters used to control particles and bacteria in a process water system. The filters on the tops of tanks (marked 4 in the figure) are used to filter the air directly in contact with water in the tanks. The filters protect the water from particulates and microorganisms in the surrounding air.

The tanks used in water systems, even the tanks made of stainless steel, are not designed to be operated at elevated

pressure or under a vacuum. Doing so would cause structural bulging or tank implosion. Therefore, air is allowed to flow into and out of the tank to avoid pressurizing the tank or causing a vacuum condition. As a tank is filled, the air inside is allowed to escape. When the tank is emptied, air (or a process gas such as nitrogen) is allowed to enter the tank to replace lost liquid volume. The air or gas entering the tank is filtered to remove particle and bacterial contamination.

## Filters for Air vs. Liquid

Filters used for liquid applications are made of materials that attract water – are “hydrophilic” – and allow the flow of water with low resistance. For air filtration, it is critical that the media remain dry. If the media becomes wet, and the pores are filled with liquid, the air flow is restricted and the pressure or vacuum inside the tank can reach critical levels and cause tank failure. The various media used for air filters are made using materials that repel water – are “hydrophobic” – and resist wetting from water vapor or droplets.

## Choosing the Final Filters

Critical Process Filtration’s PTFE or high capacity hydrophobic PVDF membrane-based cartridges and capsules are utilized for ambient temperature storage tanks. If the storage tanks are maintained at elevated temperatures, or frequently sanitized using heat, then the operator should use specially designed PTFE membrane cartridges made for continuous high heat applications (70°C to 80°C).

If the tank vent and process gas filters are required to sterilize the air or gas, then it is important to remember that sterilizing filtration is defined as removing all bacteria. Filters claiming to be sterilizing must be supplied with proof that they can remove organisms the size of those targeted in the user’s system. The pharmaceutical industry has accepted successful removal of surrogate organisms by specific filter membranes as proof that a filter can remove organisms of similar size. The organisms are defined for each pore size rating. The testing is according to an ASTM standard (ASTM F838-05, rev 2013) that requires COMPLETE removal of all test bacteria when a filter is challenged with at least 10<sup>7</sup> organisms per cm<sup>2</sup> of membrane surface area. This level of challenge is extremely unlikely in actual applications.

Critical Process Filtration provides filters tested using the ASTM standard with 0.10µm filters challenged with *Acholeplasma laidlawii*; and 0.22µm challenged with *Brevundimonas diminuta*. The sterilizing filters are supplied with a certificate of compliance stating that the filter has passed the required quality control tests.

## Filter Options

The filters chosen must be designed to function after whatever disinfection or sterilization process will be used. The organisms targeted for removal also need to be considered.

Critical Process Filtration has several filter options, as shown in the table below. These filters are available as cartridge filters and disposable capsule filters as well as in flat disc form for laboratory scale testing.

Contact Critical Process Filtration for help determining the best filter options for you.



Figure 2 – Critical Process Filtration’s pleated membrane filters are used for bacteria removal.

## Media Options for Tank Vent Filtration in Process Water Systems

Process Area	Filter Application	Filtration Function	Critical Process Media*
Bacteria and Bioburden Control and Sterilizing	Tank Vent Filtration	Prevent bacteria from entering tanks when liquid is drawn from them	TM, PVWB

\*Media Codes

PVWB = High Capacity Hydrophobic PVDF Membrane

TM – PTFE Membrane

Visit our [website](#) or [contact us](#) for more information and to access data sheets on all of our products.



### Critical Process Filtration, Inc.

One Chestnut Street • Nashua, NH 03060

Tel: 603.880.4420 • Fax: 603.880.4536

[criticalprocess.com](http://criticalprocess.com) • [sales@criticalprocess.com](mailto:sales@criticalprocess.com)

The information contained herein is subject to change without notice.

The Critical Process Filtration logo is a trademark of Critical Process Filtration, Inc.

© 1998-2017 Critical Process Filtration, Inc. • All Rights Reserved • App Summary • FBProcWtrVentGas1114 Rev-