


NISSAN NV HIGH ROOF WALL LINERS

INSTALLATION INSTRUCTIONS




NOTES:

1. Before commencing, remove all wall liners and “D” Rings already installed in the vehicle.
2. Consult layout PDF and compare vehicle layout allocated Legend.
3. Prepare hardware shown below and have them ready for installation.
4. Wall liners will be installed in the order shown in the instructions.
5. A drill with a Phillips driver is required to install hardware (**C**) #8 Screws, shown below.
6. Reinstall all “D” Rings once the wall liner kit installation is completed.

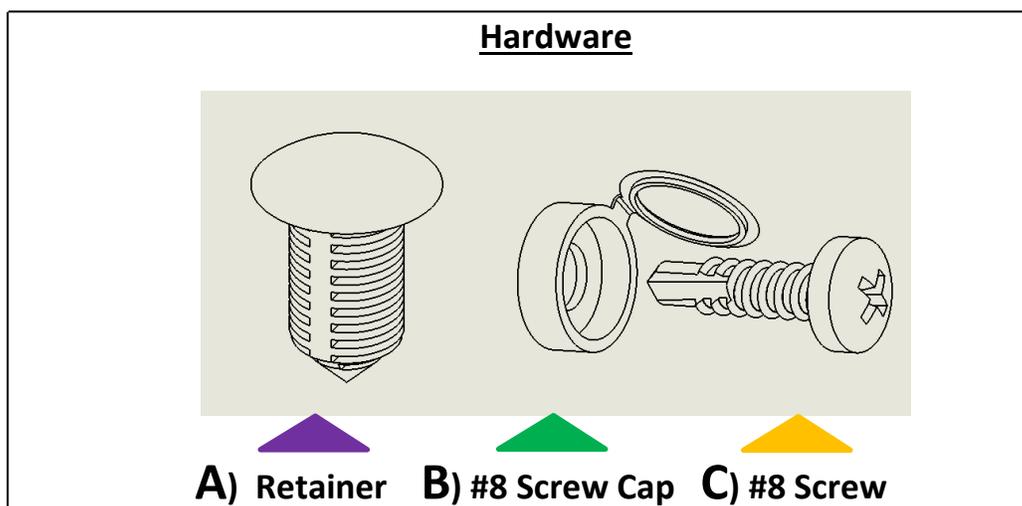

NISSAN NV HIGH ROOF WALL LINERS


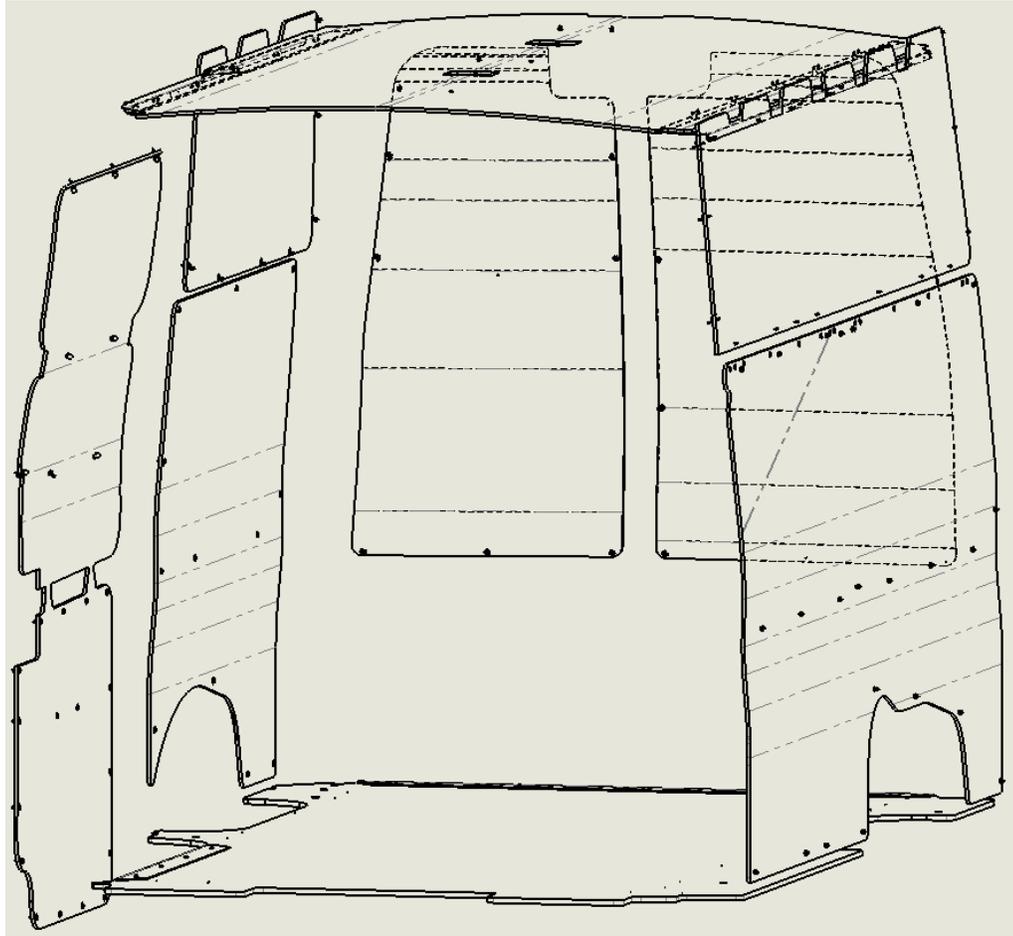


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	524-114-2614	WHITE UPPER WALL PANEL DRIVER SIDE NISSAN NV HR	1
2	512-xxx-6641	FLOOR NISSAN NV	1
3	523-114-2614	WHITE SLIDING DOOR PANEL NISSAN NV HR	1
4	524-114-2614	WHITE WALL PANEL DRIVER SIDE NISSAN NV	1
5	525-114-2614	WHITE CEILING PANEL NISSAN NV HR	1
6	SCREW CAP	SCREW CAP	57
7	SCREW	SCREW - PHIL. PAN HD #8X.75 SELF DRILLING	116
8	524-114-2614	WHITE REAR PANEL PASSENGER SIDE NISSAN NV	1
9	527-151-1010	CEILING SILL "A" NISSAN NV HR	1
10	517-151-1010	CEILING SILL JOINER PLATE	2
11	527-151-1010	CEILING SILL "B" NISSAN NV HR	1
12	527-151-1010	CEILING SILL "D" NISSAN NV HR	1
13	RETAINER	RETAINER- BLACK NYLON	58
14	008-151-1010	FLOOR SILL REAR DOOR NISSAN NV	1
15	006-151-1010	FLOOR SILL SIDE DOOR NISSAN NV	1
16	524-114-2614	WHITE UPPER WALL PANEL PASSENGER SIDE NISSAN NV HR	1
17	523-114-2614	WHITE REAR DOOR PANEL DRIVER SIDE NISSAN NV HR	1
18	523-114-2614	WHITE REAR DOOR PANEL PASSENGER SIDE NISSAN NV HR	1
19	527-151-1010	CEILING SILL "C" NISSAN NV HR	1

Note:

Model may differ depending if the vehicle was purchased with an OEM partition or not.


Driver Side Wall Liner Installation

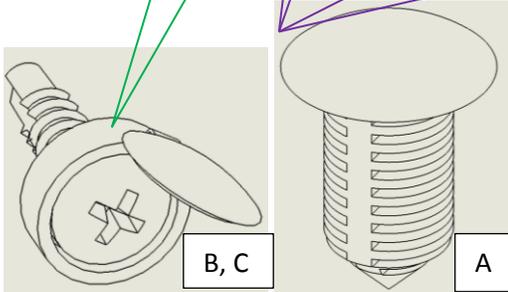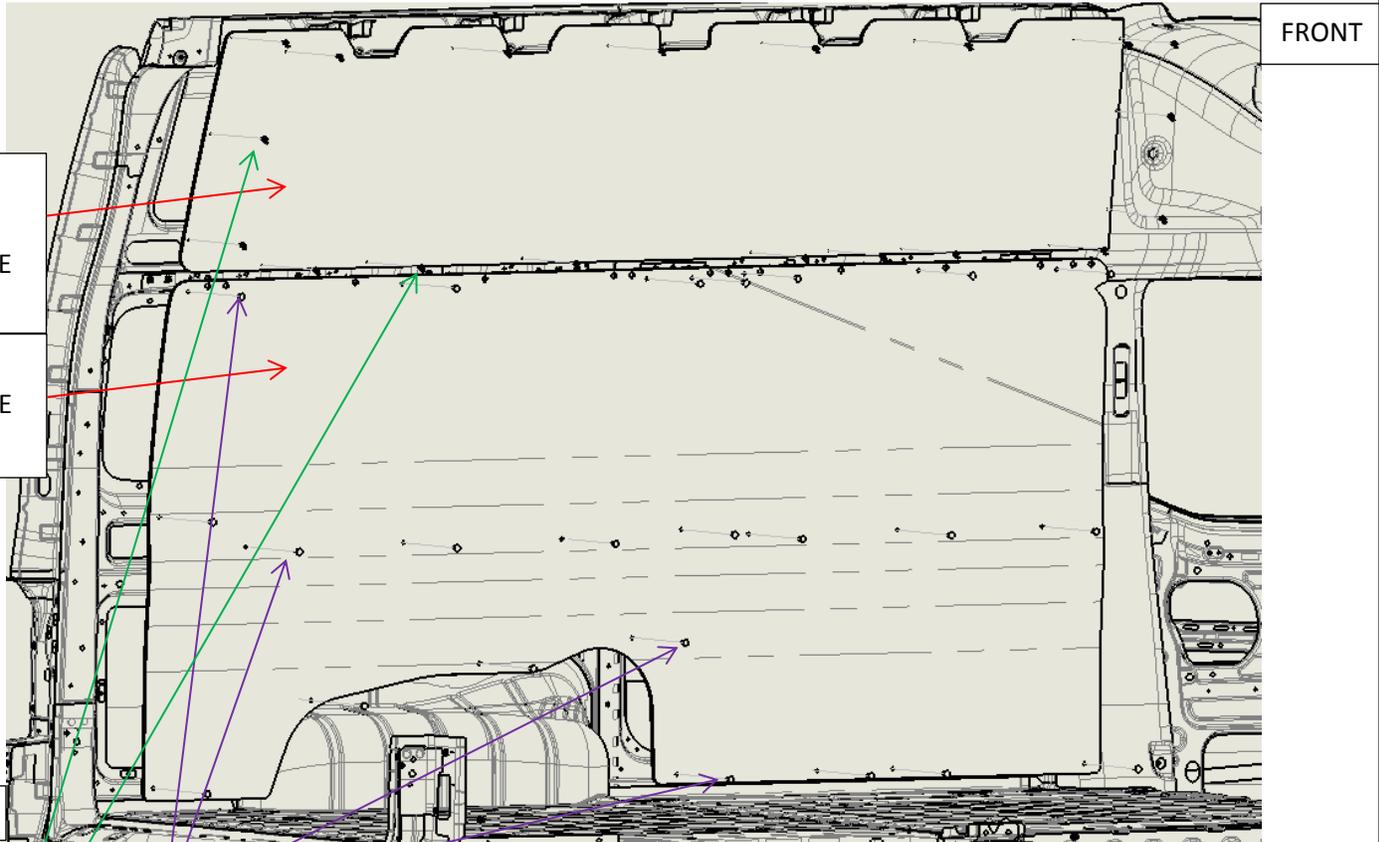

Installation completed

1: Install Item 4, Driver Side Panels.



- Align wheel well edge of the panel with the feature on the vehicle; position the contour of the panel to the vehicle wall.
- Install hardware (A) in the holes provided, on the TOP of the panel first, working your way down the panel to the BOTTOM.
- **Install Item 1, Upper Driver Side Panels.**
- Install hardware (B,C) in the holes provided, on the BOTTOM of the panel first, working your way up the panel to the TOP.

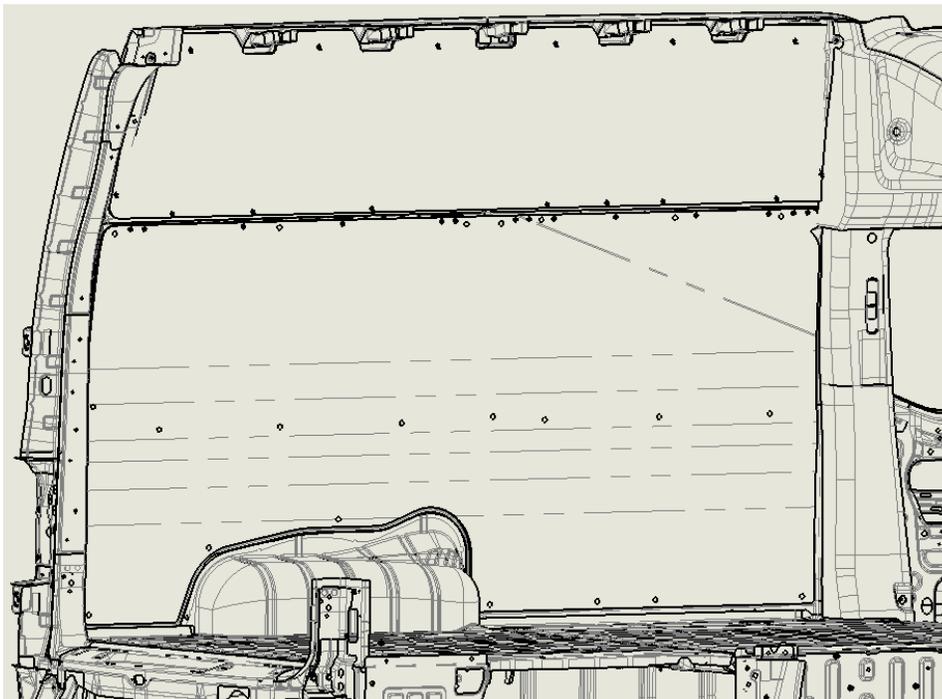

Back Door Wall Liner Installation

ITEM 18
REAR DOOR
PASSENGER SIDE
PANEL

ITEM 17
REAR DOOR
DRIVERS SIDE
PANEL

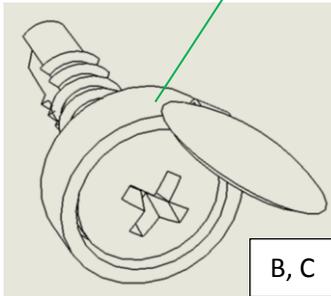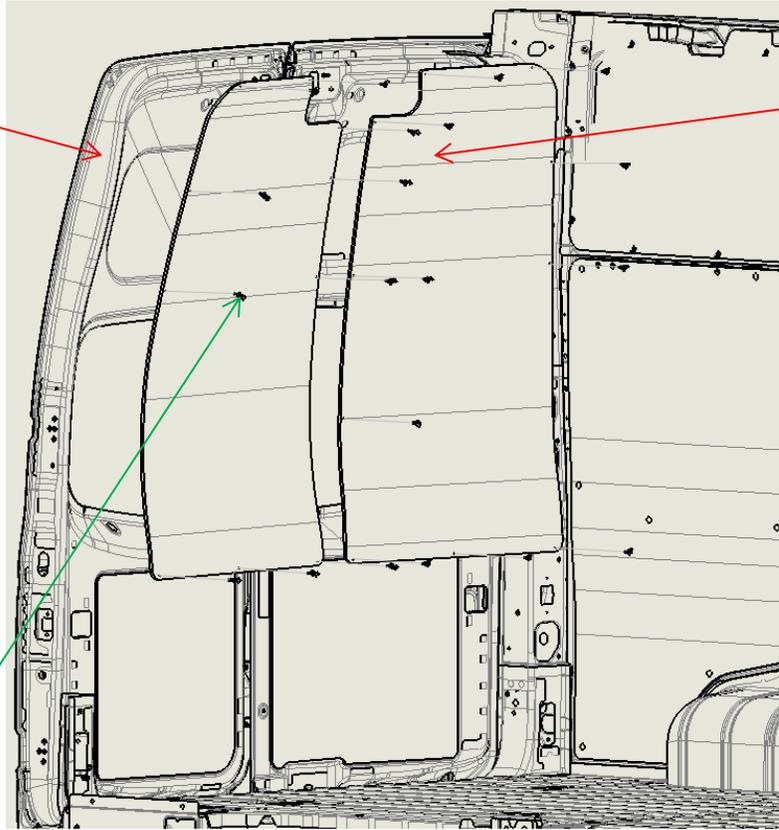


B, C

2: Install Item 17 and 18, Rear door panels,



Note: Rear doors must be closed when installing door panels.

- Align the panels with the door contour and the bottom plastic panel edge, push the panel in the door cavity keeping the edges aligned; **do not mount tight against the door seals.**
- Install hardware (B, C) on the bottom of the panel first, working your way up the panel to the top. In the middle section push the panel towards the doors until it sits on the door and then install the hardware.


Installation completed

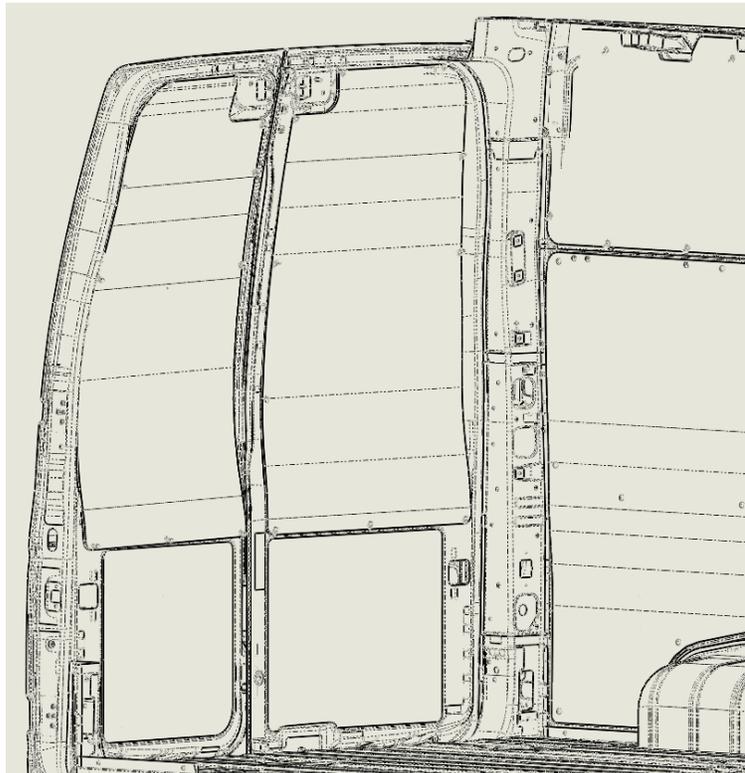

Passenger Side Wall Liner Installation

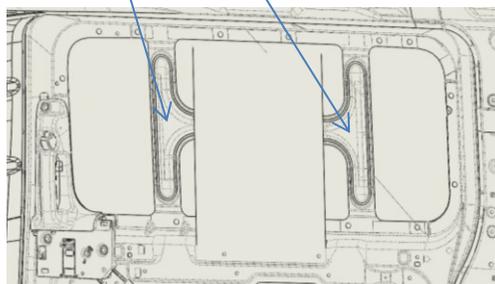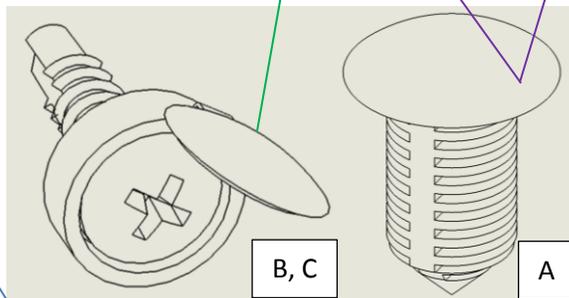

Installation completed

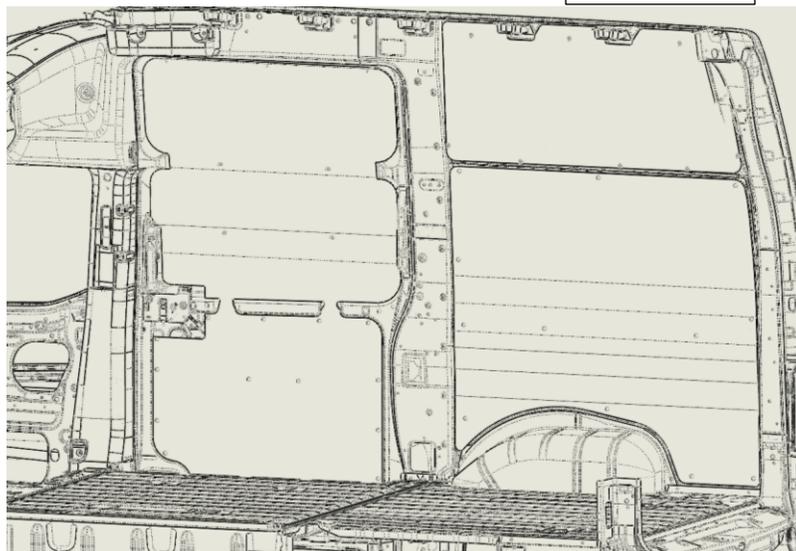

ITEM 8 REAR PASSENGER SIDE PANEL

3: Install Item 8, Rear Passenger Side Panel.

- Align wheel well edge of the panel with the feature on the vehicle; position the contour of the panel to the vehicle wall.
- Install hardware (A), in the holes provided, on the bottom of the panel first, working your way up the panel to the top.
- **Install Item 16**, Upper Rear Passenger Side Panel.
- Install hardware (B, C) first in the holes provided on the Bottom of the panel moving upwards towards the Top holes.
- **4: Install Item 3**, Sliding Door Panel. First remove OEM bottom panel. Note: Sliding door must be closed to install panel;
- Insert panel into the sliding door sill cavity, align holes at the bottom panel to the one on the door and insert hardware (A) in all of the holes provided.
- Install hardware (B, C) first in the holes provided in the middle part of the upper section of the panel into the **door ribs, do not over tighten**, then install hardware at the top and by the handle; make sure the panel does not interfere with the door seal.

Ceiling Liner Installation

VEHICLE IS UPSIDE DOWN

FRONT


FLOOR

REAR

ITEM 5
CEILING PANEL

CEILING LIGHTS


CEILING

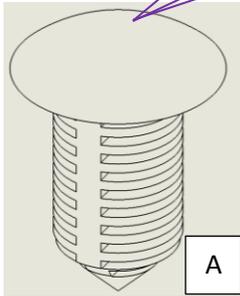

5: Install Item 5, Ceiling Panel.

- Align Ceiling panel with the light features on the ceiling of the vehicle, insert the front of the panel between the headliner and the roof.
- Align the holes at the center of the panel with the holes in the ceiling cross bows and install hardware (A) on each side; this will align the panel with the ceiling.
- Push the panel against the ceiling and install hardware (A), in the holes provided starting from the front working your way towards the rear.

Installation completed

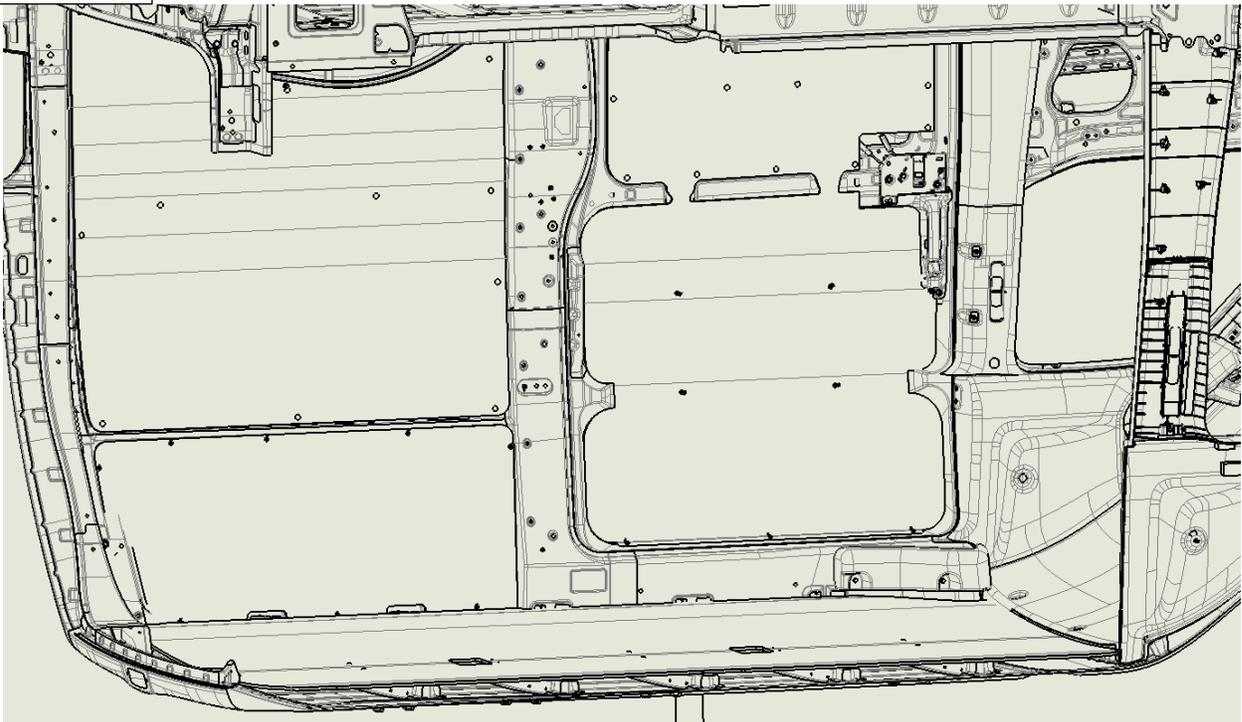

Ceiling Sills Installation

VEHICLE IS UPSIDE DOWN

PASSENGER SIDE


FRONT

ITEM 11
CEILING SILL B


WALL

ITEM 9
CEILING SILL A

REAR

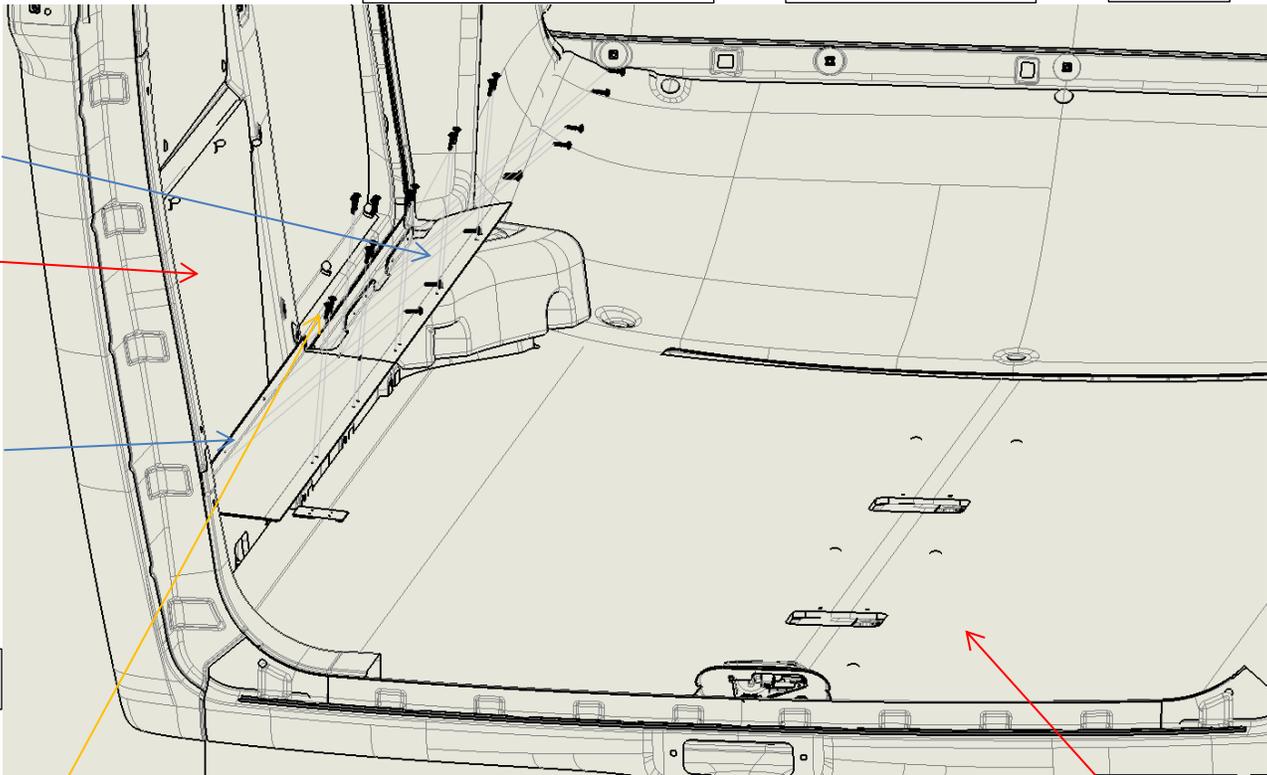


CEILING

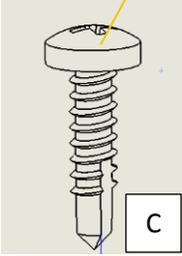


- 6:** Assemble Item 11 and 13 together with the Item 10, Sill Joining Plate (SHOWN BELOW), with hardware (C) in the holes provided.
FOR DRIVER SIDE.
- Assemble Item 12 and 19 together with the Item 10, Sill Joining Plate (SHOWN BELOW), with hardware (C) in the holes provided.
FOR PASSENGER SIDE
 - Install the Sill assemblies on the Driver side as well as on the Passenger side using hardware (C) in the holes provided on the Sills.


Installation completed

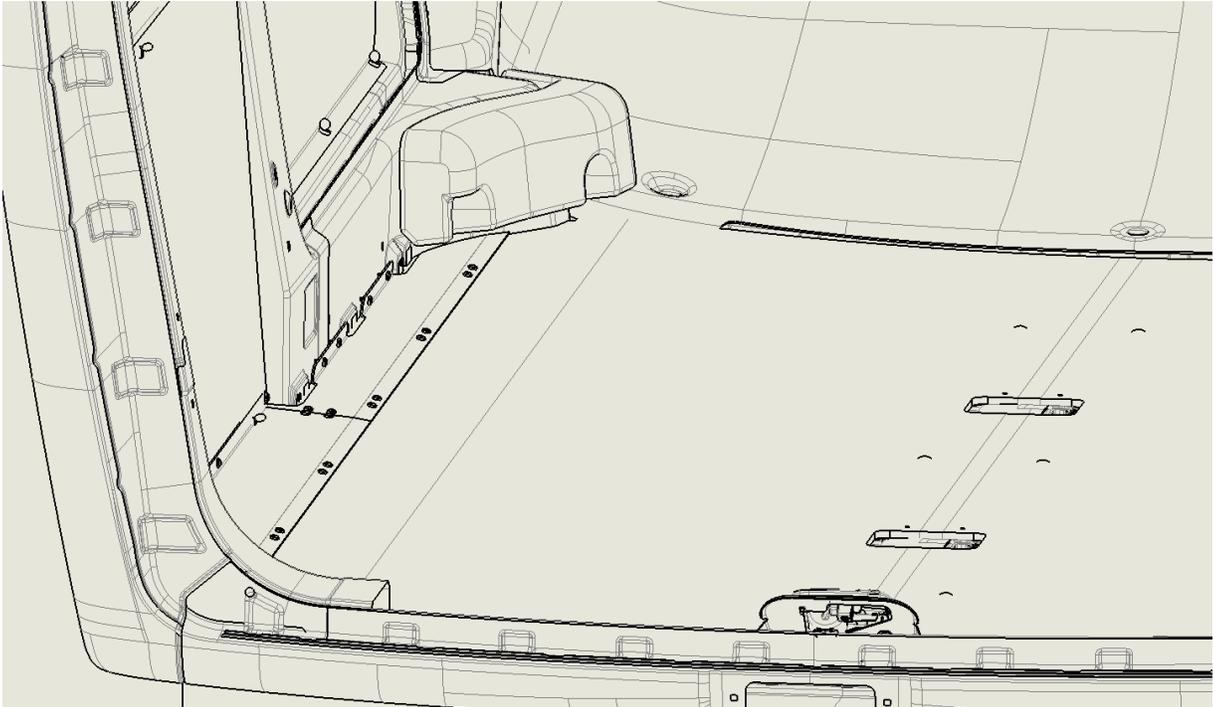

ITEM 10
SILL
JOINING
PLATE

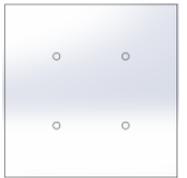

Ceiling Sills Installation Details

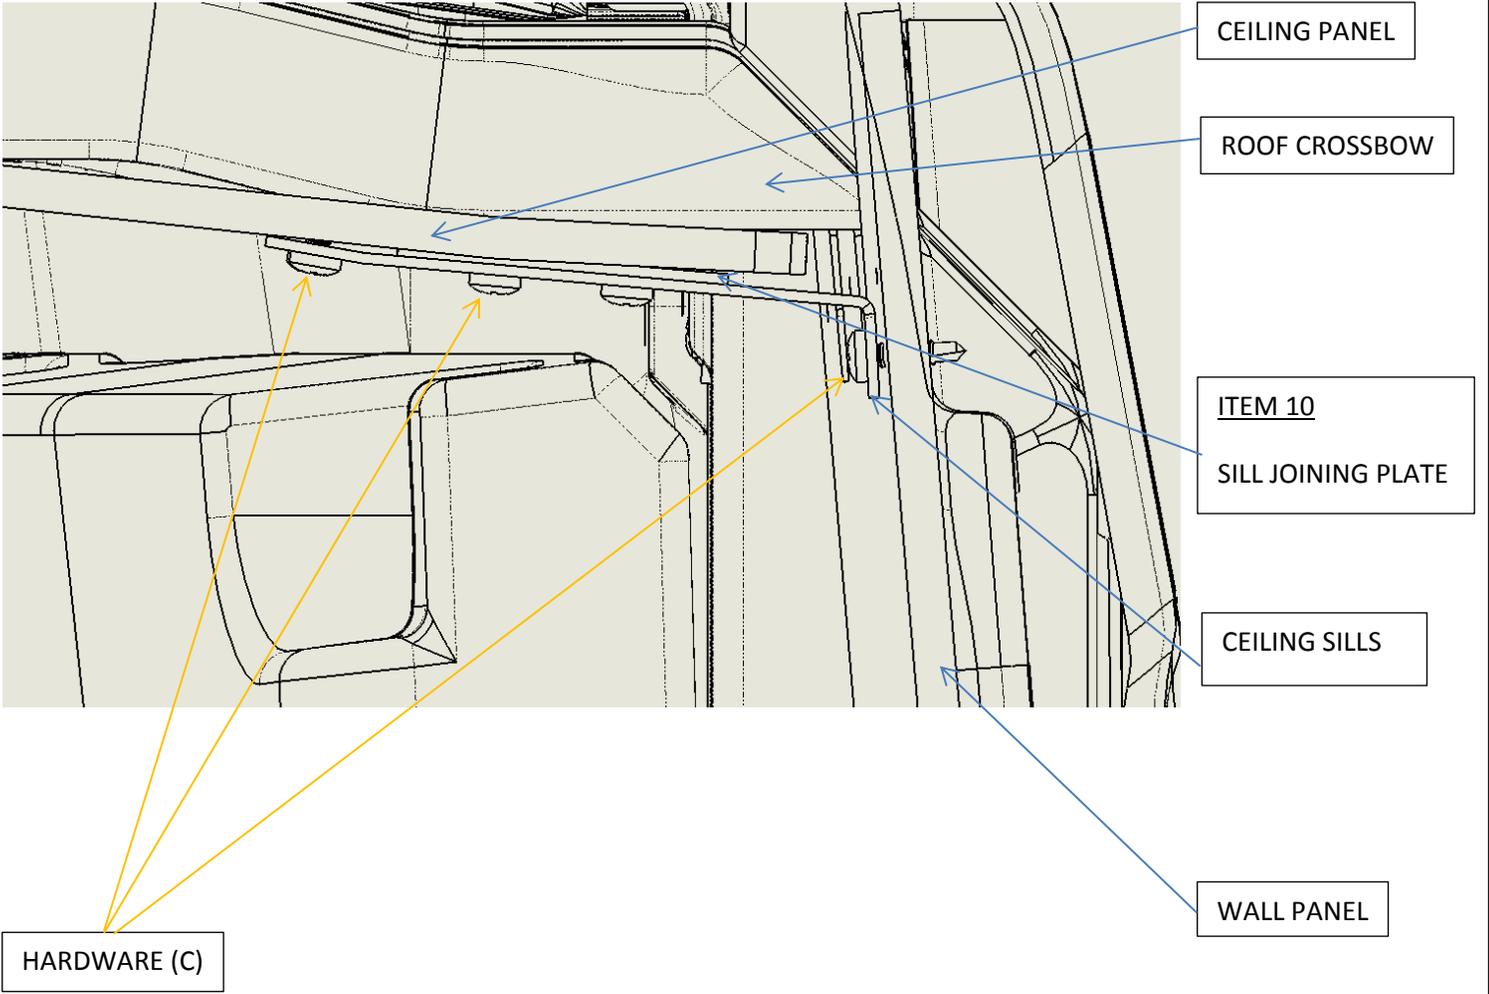


Installation completed

PASSENGER SIDE SILLS

ITEM 9


ITEM 11

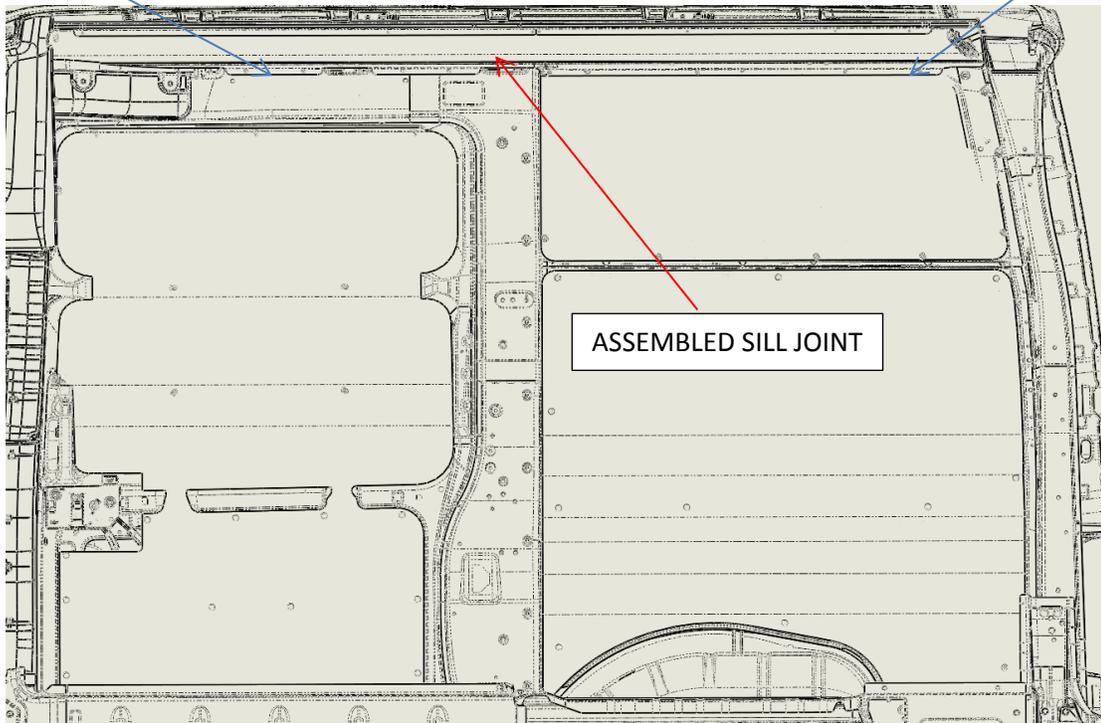


ITEM 19

DRIVER SIDE SILLS

ITEM 12

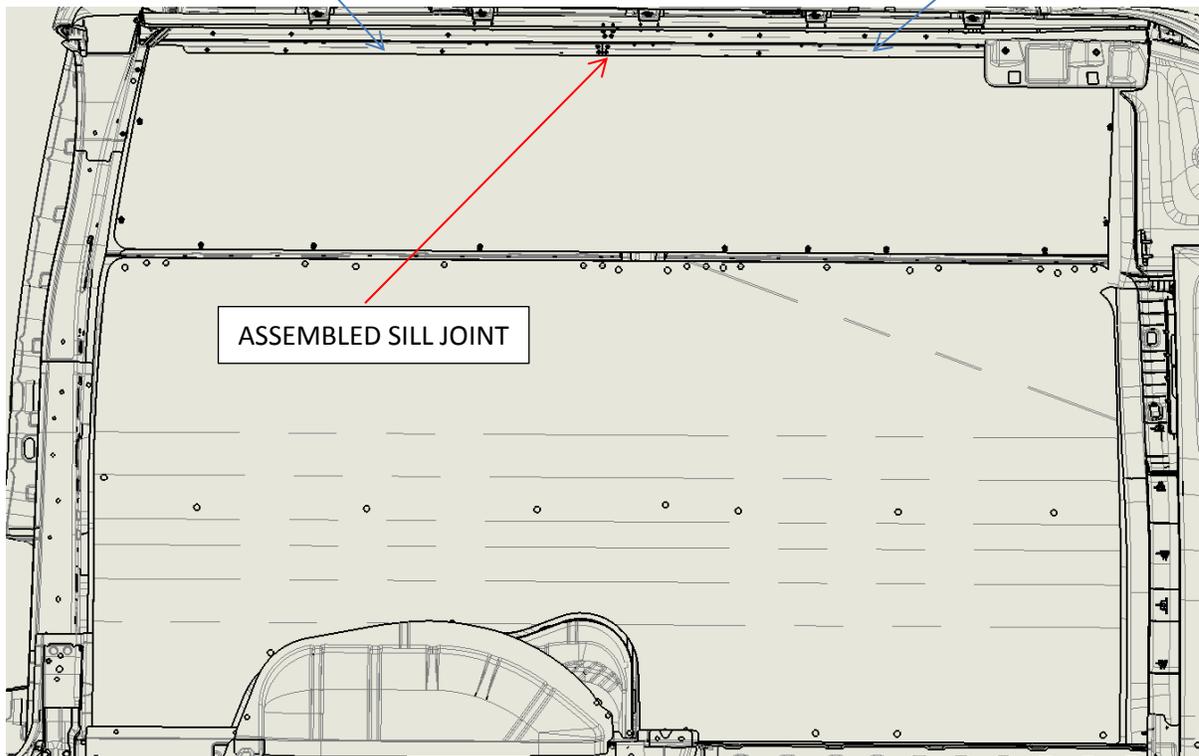


Floor and Floor Sill Installation

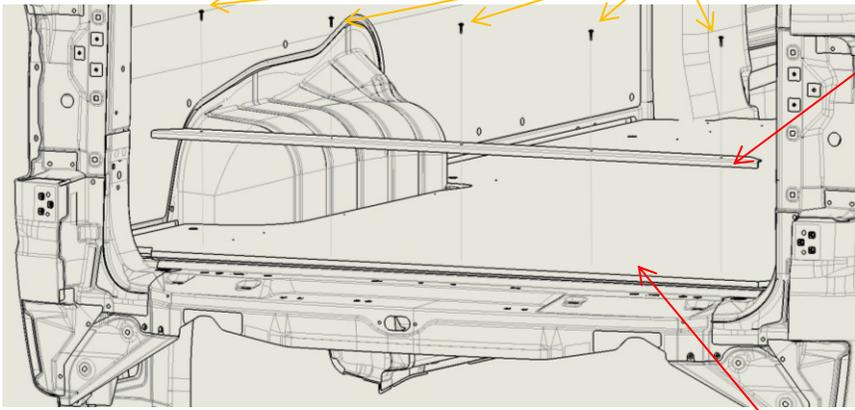

ITEM 14
FLOOR SILL – REAR DOOR


7: Install Items 2, FLOOR and Items 14, 15 FLOOR SILLS.

- Install floor inside the vehicle.
- Align the floor sills in their proper location with the floor edges and install hardware (C).

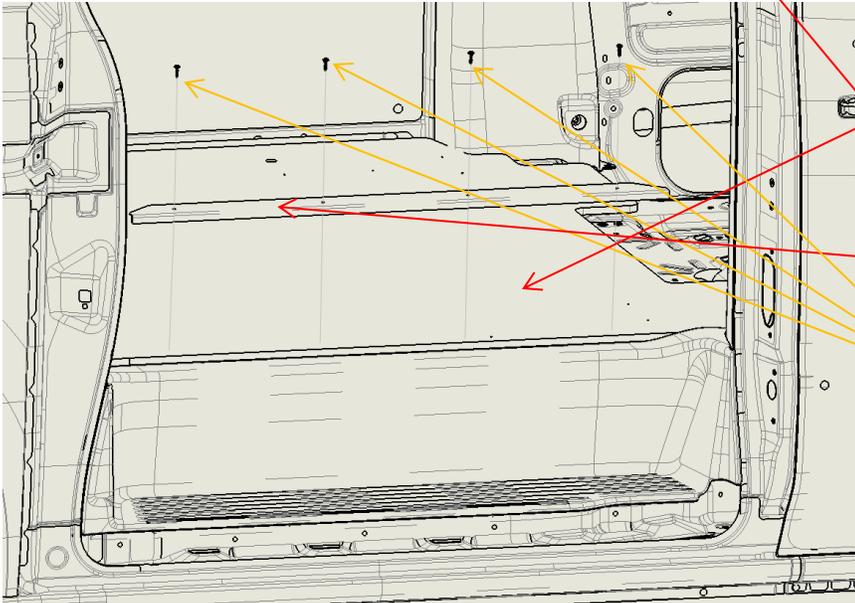

ITEM 2
FLOOR

ITEM 15
FLOOR SILL – SLIDING DOOR

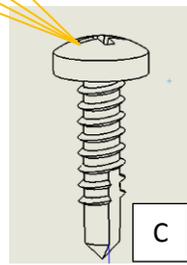

Installation completed

