


SPRINTER 144" WB HIGH ROOF WALL LINERS

INSTALLATION INSTRUCTIONS




NOTES:

- 1. Before commencing, remove all wall liners and "D" Rings already installed in the vehicle.
- 2. Consult layout PDF and compare vehicle layout allocated Legend.
- 3. Prepare hardware shown below and have them ready for installation.
- 4. Wall liners will be installed in the order shown in the instructions.
- 5. A drill with a Phillips driver is required to install hardware (C) #8 Screws, shown below.
- 6. Reinstall all "D" Rings once the wall liner kit installation is completed.

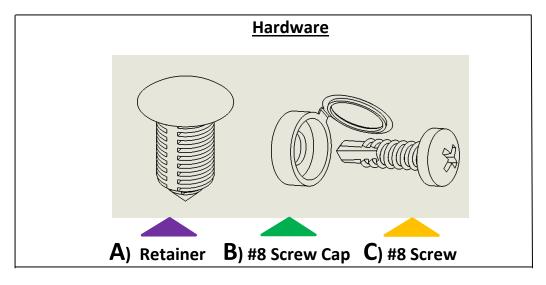


SPRINTER 144" WB HIGH ROOF WALL LINERS

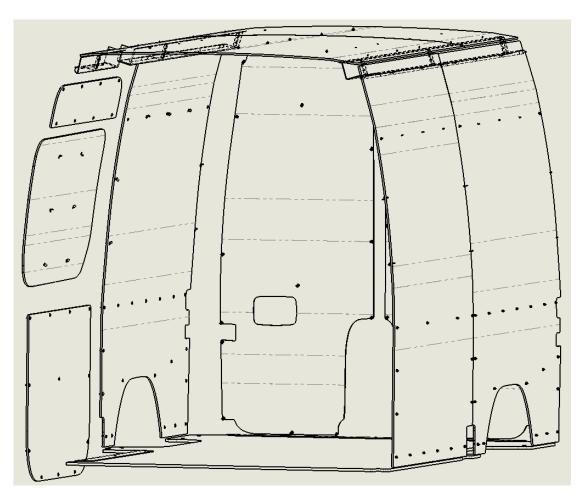


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	103-114-2613.HR	GREY UPPER PANEL SLIDING DOOR SPRINTER HR	1
2	103-114-2613.HR	GREY MIDDLE DOOR PANEL SLIDING GOOR SPRINTER HR	1
3	103-114-2613.HR	GREY BOTTOM PANEL SLIDING DOOR SPRINTER HR	1
4	RETAINER	RETAINER- BLACK NYLON	92
5	SCREW CAP	SCREW CAP	58
6	SCREW	SCREW - PHIL. PAN HD #8X.75 SELF DRILLING	116
7	124-114-2613.HR	GREY FRONT A DRIVER SIDE PANEL SPRINTER 144" WB HR	1
8	124-114-2613.LR	GREY REAR DRIVER SIDE PANEL SPRINTER 144" WB LR	1
9	124-114-2613.HR	GREY REAR PASSENGER SIDE PANEL SPRINTER 144 WB HR	1
10	125-114-2613.HR	GREY CEILING FRONT PANEL SPRINTER 144" WB HR	1
11	125-114-2613.HR	GREY CEILING REAR PANEL SPRINTER 144" WB HR	1
12	103-114-2613.HR	GREY REAR DOOR PANEL DRIVER SIDE SPRINTER HR	1
13	103-114-2613.HR	GREY REAR DOOR PANEL PASSENGER SIDE SPRINTER HR	1
14	127-151-1010.HR	SILL-B SPRINTER 144" WB HR	1
15	127-151-1010.HR	SILL-D SPRINTER 144" WB HR	1
16	127-151-1010.HR	SILL-D-1 SPRINTER 144" WB HR	1
17	127-151-1010.HR	SILL-E SPRINTER 144" WB HR	1
18	127-151-1010.HR	SILL-F SPRINTER 144" WB HR	1
19	127-151-1010.HR	SILL-A-1 SPRINTER 144" WB HR	1
20	127-151-1010.HR	SILL-A SPRINTER 144" WB HR	1
21	147-151-1010	SILL-C SPRINTER 170" EXT WB HR	1
22	127-151-1010.HR	SILL-C-1 SPRINTER 144 WB HR	1
23	122-xxx-6441	FLOOR - SPRINTER 144"	1
24	108-151-1010	SILL - FLOOR- REAR - SPRINTER	1
25	106-151-1010	SILL - FLOOR - SIDE DOOR - SPRINTER	1
26	127-151-1010.HR	TOP SILL JOINER PLATE SPRINTER 144" WB HR	6

Note: Model may differ depending if the vehicle purchased came with an OEM partition or not.

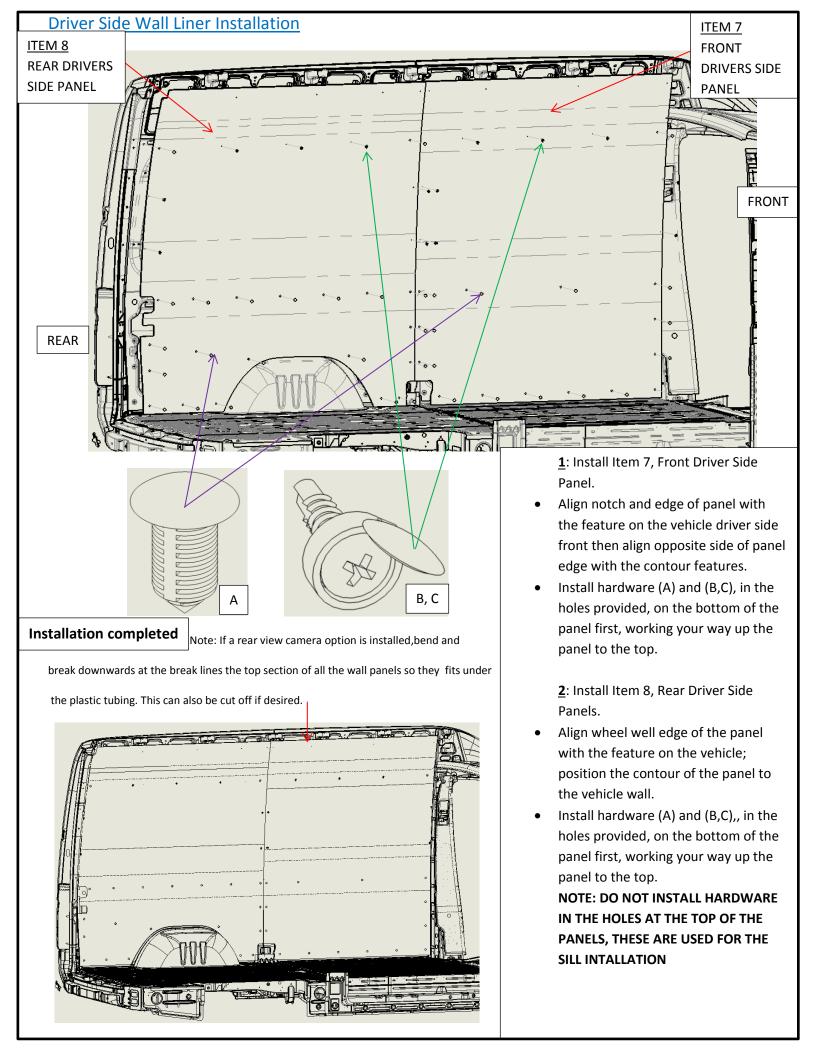


Back Door Wall Liner Installation

ITEM 13 REAR DOOR PASSENGER SIDE PANEL

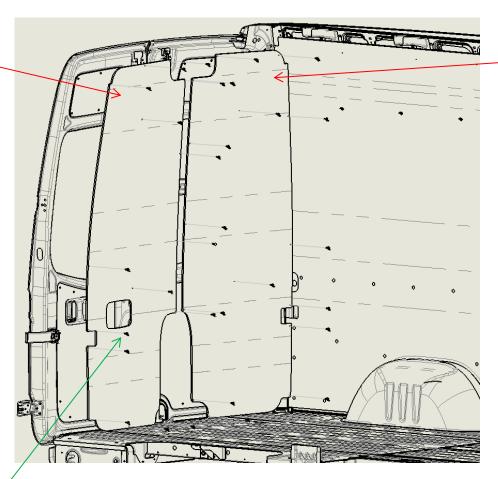

ITEM 12 REAR DOOR DRIVERS SIDE PANEL

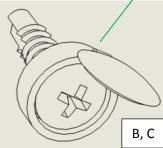



<u>3</u>: Install Item 12 and 13, Rear door panels,


Note: Rear doors must be closed when installing door panels.

- Align the panels with the door contour; do not mount tight against the door seals.
- Install hardware (B, C) on the bottom of the panel first, working your way up the panel to the top.

Installation completed

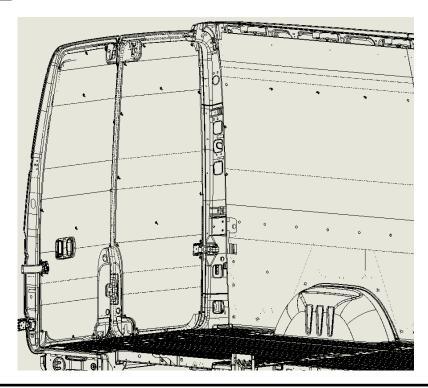


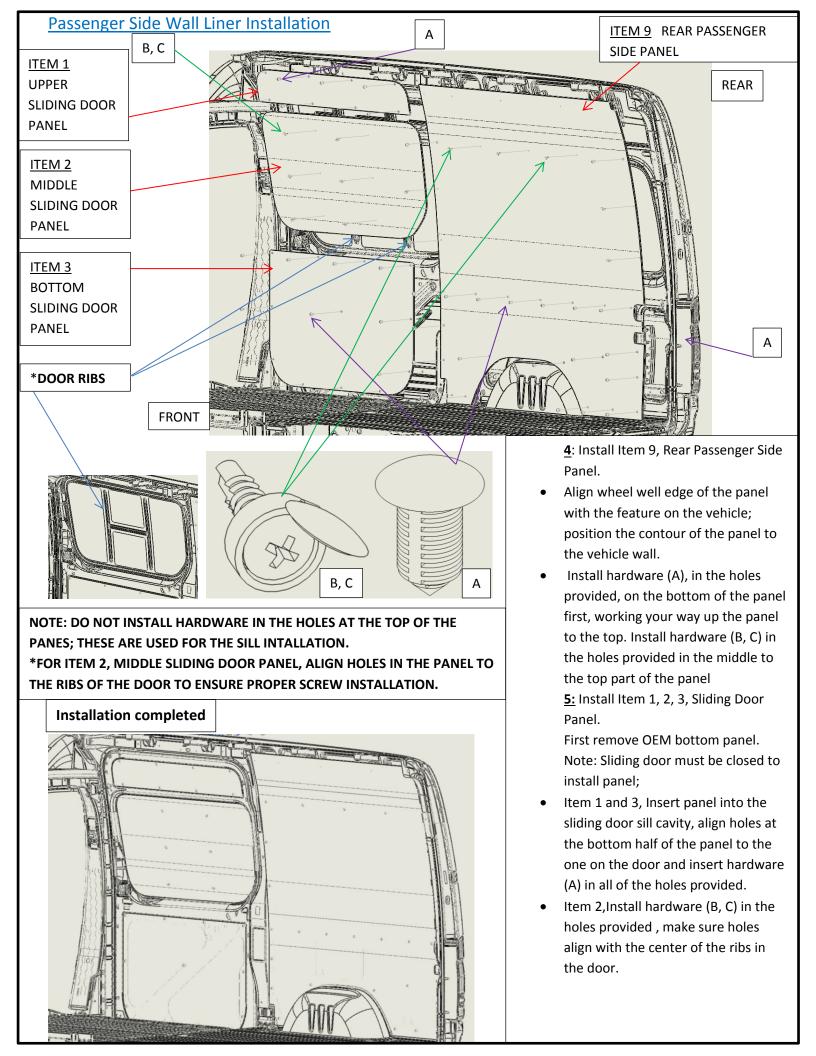


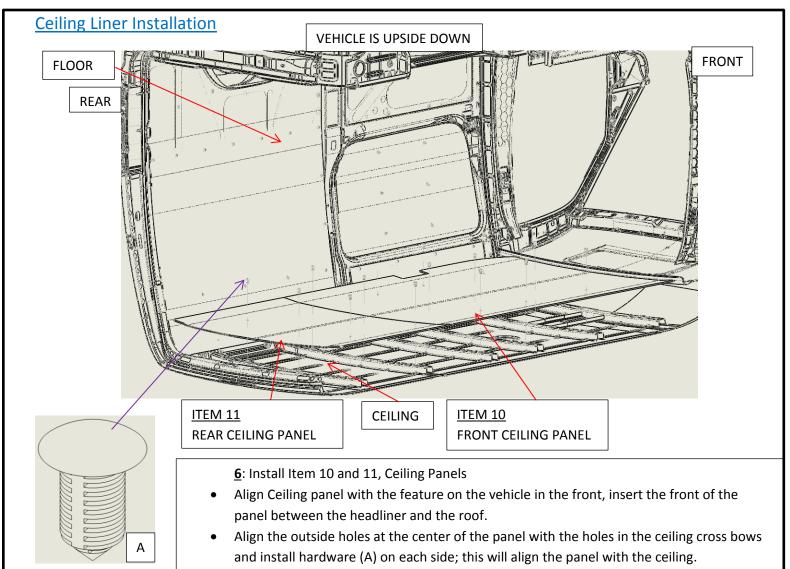


- Push the panel against the ceiling and install hardware (A), in the holes provided starting from the front working your way towards the rear.
- Note: If a rear view camera option is installed, bend and break downwards at the break lines the side sections of all the ceiling panels so they fits over the plastic tubing. This can also be cut off if desired


Installation completed

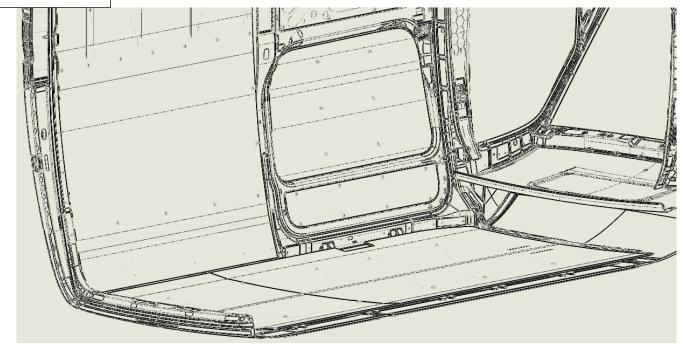

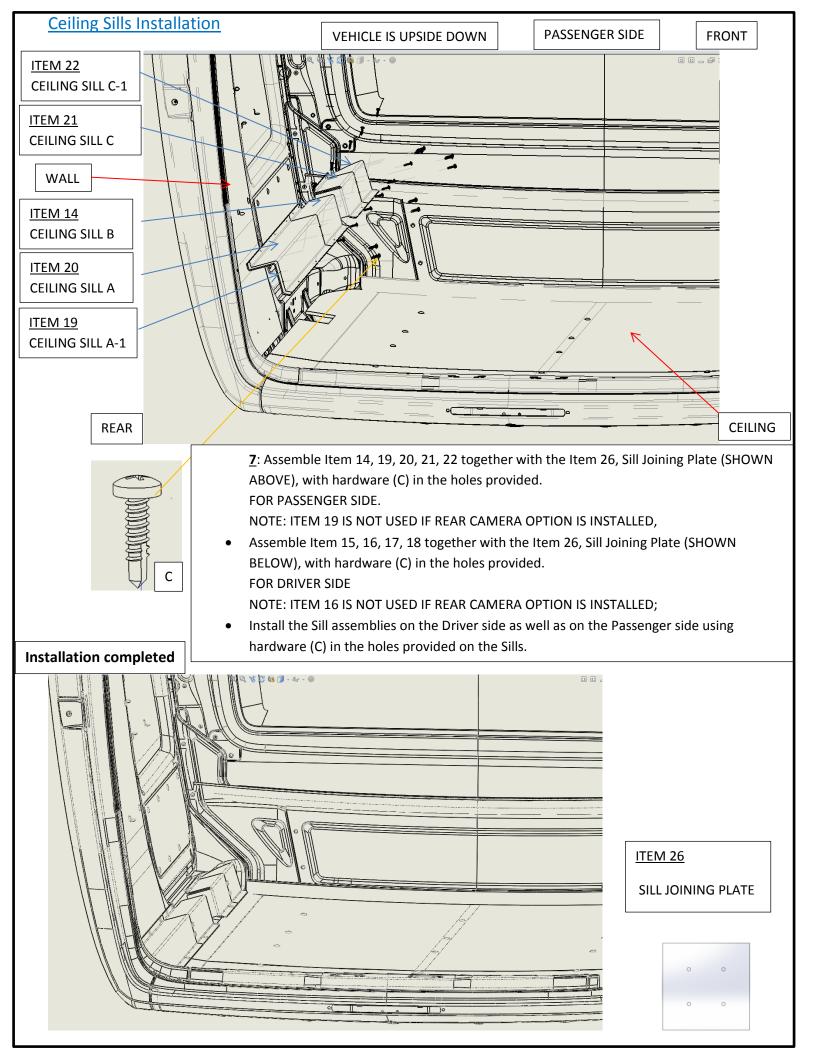

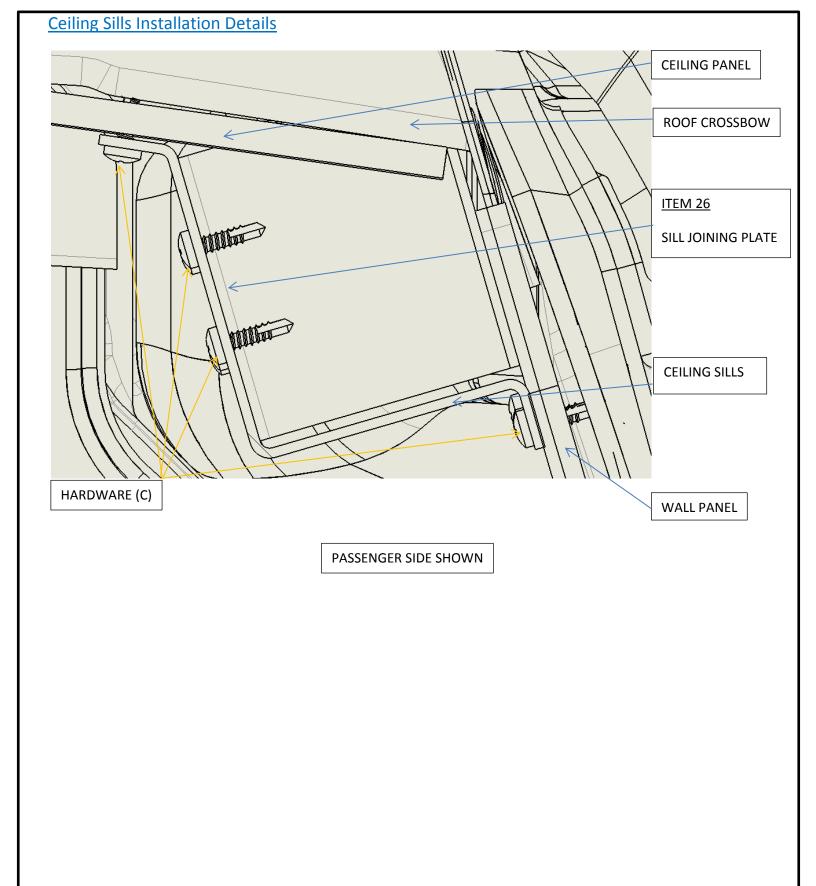

PASSENGER SIDE ASSEMBLED SILL JOINT LIGHT OPENING

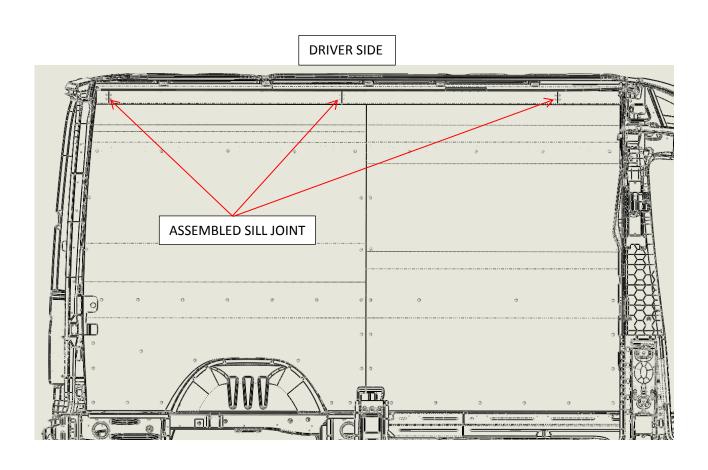

Floor and Floor Sill Installation <u>ITEM 24</u> FLOOR SILL – REAR DOOR 8: Install Items 23 FLOOR and Items 24,25 FLOOR SILLS. Install floor inside the vehicle. Align the floor sills in their proper location with the floor edges and install hardware (C). <u>ITEM 23</u> FLOOR **ITEM 25** FLOOR SILL – SLIDING DOOR Installation completed

