


Balboa Power Hook Up

*****Electrical Hook Up Must Be Performed By A Licensed Electrician*****

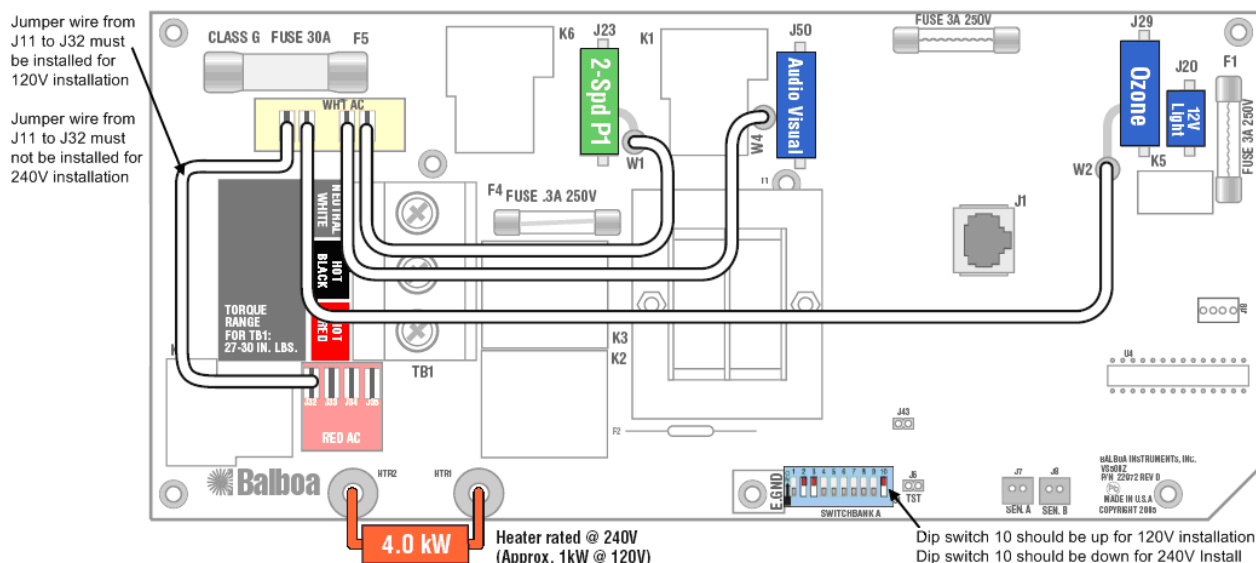

120V Power Hook Up (not available for all models)

Install Neutral onto the Neutral White labeled on the terminal block TB1
Install Ground into bonding bar. Ground wire should go through the hole located on the left of the casing. The hole is marked with a green label inside the spa pack.
Install Line 1 onto the Hot Black labeled on the terminal block TB1. Hot Red will remain empty.

For 120V power hook up dip switch 10 must be in the on position.
For 120V hook up the white 120V jumper wire must be installed from J11 to J32 (WHT AC to RED AC)
If J11 already has a wire installed unplug this wire and move it to J16 or any available spade in the WHT AC.

Without the jumper wire the tub will not heat correctly installed 120V.

Note. The white jumper wire may be located in a plastic bag on the back side of the spa pack.

240V Power Hook Up (1 Pump systems only)

Install Neutral onto the Neutral White labeled on the terminal block TB1
Install Ground into bonding bar. Ground wire should go through the hole located on the left of the casing. The hole is marked with a green label inside the spa pack.
Install Line 1 onto the Hot Black labeled on the terminal block TB1.
Install Line 2 onto the Hot Red labeled on the terminal block TB1

For convertible tubs installed 240V power hook up dip switch 10 must be in the off position.
For convertible tubs installed 240V make sure there is not jumper wire installed from J11 to J32. (WHT AC to RED AC)

If jumper wire is not removed GFCI will trip instantly.