



ODOROX[®]
Hydroxyl Group

Boss Quick Set-Up

SET-UP INSTRUCTIONS

- STEP 1:** Remove the louvered side panel (not pictured) from the Boss.
- STEP 2:** Take off the filter cover located on top of the Boss, as shown in Diagram 1, by removing the 2 Phillips screws. Remove the filter.
- STEP 3:** Remove the white foam packaging and connect the optics to the wire harnesses as shown in Diagram 2.
- STEP 4:** Close the louvered side panel and screw in the filter cover on top.
- STEP 5:** Plug the Boss into a 120 volt power supply and turn it on.
Green LED should illuminate, which indicates that the Boss is now operating.
- STEP 6:** Adjust the fan speed between the High and Low settings as needed.
High speed is usually recommended, but Low speed can be used for small areas.
- STEP 7:** Set Processor to Low to use 1 UV optic, and set Processor to High to use 2 UV optics.
High setting is usually recommended, but Low setting can be used for light odors and small areas.

DIAGRAM 1

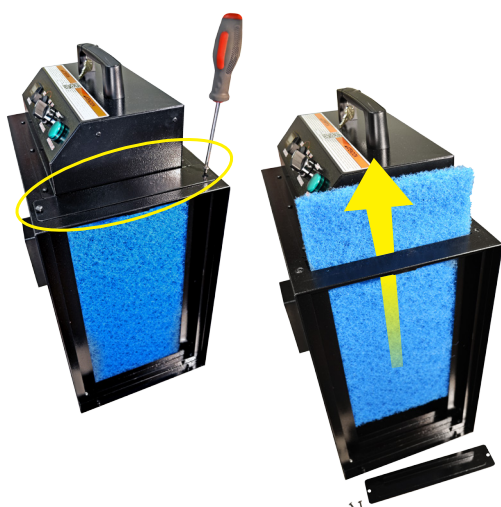


DIAGRAM 2

