





INSTALLATION INSTRUCTIONS - STEP 1

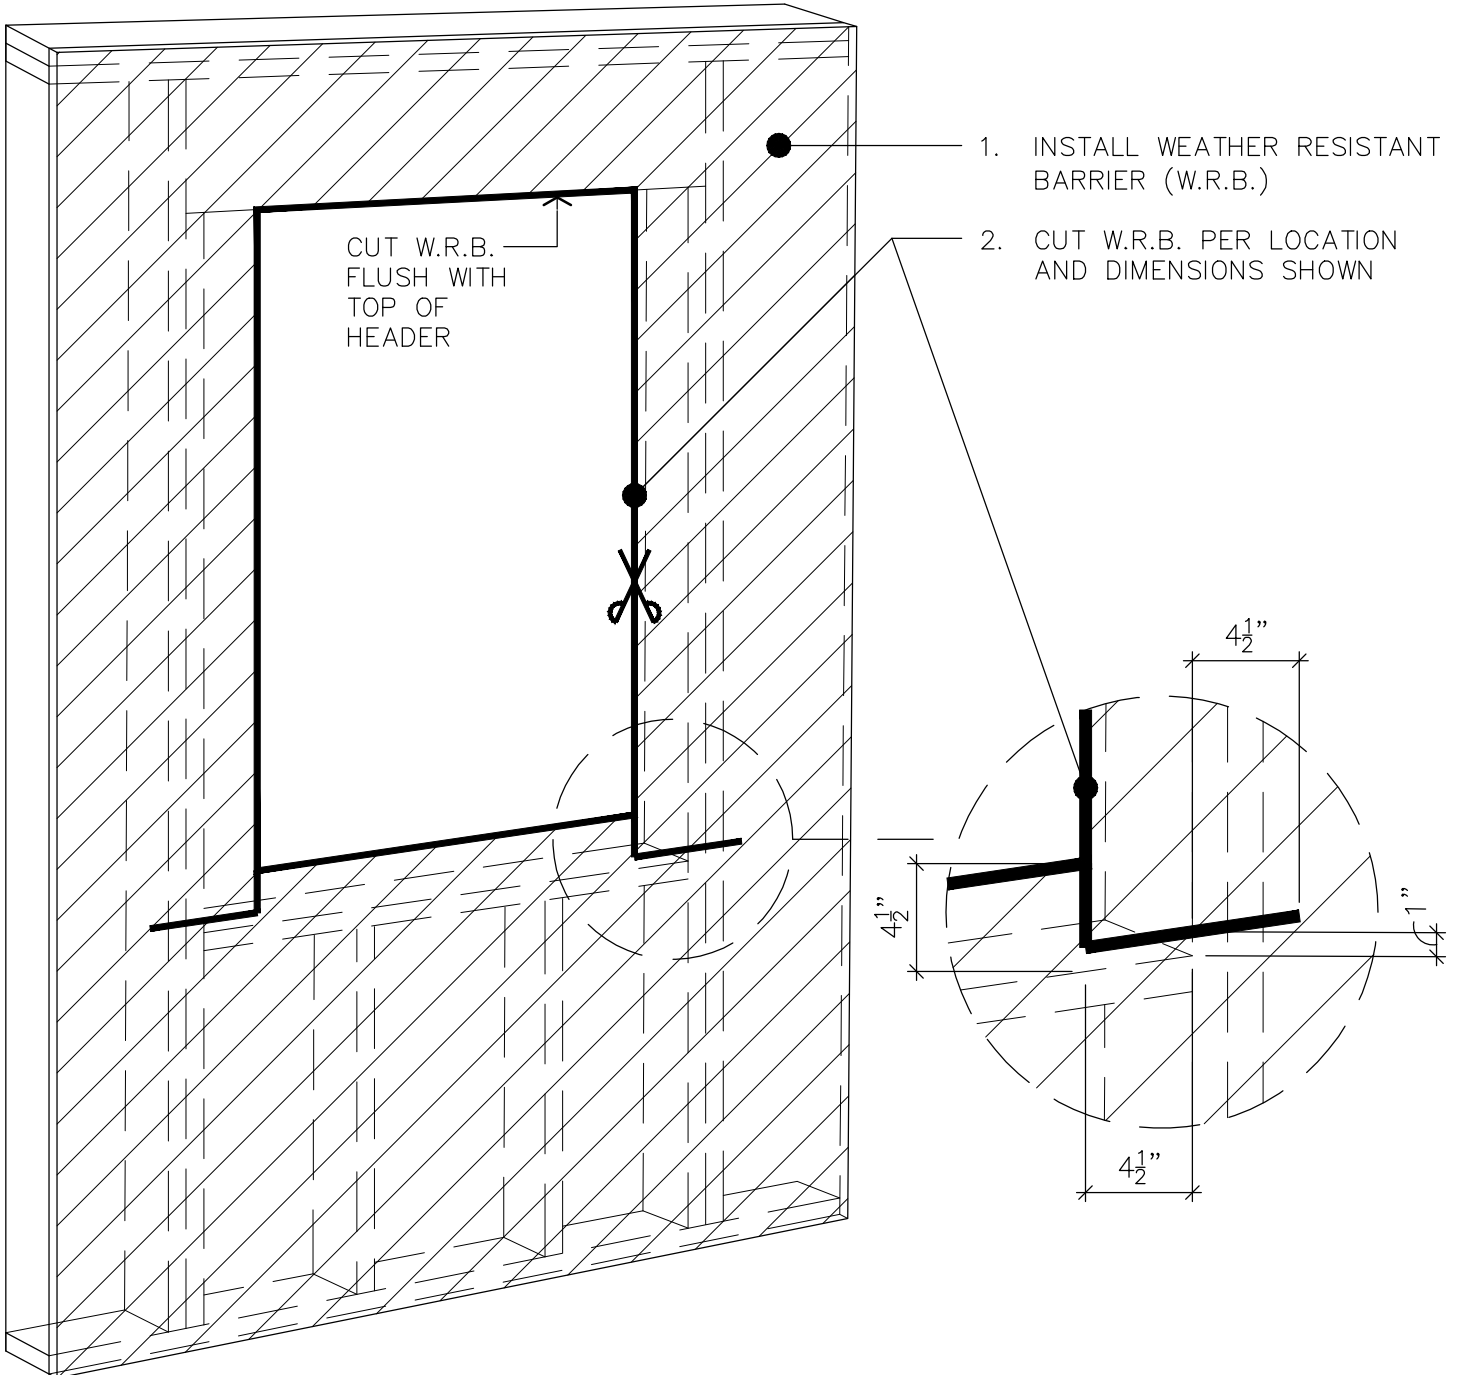



INSTALLATION INSTRUCTIONS - STEP 2

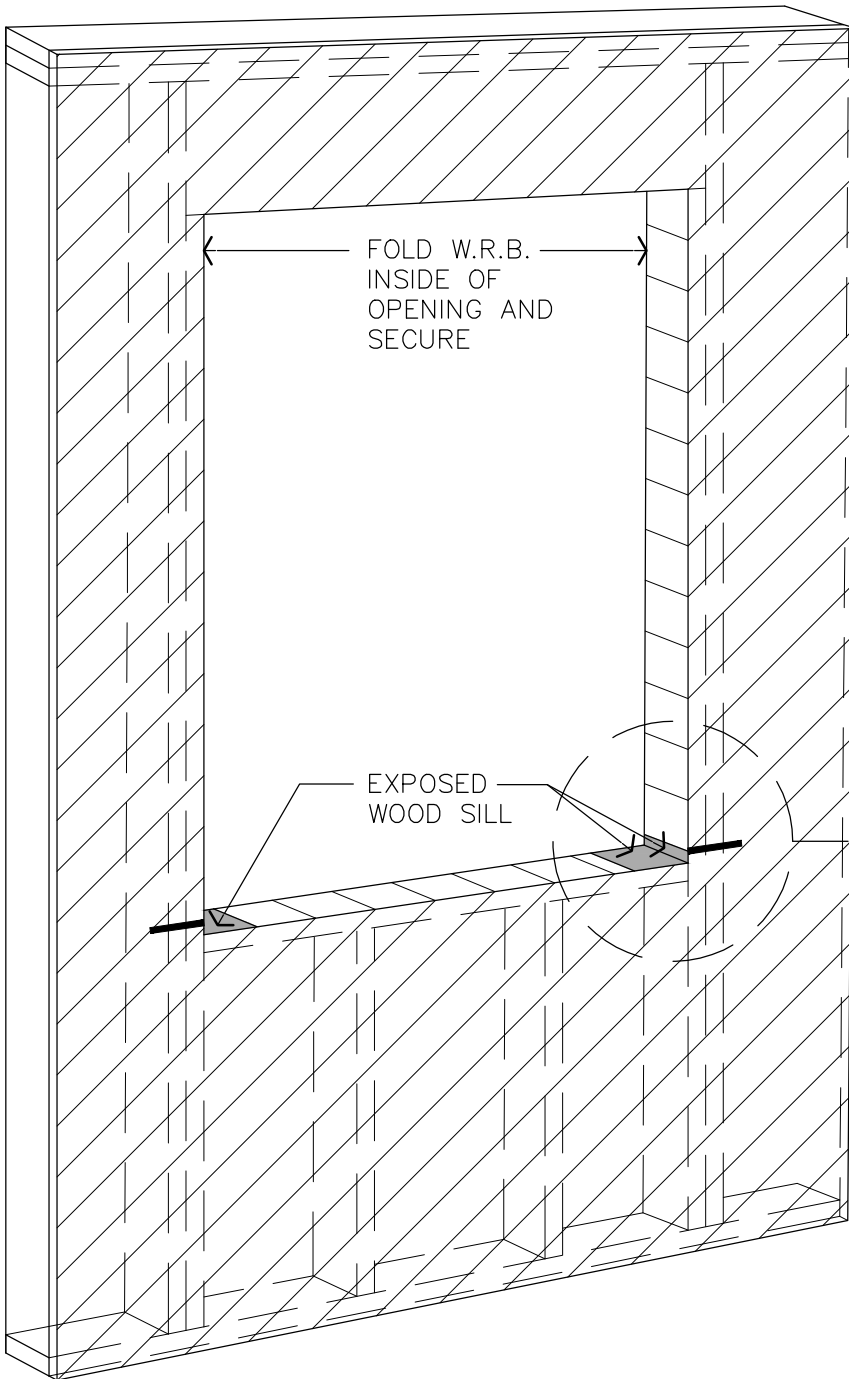


FOLD W.R.B.
INSIDE OF
OPENING AND
SECURE

EXPOSED
WOOD SILL

1. FOLD W.R.B. INSIDE AT SIDES
AND SILL AND SECURE


2. LEAVE BOTTOM CORNERS
LOOSE TO ALLOW FOR
SILLDRY PAN TO SLIDE
UNDERNEATH

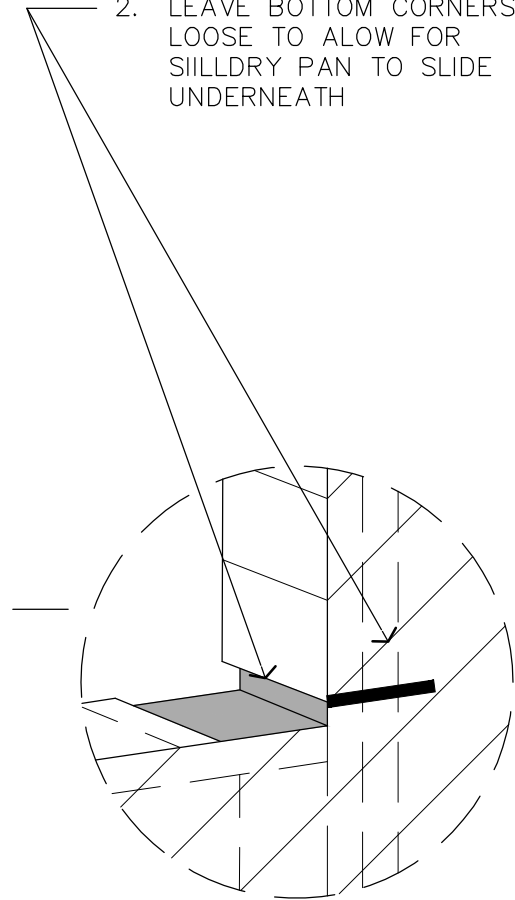



SILLDRY®

INSTALLATION INSTRUCTIONS - STEP 3

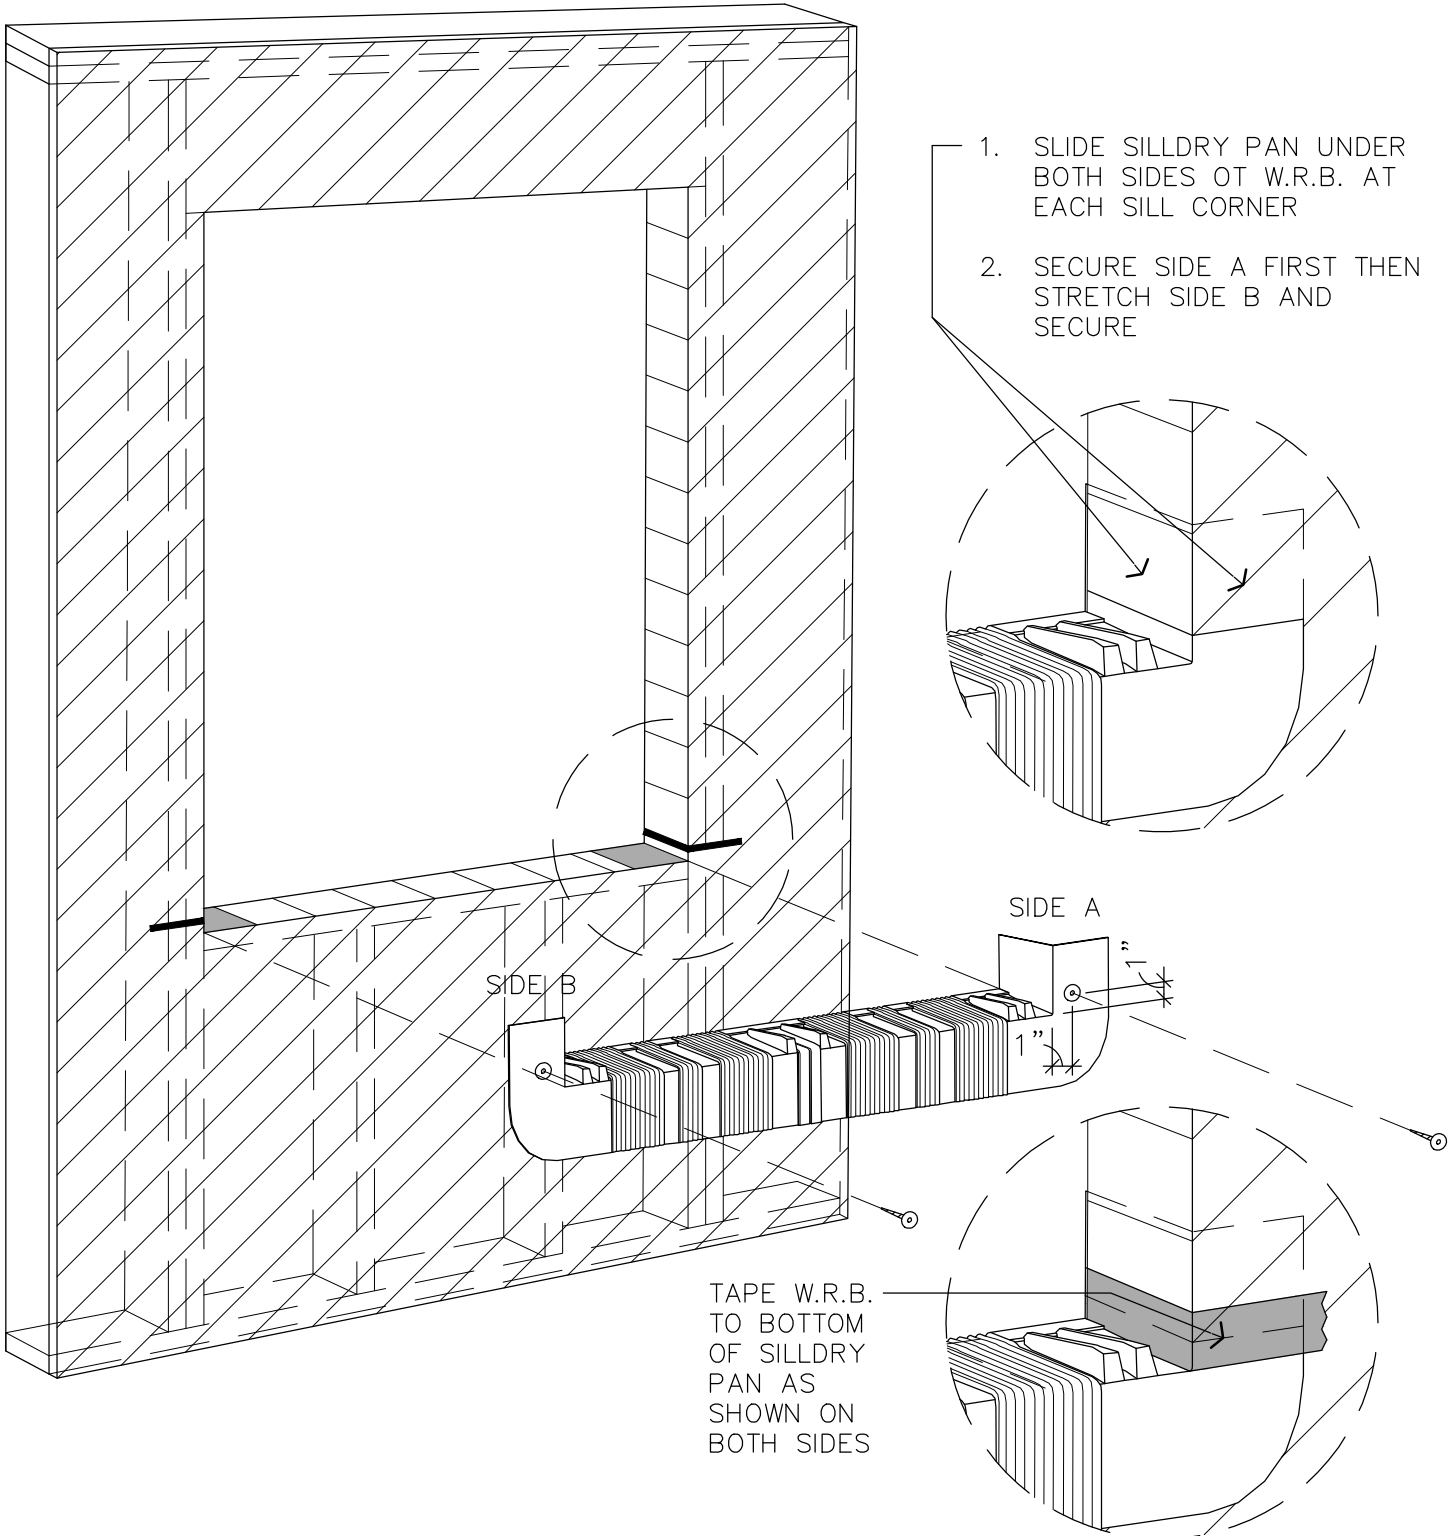



SILLDRY®

INSTALLATION INSTRUCTIONS - STEP 4

