



Use small regular tip screw driver.  
Insert screw driver between gray and white shell as shown.  
Apply light pressure till shells just separate.  
Repeat on opposite side.  
By hand separate the shells fully

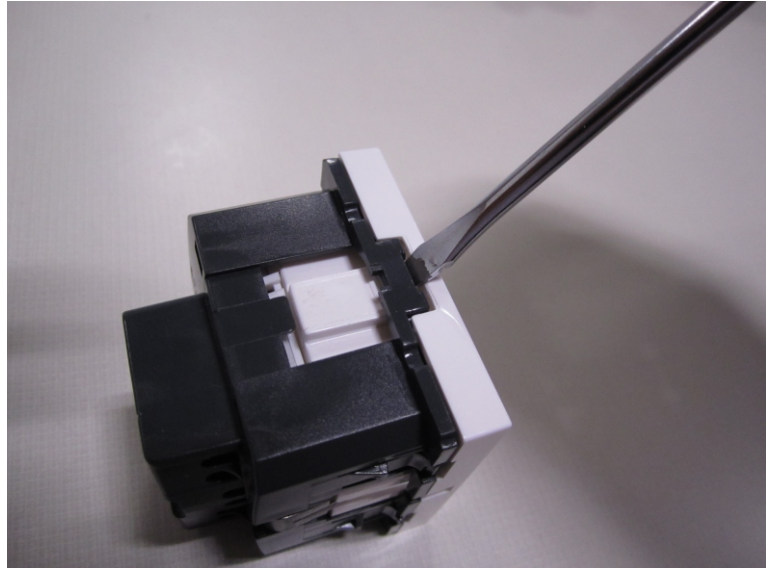

Per local wiring codes, insert wires to areas shown.  
If a circuit breaker is being used, it should be in line with the hot terminal.

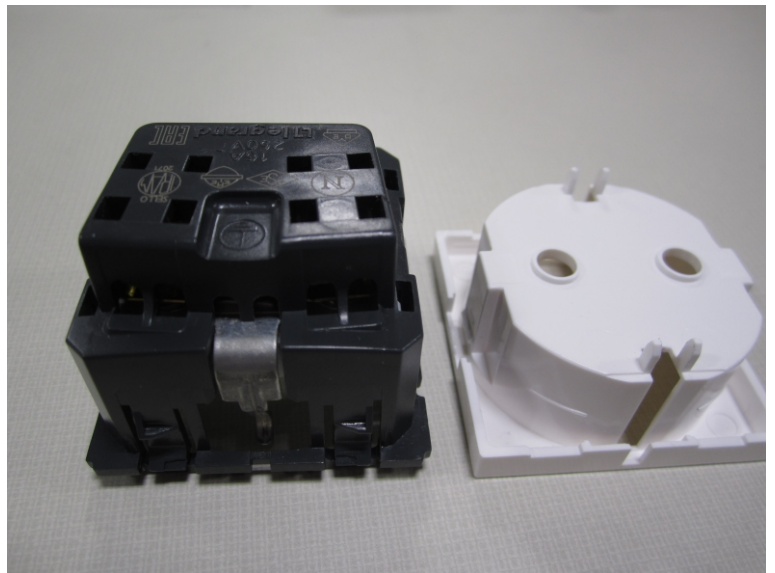

With wires in place. use a 1\8" regular tip screw driver to tighten terminals on side shown.

