


FTR IW PLATES SHALL BE FASTENED INTO PURLINS AT:

CORNER ZONE	6" O.C.
PERIMETER ZONE	8" O.C.
FIELD ZONE	12" O.C.

FILL INSULATION, AND COVER BOARD OVER EXISTING METAL ROOF PANELS

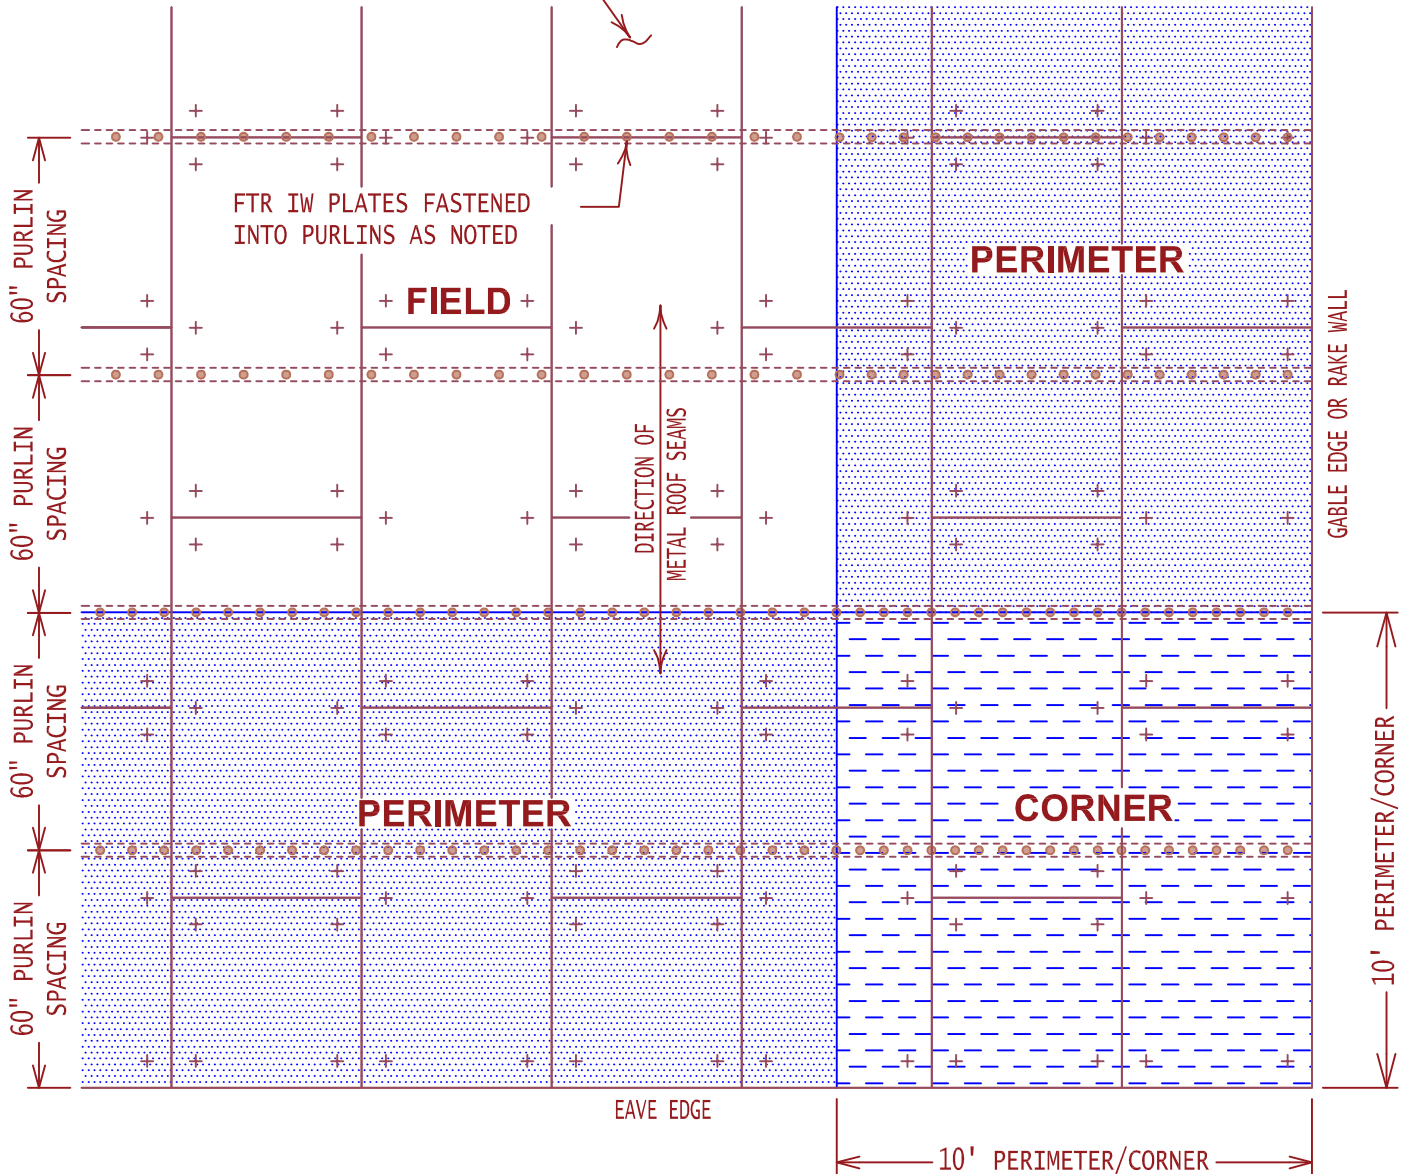

NOTE:

REFER TO DETAILS FTR-IWMR1 & FTR-MR2 FOR INSULATION LAYOUT AND ATTACHMENT OVER EXISTING METAL ROOF PANELS.



GENERAL REFERENCE:
"FTR GS 02/13"

APPLICABLE SYSTEMS:
"FTR IW 07/15"
"FTR MR 11/13"

INDUCTION WELD (IW) PLATE ATTACHMENT LAYOUT ON METAL RETROFIT

REVISES DETAIL	ISSUE DATE	DRAWING NUMBER
ALL PREVIOUS	07-17-15	FTR-IWMR3