


NOTE:  
 BOTTOM LAYER OF INSULATION SHALL BE LAID DOWN IN  
 A STAGGERED PROFILE, STAGGER AND OFFSET TOP LAYER  
 OF INSULATION FROM BOTTOM LAYER TO PREVENT  
 ALIGNED EDGES.

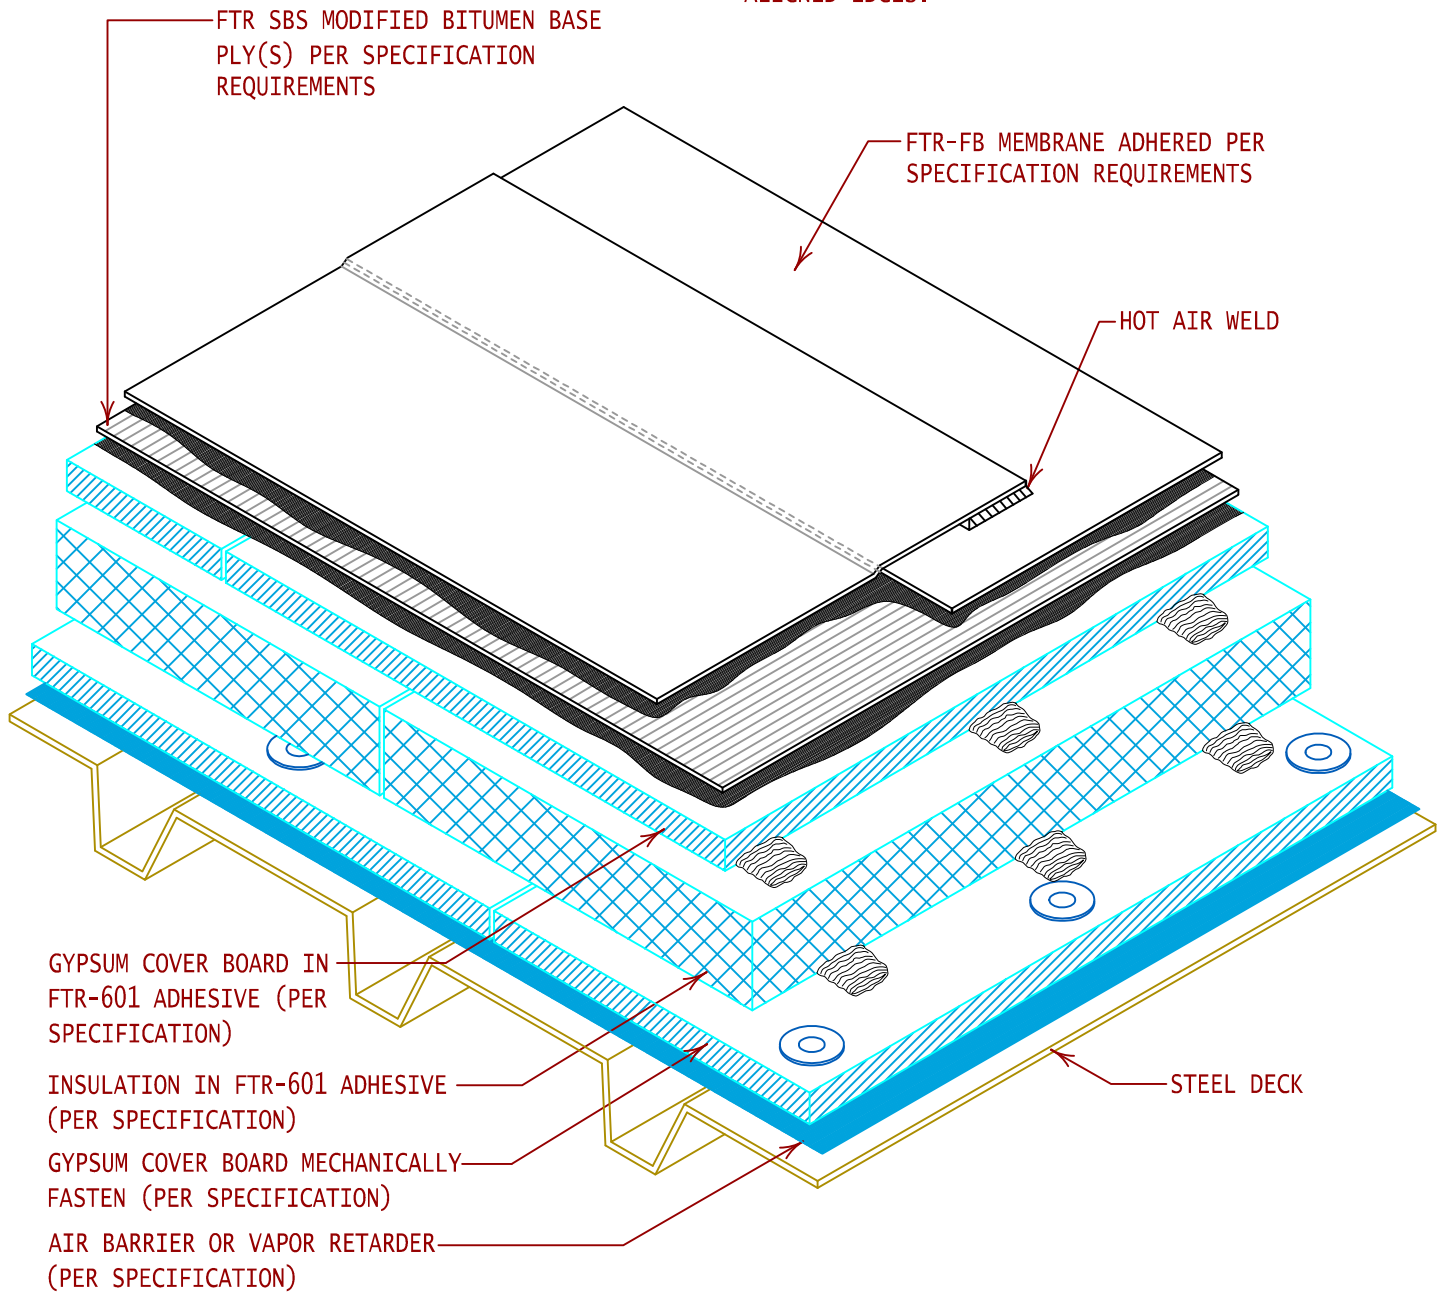

GENERAL REFERENCE: "FTR GS 02/13"		
APPLICABLE SYSTEMS: "FTR MP 02/13"		
REVISES DETAIL	ISSUE DATE	DRAWING NUMBER
ALL PREVIOUS	06-16-15	FTR-DAS10MP