


NOTE:
 BOTTOM LAYER OF INSULATION SHALL BE LAID DOWN IN
 A STAGGERED PROFILE. STAGGER AND OFFSET TOP LAYER
 OF INSULATION FROM BOTTOM LAYER TO PREVENT
 ALIGNED EDGES.

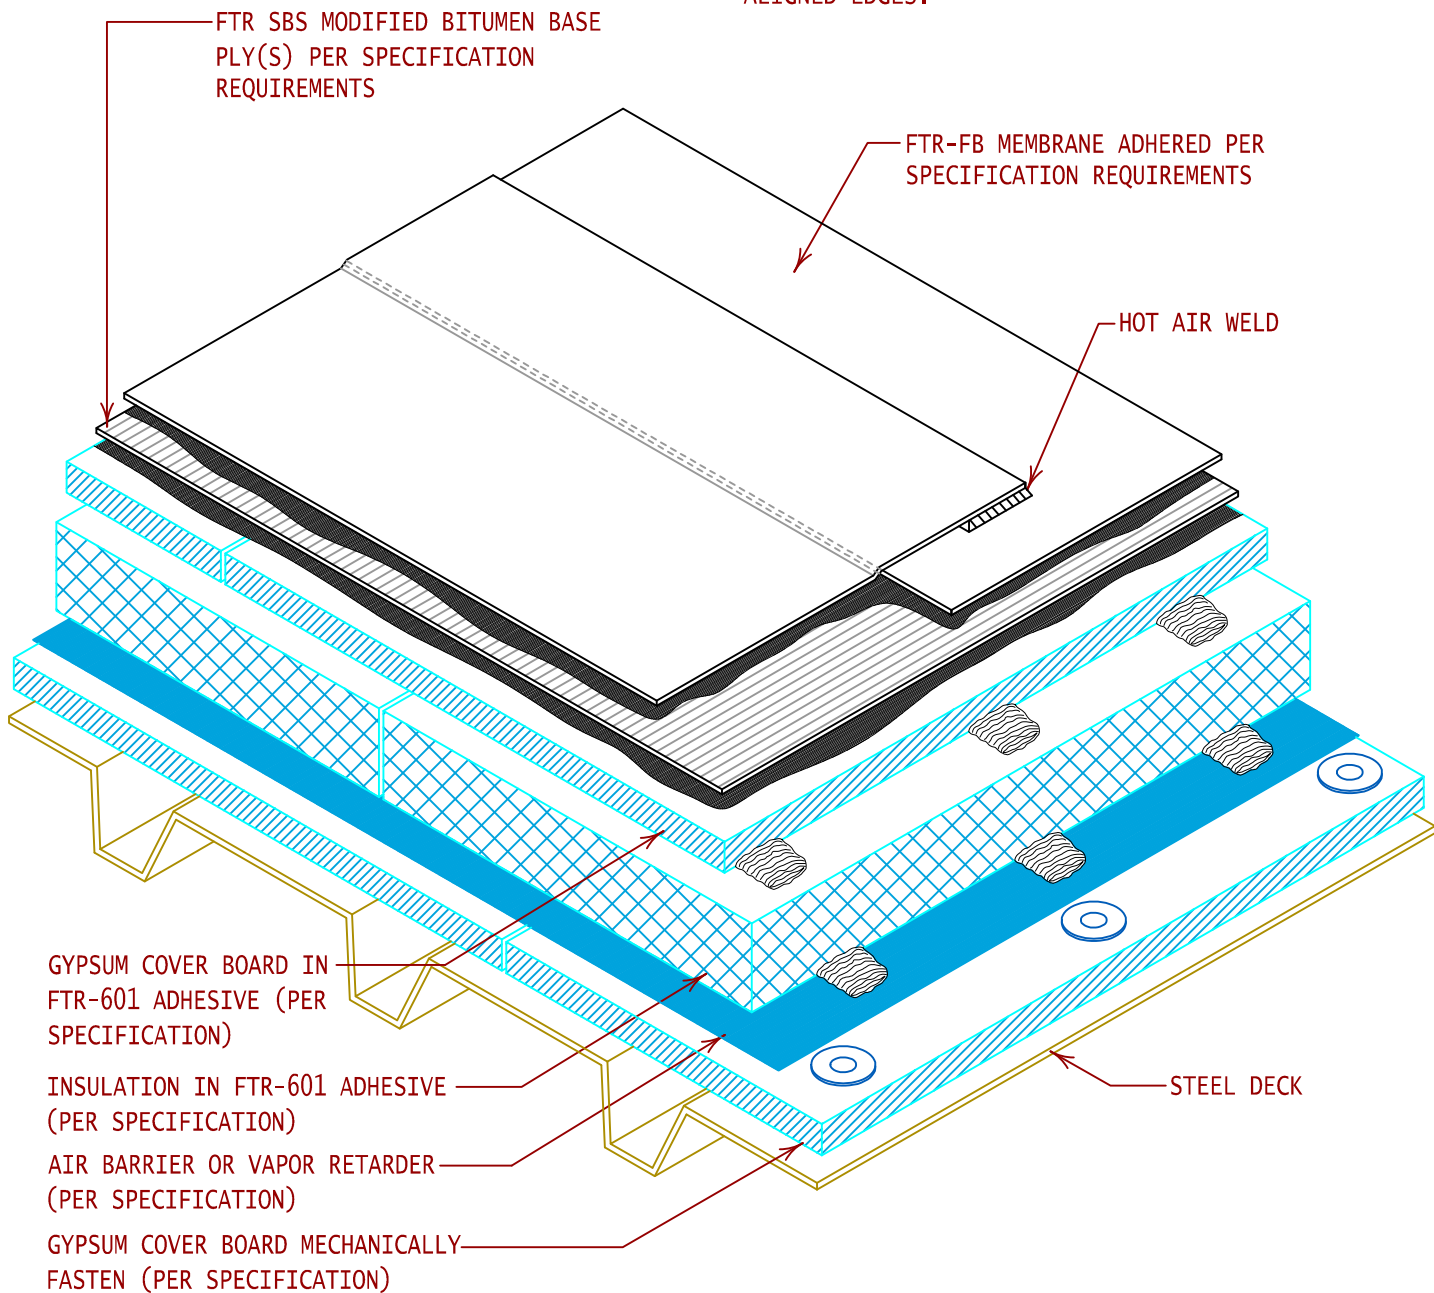

GENERAL REFERENCE: "FTR GS 02/13"			MULTI-PLY ROOF SYSTEM CROSS SECTION (MECH. FAST. & ADHERED INSUL.)		
APPLICABLE SYSTEMS: "FTR MP 02/13"					
REVISES DETAIL	ISSUE DATE	DRAWING NUMBER			
ALL PREVIOUS	06-16-15	FTR-DAS11MP			