


NOTE:  
 BOTTOM LAYER OF INSULATION SHALL BE LAID DOWN IN  
 A STAGGERED PROFILE. STAGGER AND OFFSET TOP LAYER  
 OF INSULATION FROM BOTTOM LAYER TO PREVENT  
 ALIGNED EDGES.

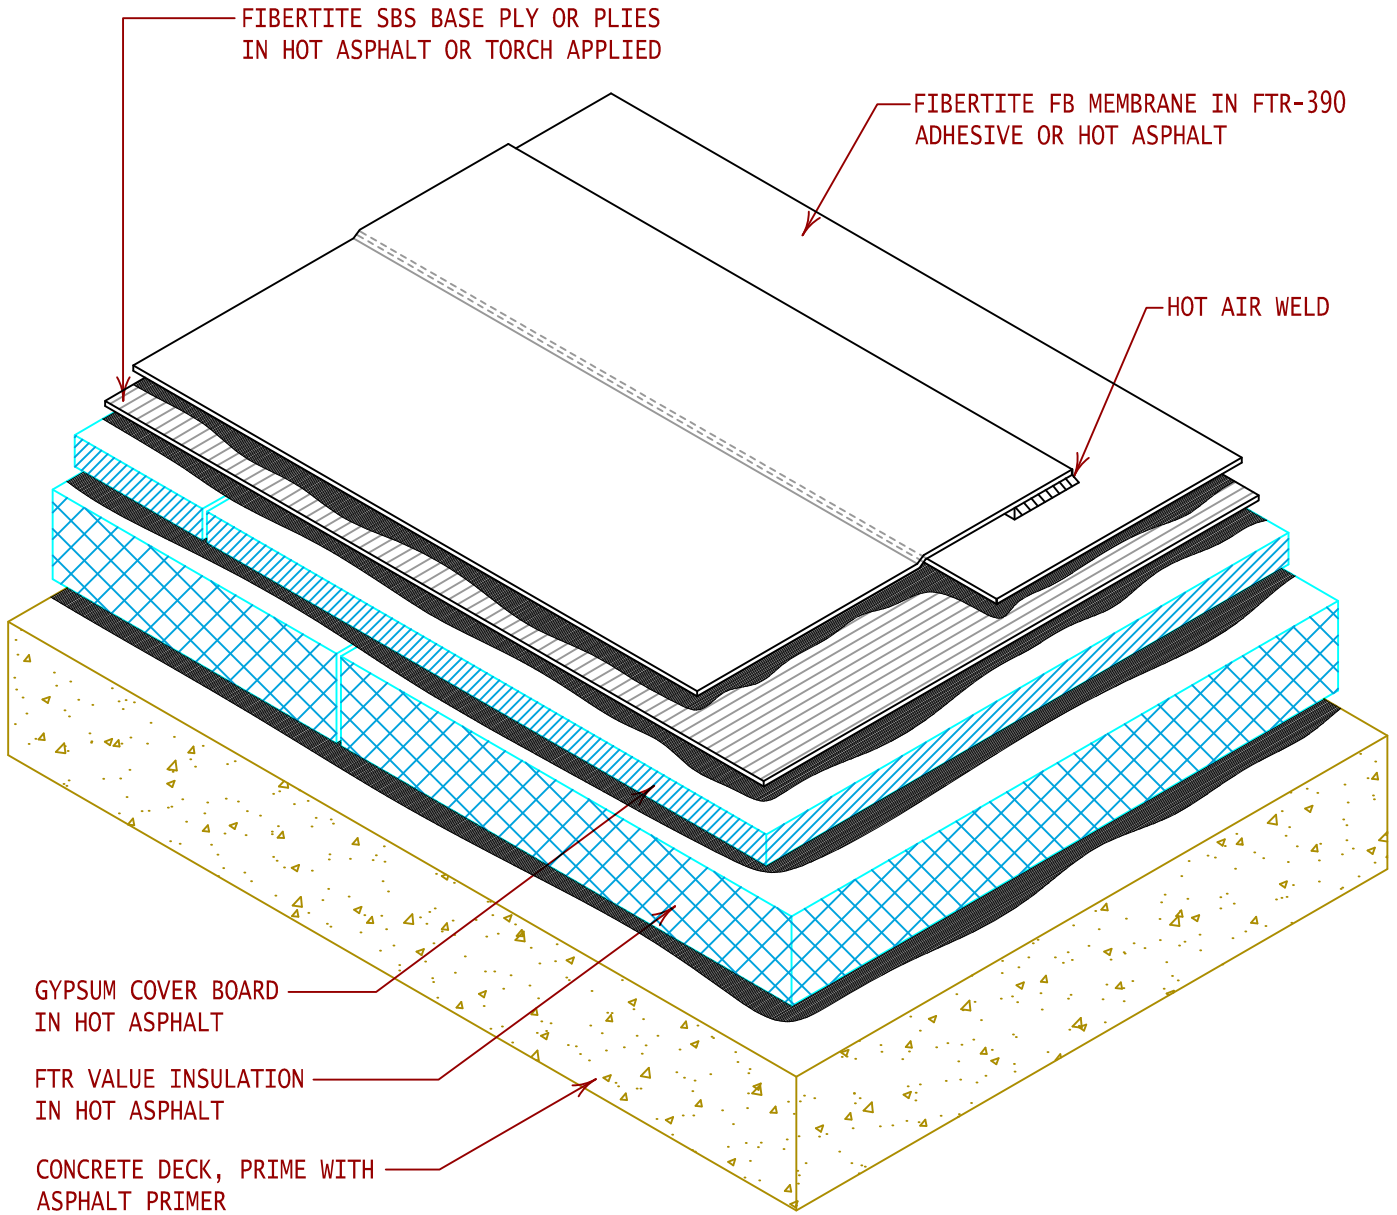

GENERAL REFERENCE:  
 "FTR GS 02/13"  
 APPLICABLE SYSTEMS:  
 "FTR MP 02/13"

MULTI-PLY ROOF SYSTEM CROSS SECTION  
 (ADHERED MEMBRANE & INSULATION IN ASPHALT)

| REVISES DETAIL | ISSUE DATE | DRAWING NUMBER |
|----------------|------------|----------------|
| ALL PREVIOUS   | 08-13-13   | FTR-DAS4MP     |