





1) Remove 4 Torx Screws and Cover plate with tool provided.

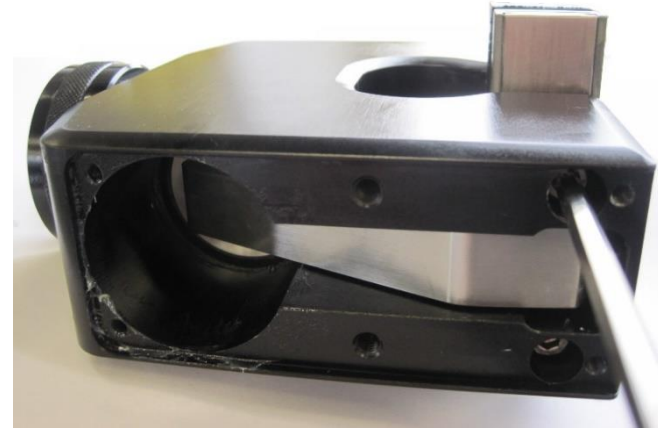

2) Remove 2 M6 Cap head screws with Allen Key Screwdriver.



3) Repeat process on the other side.

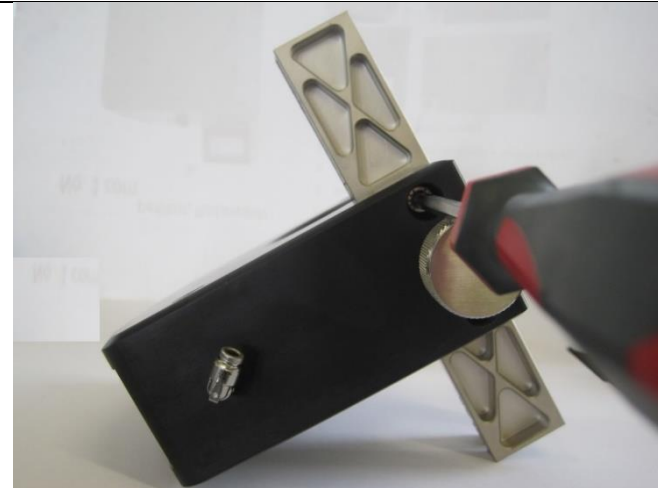

4) Once Jaws have been disassembled, assemble Wide Jaws and replace cover plate. This is done using the reverse of the procedure shown.