



QUICKSET TIMBER WEATHER BOARD PERIMETER DETAIL
WITH 25mm UNDERSLAB INSULATION

DETAIL 31

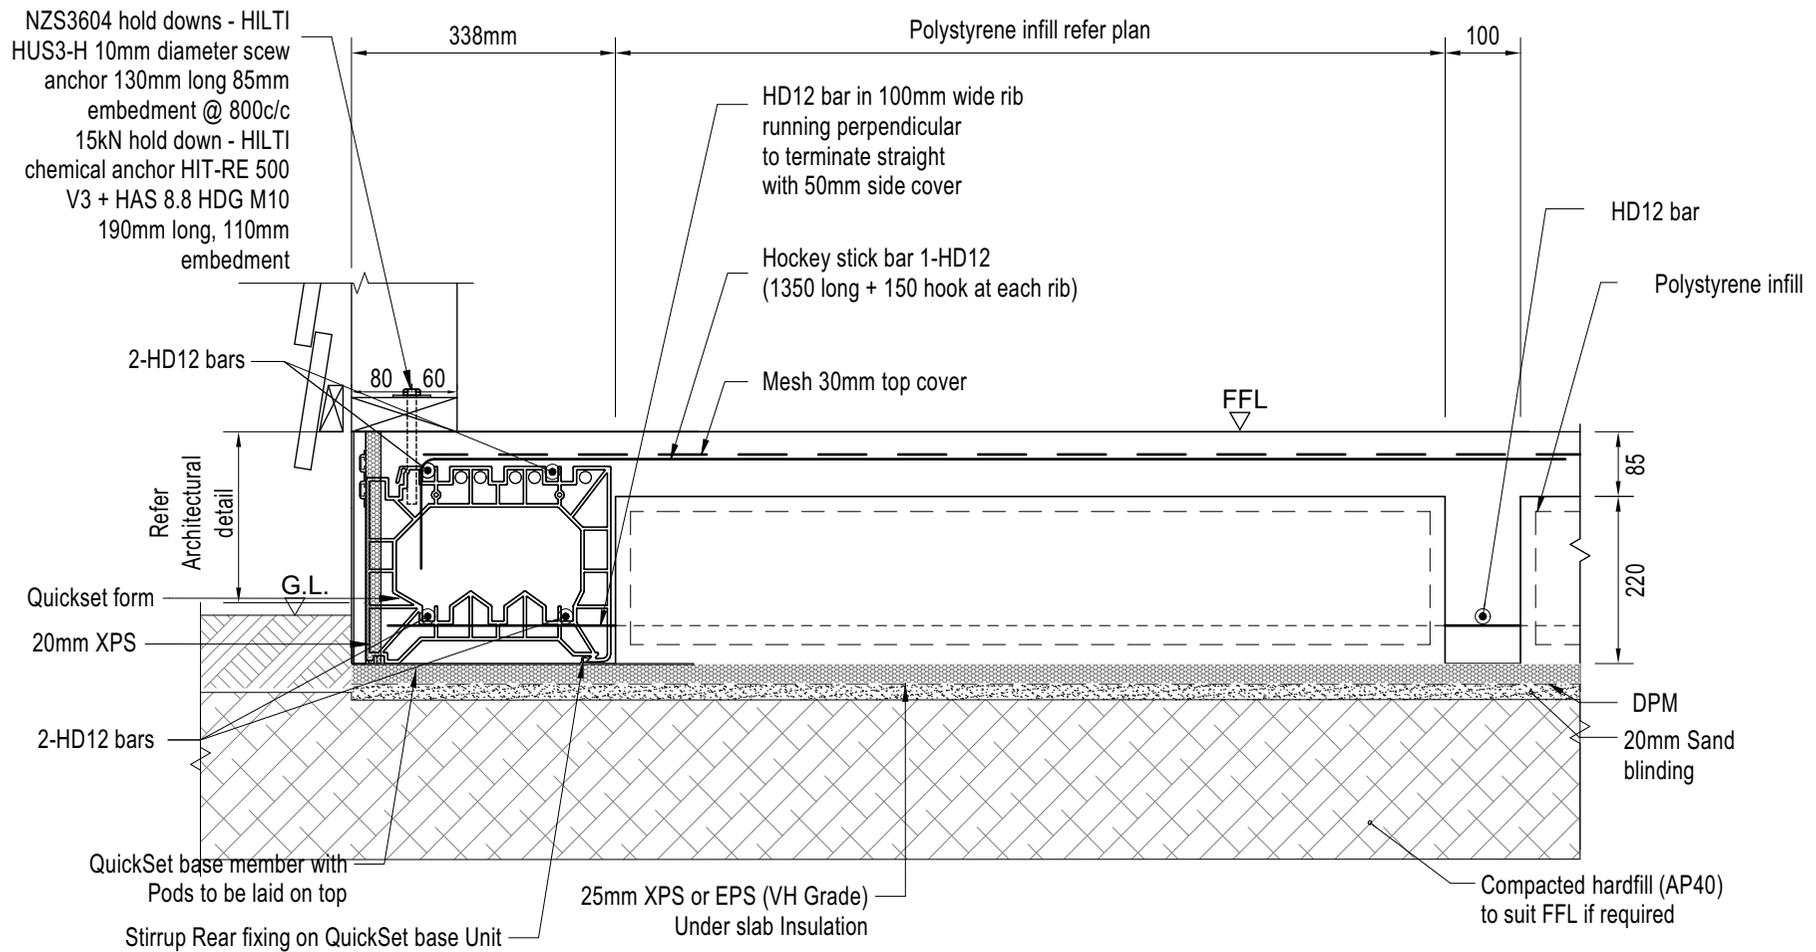


QUICKSET TIMBER WEATHER BOARD PERIMETER DETAIL
WITH 25mm UNDERSLAB INSULATION

DETAIL 32

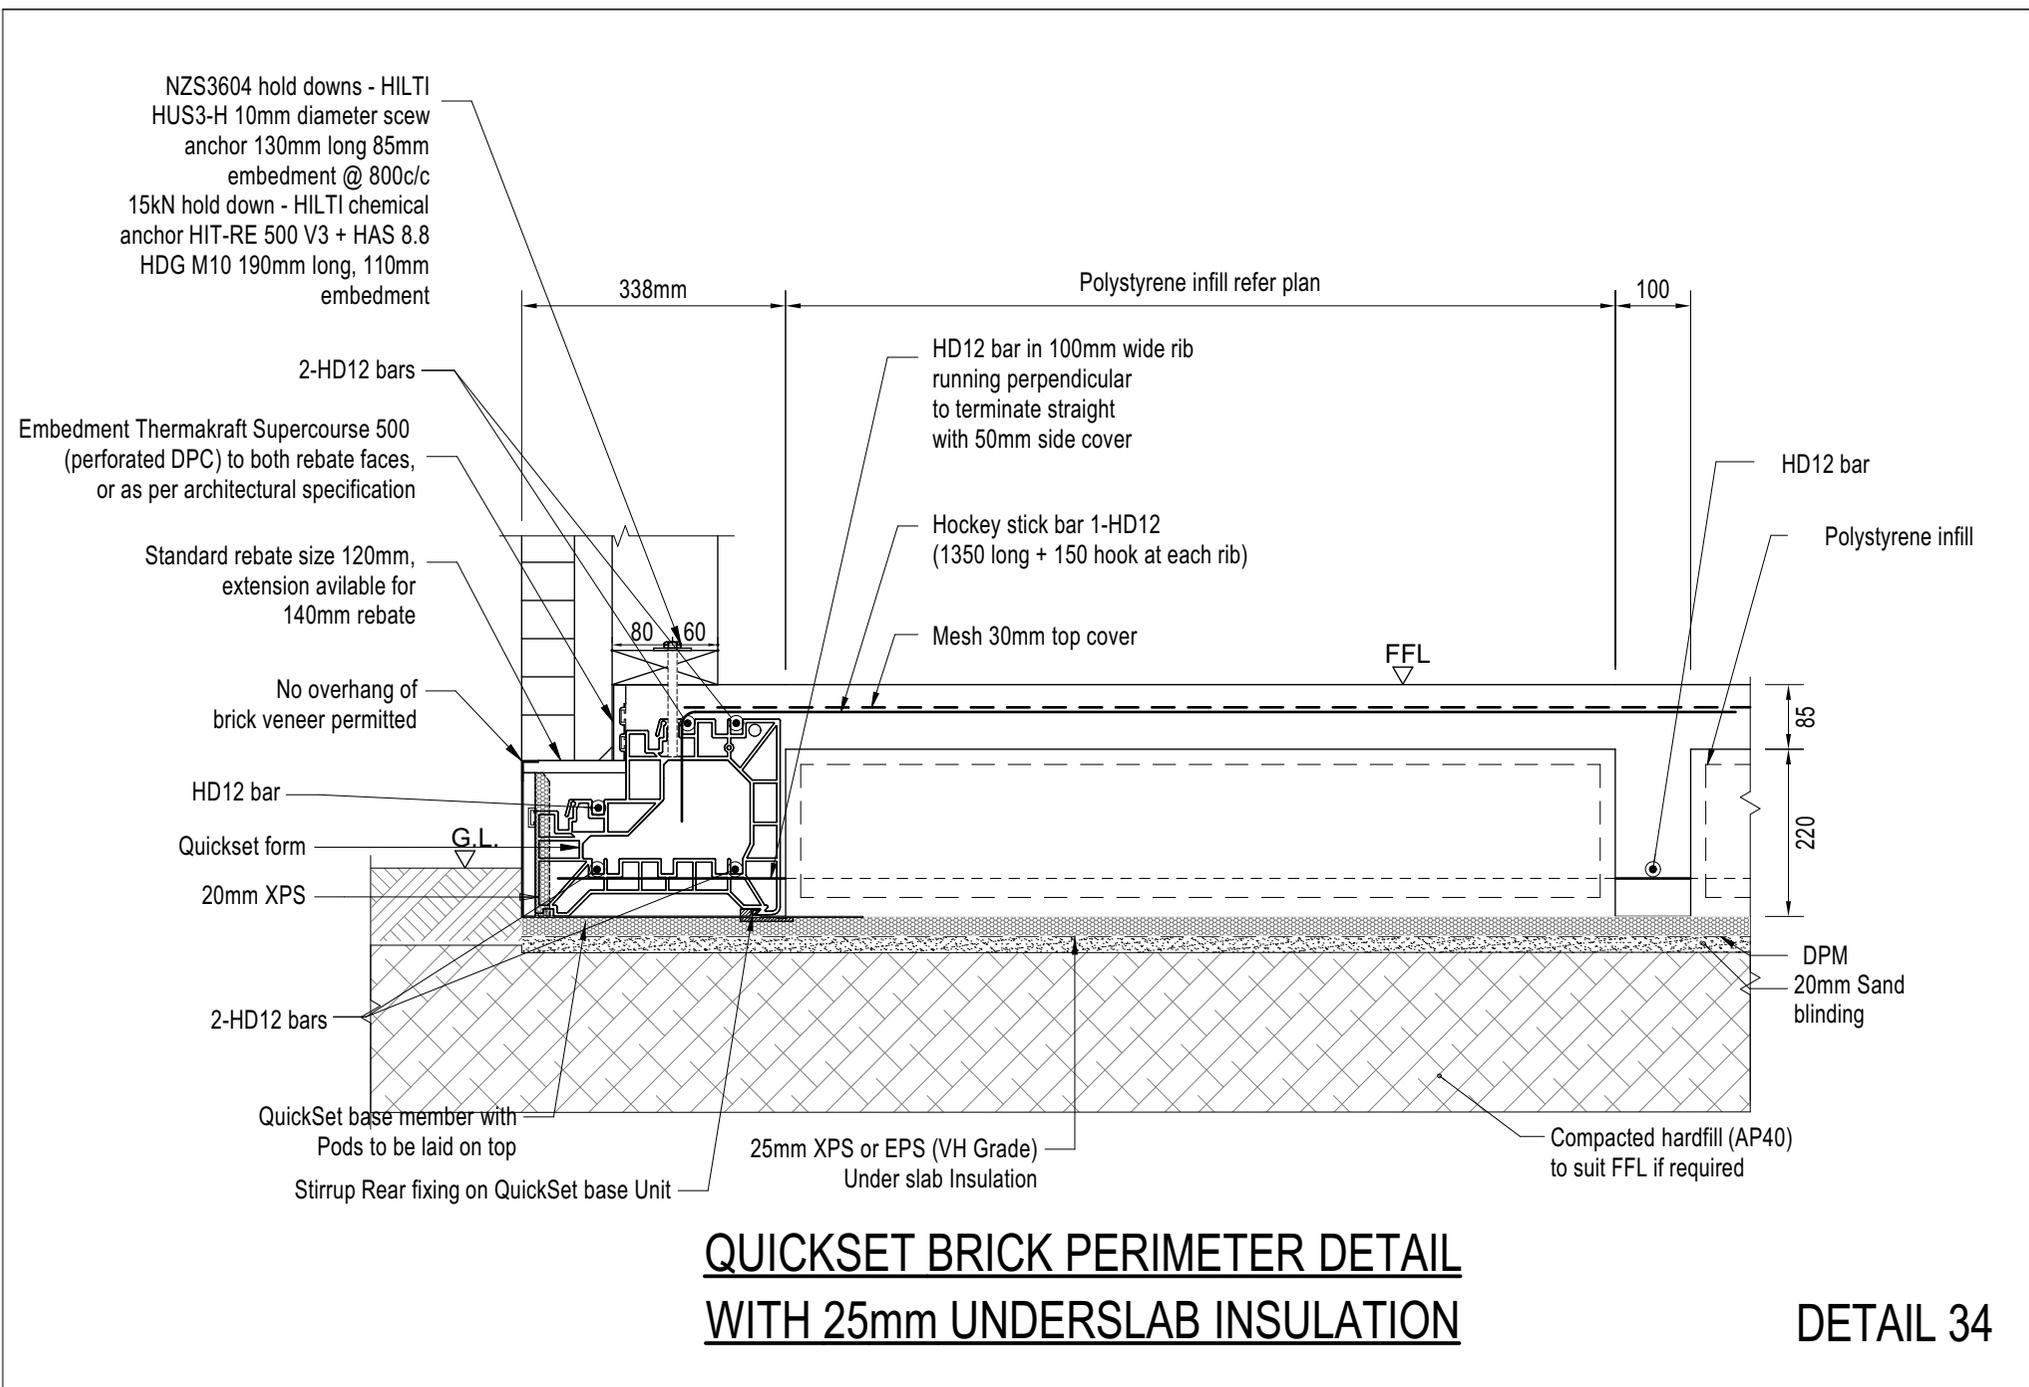


NZS3604 hold downs - HILTI
 HUS3-H 10mm diameter scrow
 anchor 130mm long 85mm
 embedment @ 800c/c
 15kN hold down - HILTI
 chemical anchor HIT-RE 500
 V3 + HAS 8.8 HDG M10
 190mm long, 110mm
 embedment

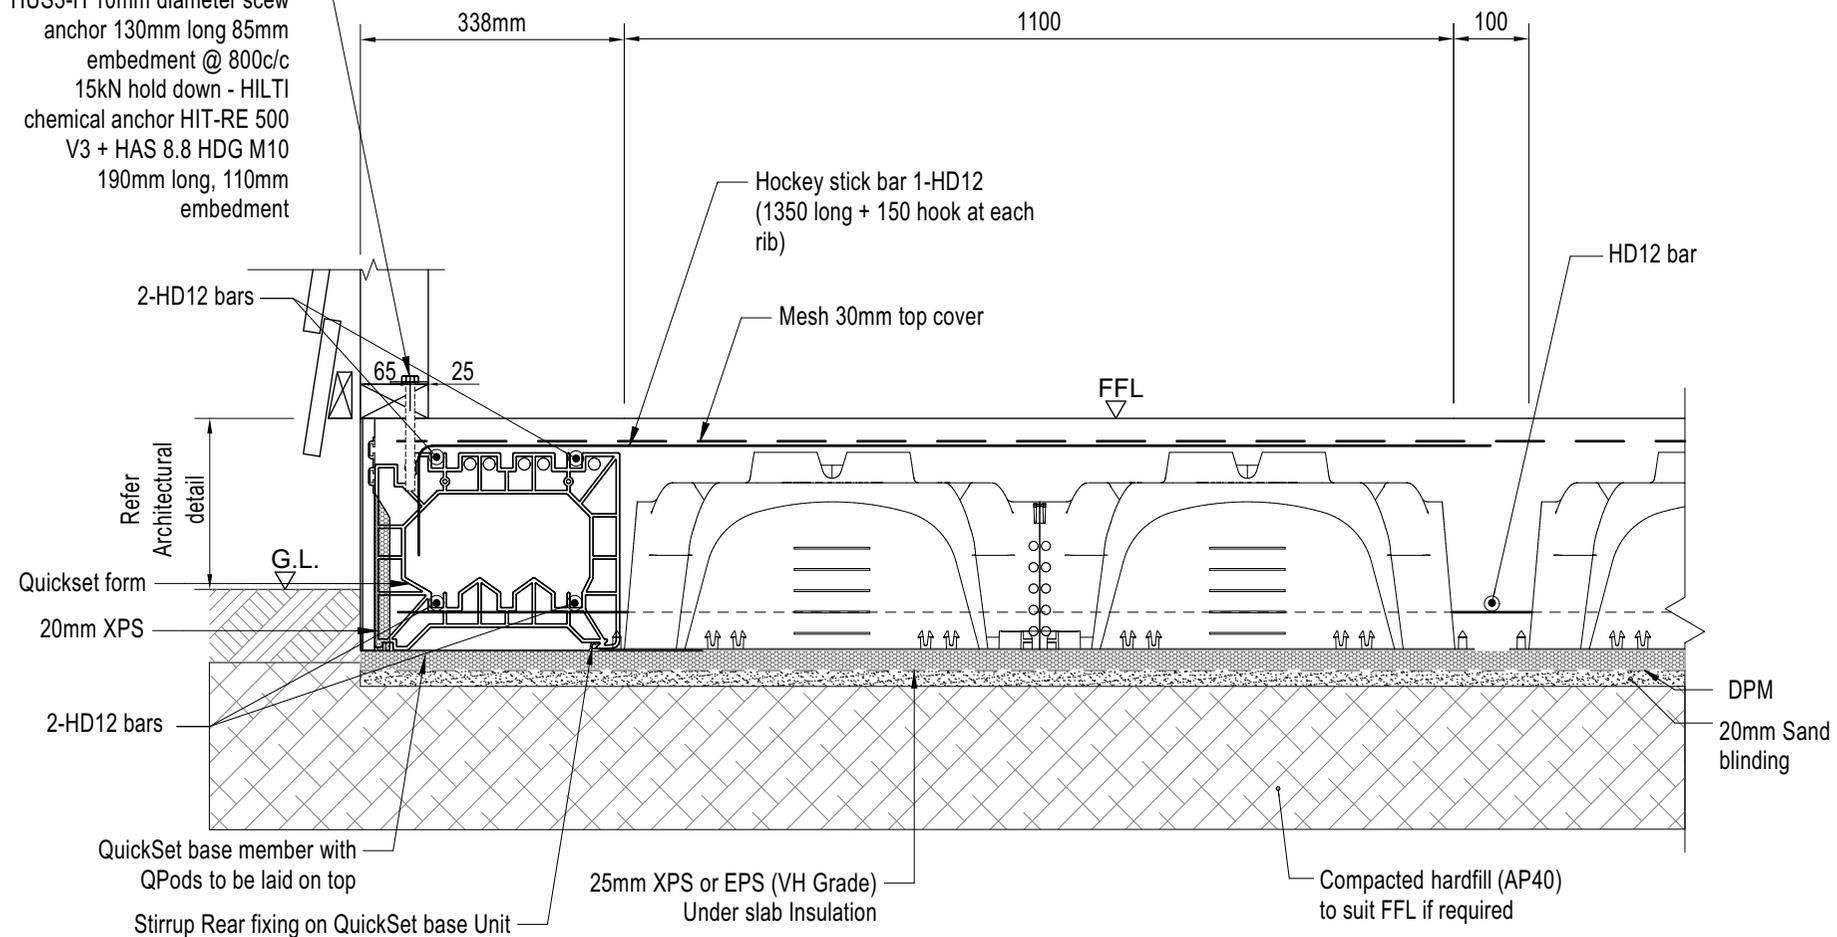

QUICKSET TIMBER WEATHER BOARD QPod PERIMETER DETAIL
WITH 25mm UNDERSLAB INSULATION


DETAIL 35

NZS3604 hold downs - HILTI
 HUS3-H 10mm diameter scw
 anchor 130mm long 85mm
 embedment @ 800c/c
 15kN hold down - HILTI
 chemical anchor HIT-RE 500
 V3 + HAS 8.8 HDG M10
 190mm long, 110mm
 embedment

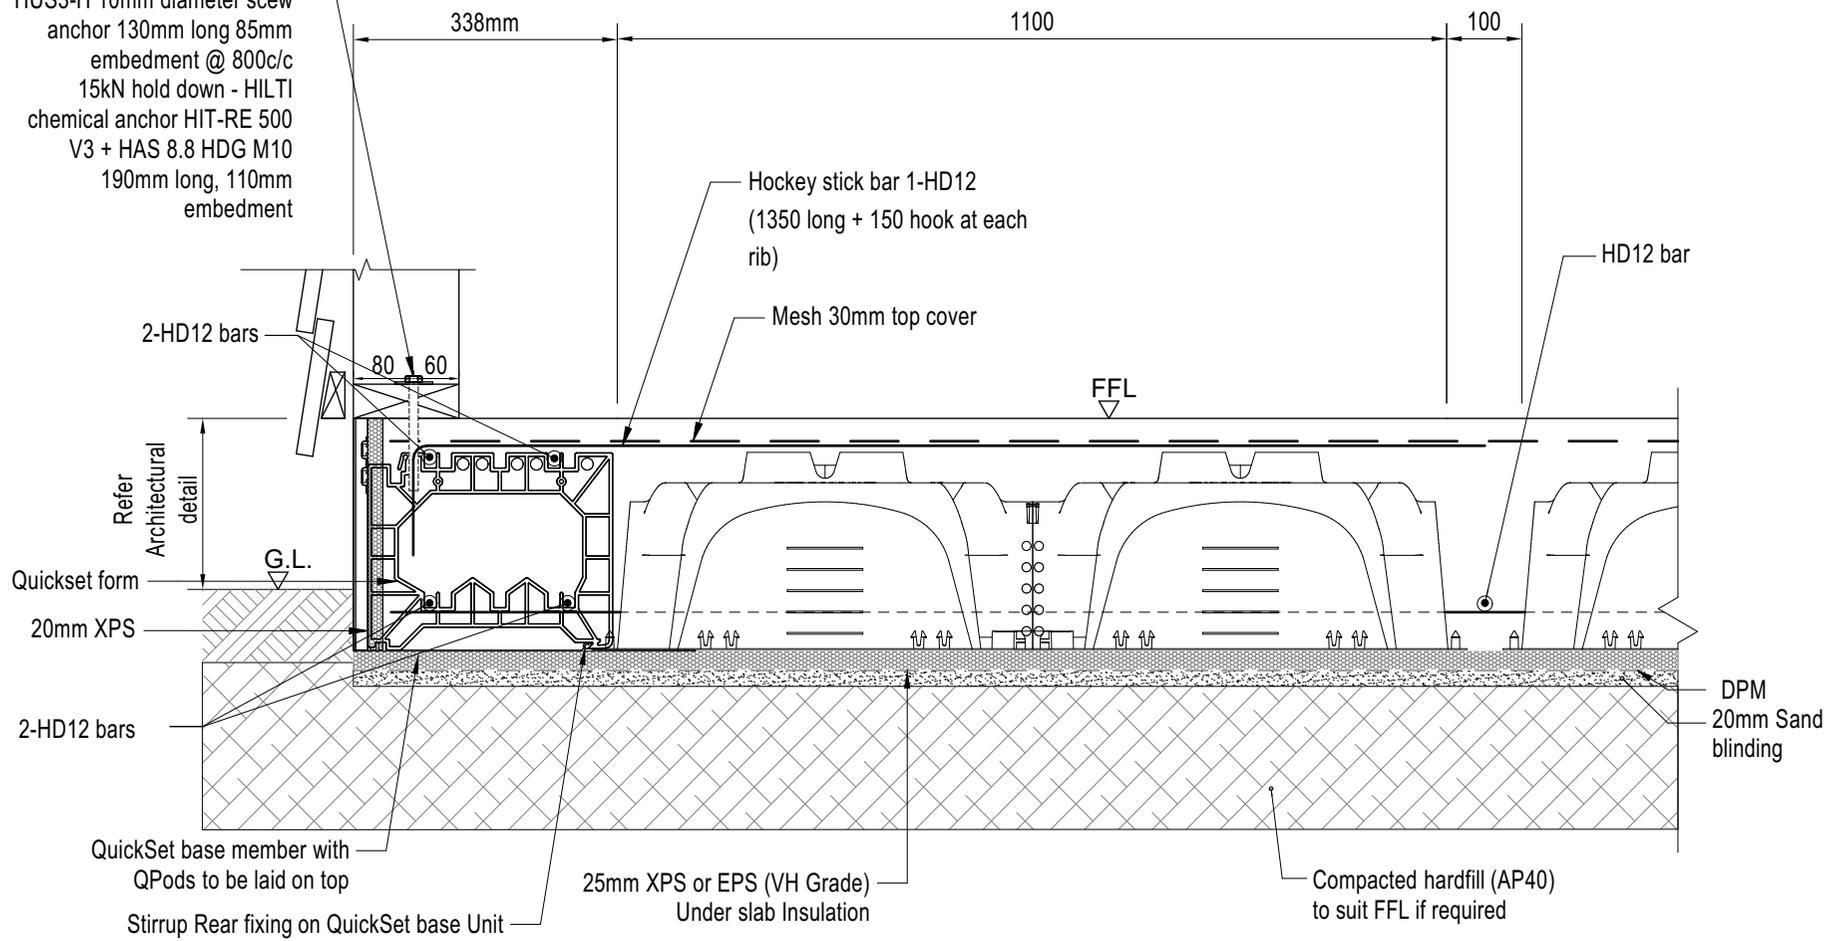


QUICKSET TIMBER WEATHER BOARD QPod PERIMETER DETAIL
WITH 25mm UNDERSLAB INSULATION

DETAIL 36

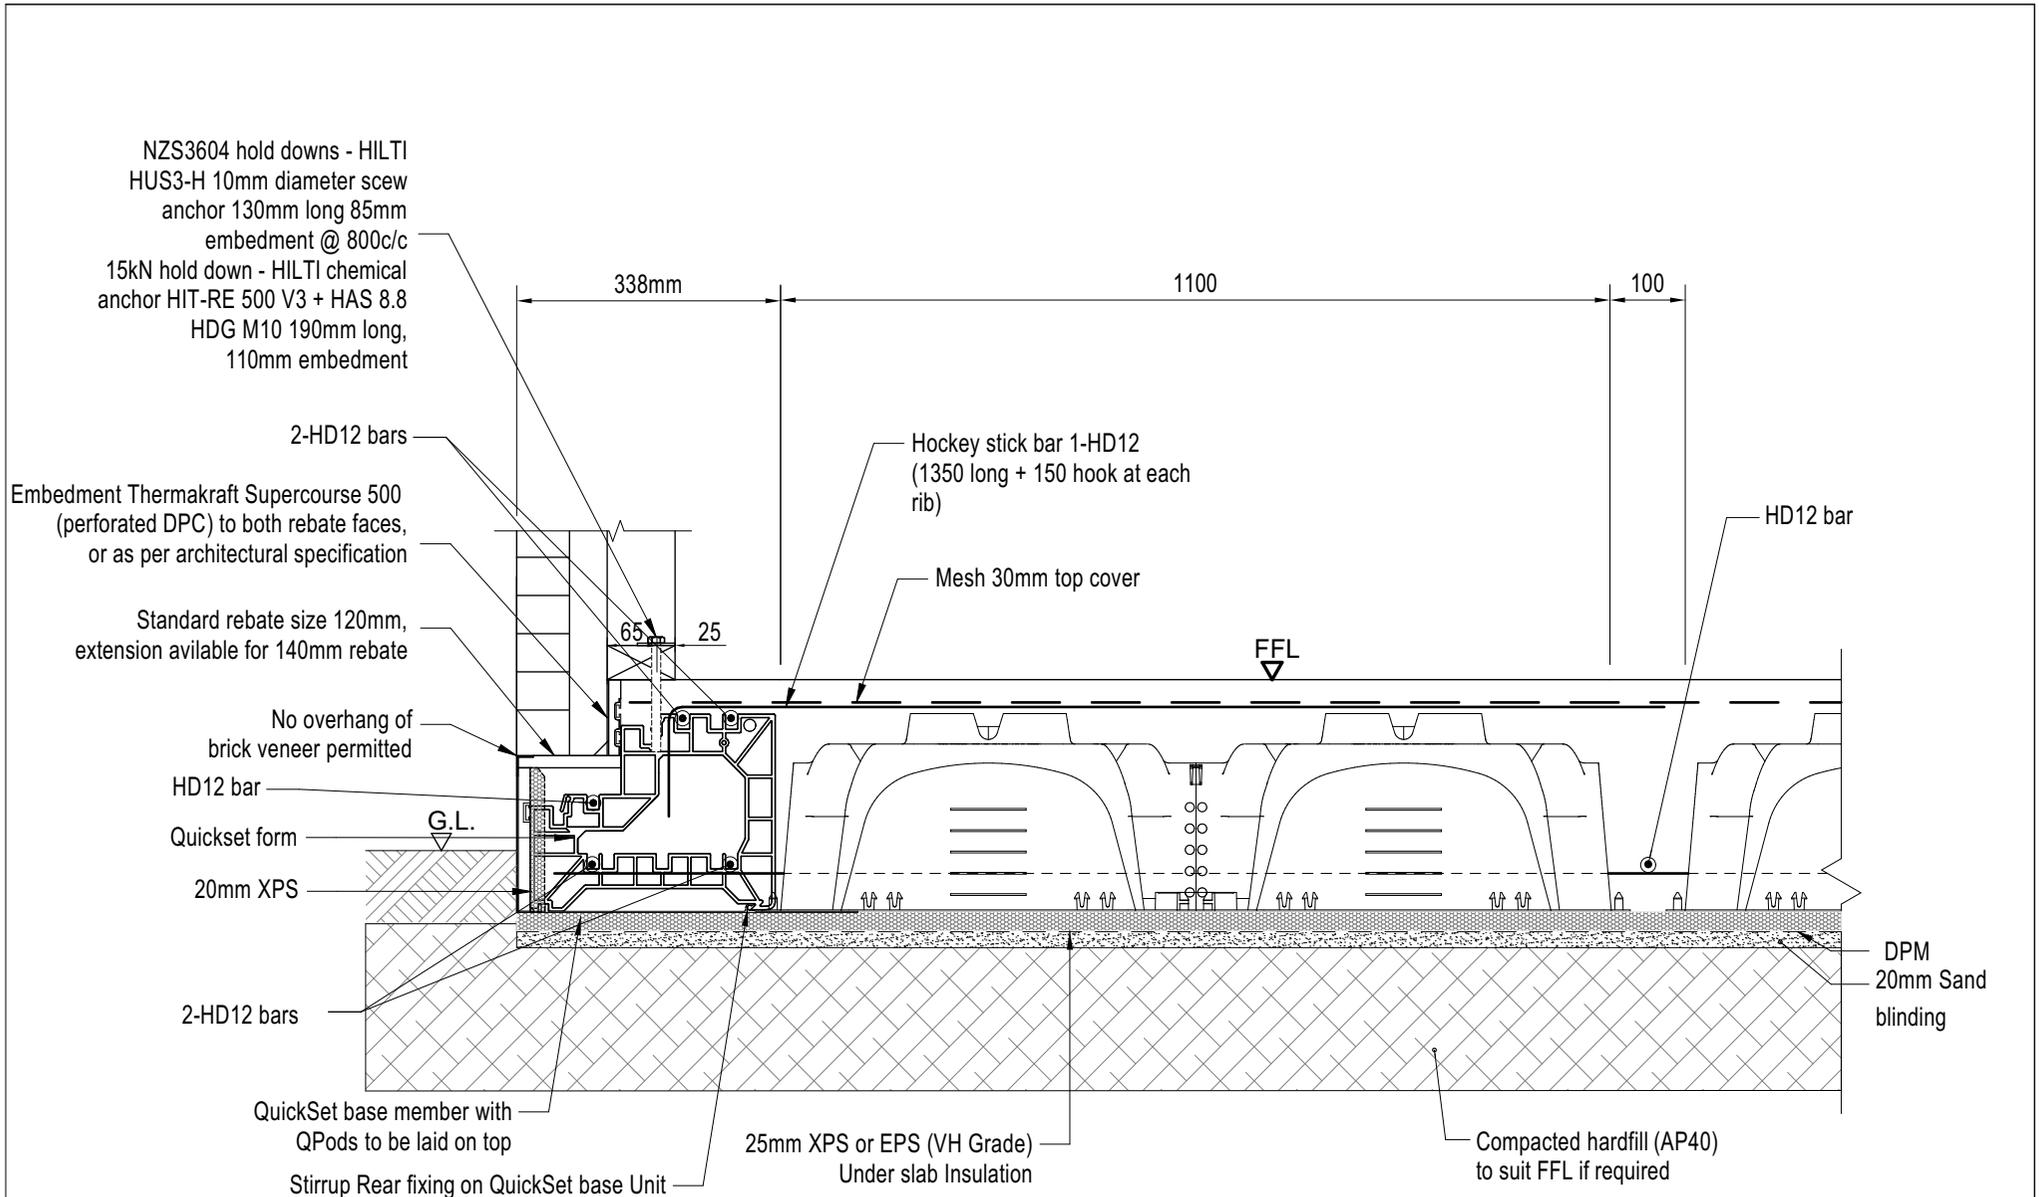

QUICKSET BRICK QPod PERIMETER DETAIL
WITH 25mm UNDERSLAB INSULATION

DETAIL 37

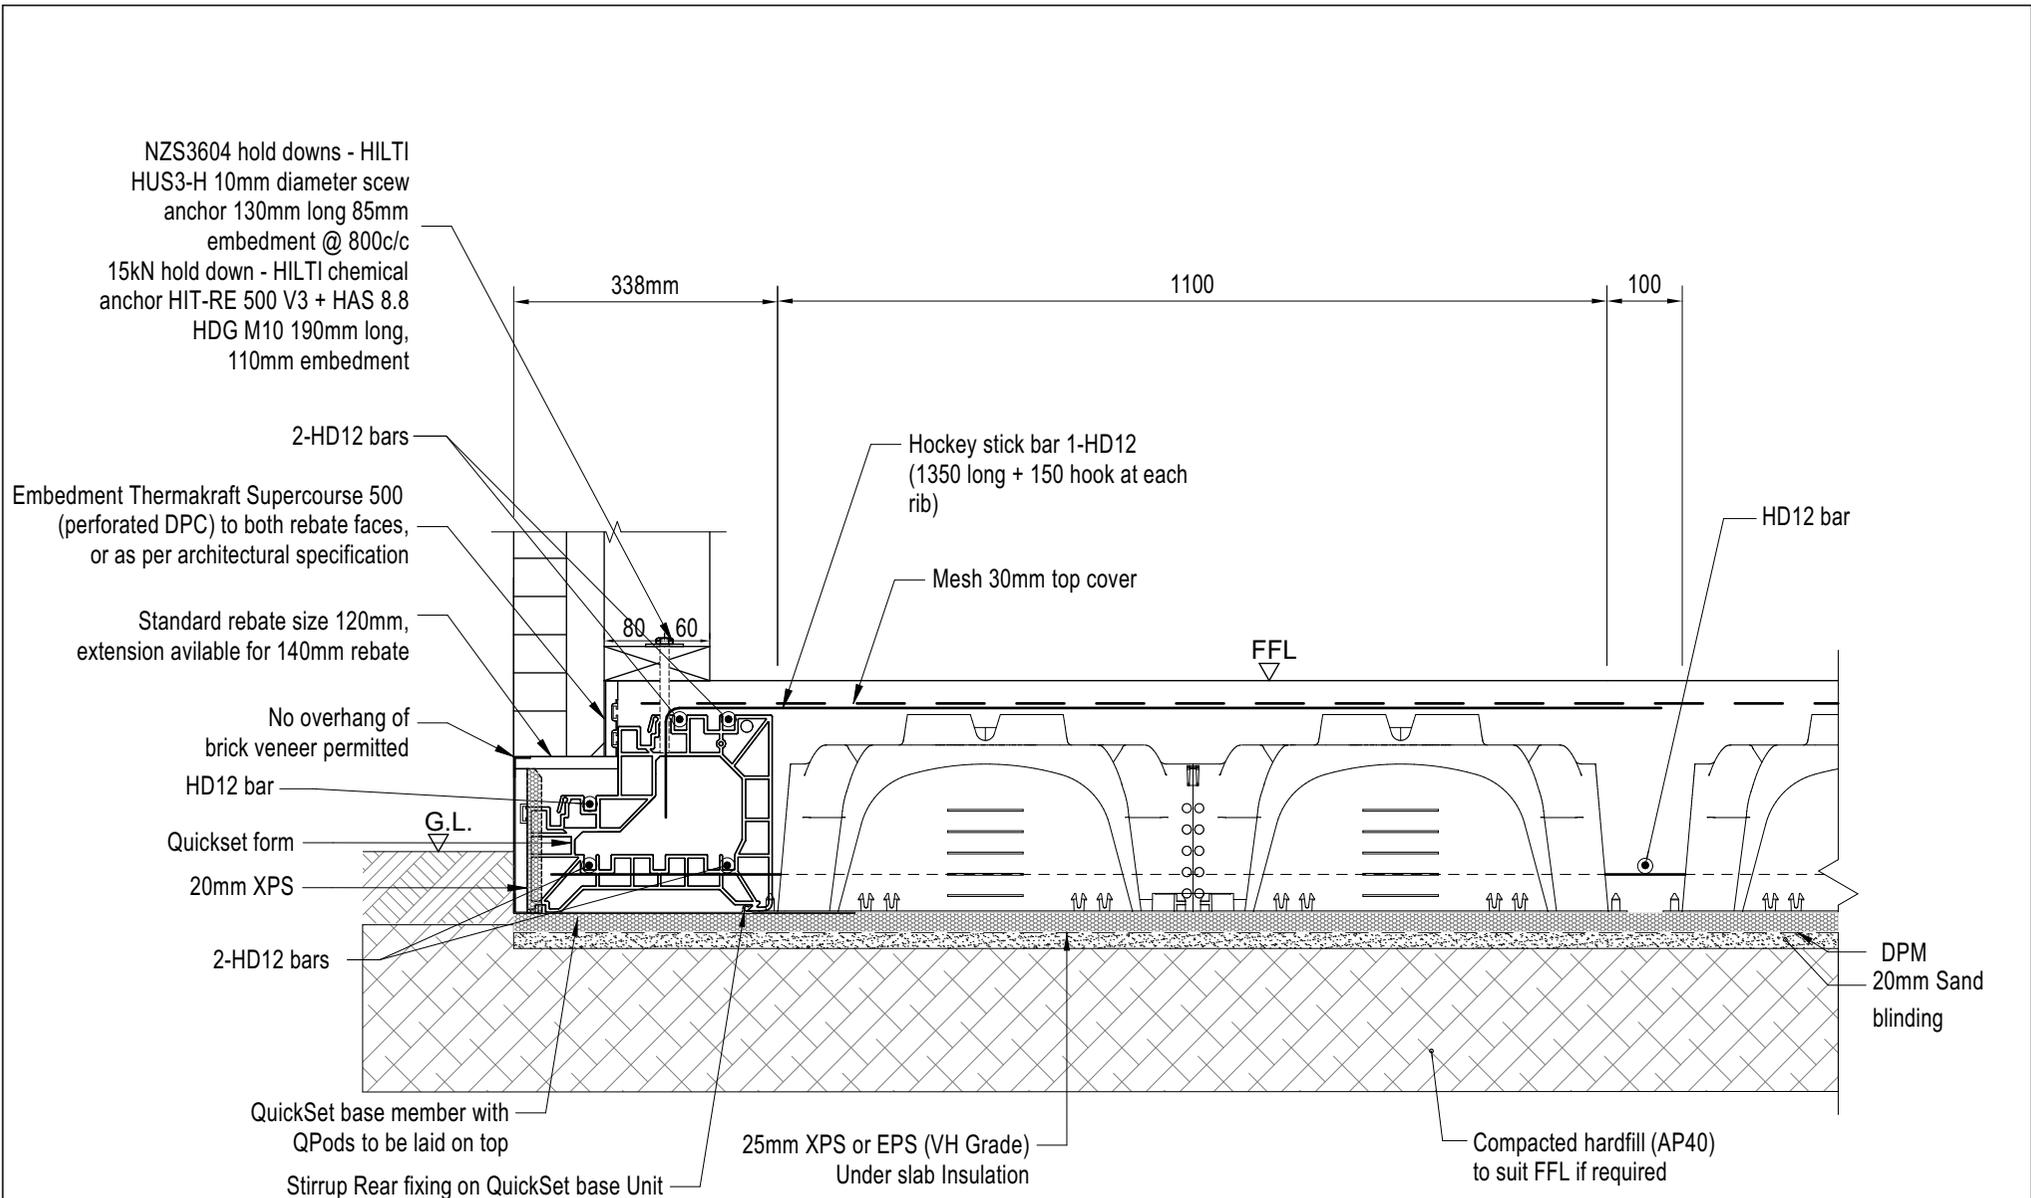

QUICKSET BRICK QPod PERIMETER DETAIL
WITH 25mm UNDERSLAB INSULATION

DETAIL 38